

P.O. Box 1527, Greenville, NC 27835-1527
Greenville Blvd. NE, Greenville, NC 27834
919/752-2111 FAX: 919/752-4217

Welcome Aboard!

Congratulations! Welcome to the Grady-White "family" of proud and friendly boat owners.

The Grady-White you have purchased is the strongest, safest, and highest quality boat you can buy. It was built by dedicated craftsmen in the most modern boat-building facility in the United States. All of us at Grady-White Boats wish you many happy, carefree hours of boating in your Grady-White.

Your Grady-White boat meets or exceeds every safety standard of the U.S. Coast Guard and the National Marine Manufacturers Association's NMMA Certification Program. Your Grady-White's safety and seaworthiness, however, depends on your operation, maintenance and care of your boat. That's why we have put a great deal of time and thought into this owner's manual. It includes the precautions, facts and tips that will help make your boating safe and enjoyable. Please study this manual thoroughly!

My thanks to you for choosing Grady-White. All of us here at the factory are dedicated toward meriting your confidence in Grady-White Boats. Happy boating and welcome aboard.

Sincerely yours,



Wiley B. Corbett
President

SPECIFICATIONS

DEALER: _____

OWNERS NAME: _____

OWNERS ADDRESS: _____

MODEL: _____ BOAT SERIAL #: _____

STEERING: _____ ENGINE OPTION: _____

STEERING CABLE LENGTH: _____ ENGINE SERIAL #: _____

CONTROL CABLE LENGTHS: _____ DRIVE SERIAL #: _____

** APPROX. DRY WEIGHT
W/O ACCESSORIES): _____ TRANSOM PLATE SERIAL #: _____

FACTORY INSTALLED PROP (ALUM): _____

** OUTBOARD WEIGHTS DO NOT INCLUDE ENGINE

MODEL	CENTER- LINE LENGTH	BEAM AMID- SHIP	AVAIL. TRANSOM HEIGHTS (S-SGL) (T-TWIN)	TRANSOM WIDTH	HULL DRAFT	O/B MAX H.P.	MAIN FUEL CAP. (GAL)	AUX FUEL CAP. (GAL)	FRESH WATER CAP. (GAL)	APPROX HEIGHT KEEL TO TOP OF W/S
175	17'5"	89"	20"S	88"	12"	140	48			69"
190	18'11"	96"	20"S	92"	14"	200	60			72.0"
209	20'4"	96"	25"S	94"	14"	230	82		10	85.88"
208	20'4"	96"	25"S	94"	14"	230	82		10	84.5"
225G	22'2"	96"	25"S	94"	15"	230	91		10	78"
226	22'2"	96"	25"S	94"	15"	280	91	56	10	89.13"
227	22'2"	96"		94"	15"		91		10	89.13"
228G	22'2"	96"	25"S	94"	15"	280	91	56	10	89.13"
230	23'5"	111"	25S/25T	106"	17"	350	91	56	10	96.25"
231	23'5"	111"		106"	17"		90	56	10	96.25"
232G	23'5"	111"	25S/25T	106"	17"	350	91	56	10	96.25"
244	24'1"	96"	25"S	94"	15"	300	91	56	10	91"
245	24'1"	96"		94"	15"		91		10	91"
246G	24'1"	96"	25"S	94"	15"	300	91	56	10	91"
246GT	24'1"	96"	25"T	94"	15"	300	107	56	10	91"
250	25'4"	108"	25"T	108"	18"	400	150	90	10	102"
251	25'4"	108"		108"	18"	400	150	90	10	102"
252G	25'4"	114"	25"T	108"	18"	400	150	52	32	107.5"
253GT	25'4"	114"	25"T	108"	18"	400	150	90	10	102"
254	25'4"	114"		108"	18"		150		32	107.5"
255	25'4"	114"	25"T	108"	18"	400	150	52	32	107.5"
280	28'0"	127"	25"T	114"	19"	500	156	150	41	117"

* WITH HARDTOP ADD 21"

TABLE OF CONTENTS

WELCOME ABOARD
DATA SPECIFICATION SHEET

SECTION A: SAFETY

REQUIRED SAFETY EQUIPMENT.....	PAGE 5
ADDITIONAL RECOMMENDED EQUIPMENT.....	PAGE 6
BOATING SAFETY TIPS.....	PAGE 7
LOADING CAPACITY.....	PAGE 9

SECTION B: INSTRUMENTS AND SWITCHES

GAUGES AND SWITCHES.....	PAGE 10
Tachometer gauge.....	PAGE 10
Engine water temperature gauge.....	PAGE 10
Water temperature, oil level, and fuel system warning buzzer....	PAGE 11
Voltmeter.....	PAGE 11
Trim gauge.....	PAGE 11
Fuel gauge.....	PAGE 11
Oil gauge.....	PAGE 11
Ignition switch.....	PAGE 11
Trim/tilt switch.....	PAGE 12
Trim tab switch.....	PAGE 12
SWITCH PANEL.....	PAGE 13
Bilge pump.....	PAGE 13
Blower.....	PAGE 13
Horn.....	PAGE 13
Cockpit lights.....	PAGE 13
Navigational/anchor lights.....	PAGE 13
Fuel gauge.....	PAGE 14
Aerator.....	PAGE 14
Water pressure.....	PAGE 14
Windshield wiper(s).....	PAGE 14
Accessory.....	PAGE 14
Battery select.....	PAGE 14
AUXILIARY FUSE PANEL.....	PAGE 15

SECTION C: MECHANICAL CONTROLS

MECHANICAL STEERING.....	PAGE 16
HYDRAULIC STEERING.....	PAGE 16
THROTTLE/SHIFT CONTROL.....	PAGE 16
TRIM TABS.....	PAGE 17
TRIM TAB PUMP LOCATIONS.....	PAGE 19
TROUBLE SHOOTING.....	PAGE 20

TABLE OF CONTENTS - Continued...

SECTION D: BOAT OPERATION

FUELING.....	PAGE 21
FUEL MAINTENANCE TIPS.....	PAGE 22
PROPELLER.....	PAGE 23
TRAILERING.....	PAGE 24
PRE-LAUNCH CHECK LIST.....	PAGE 25
STARTING.....	PAGE 25
PERFORMANCE.....	PAGE 26
ANCHORING.....	PAGE 27
DOCKING.....	PAGE 28

SECTION E: MAINTENANCE AND SERVICE

FIBERGLASS FINISH.....	PAGE 29
GELCOAT REPAIR.....	PAGE 30
INTERIOR MAINTENANCE.....	PAGE 31
CANVAS.....	PAGE 31
TEAK.....	PAGE 32
DURATRIM.....	PAGE 33
HARDWARE.....	PAGE 33
HARDWARE MOUNTING.....	PAGE 33
BATTERY.....	PAGE 34
SCUPPERS.....	PAGE 35
RIGGING COMPARTMENTS.....	PAGE 35
ENGINE.....	PAGE 35
GRADY DRIVES.....	PAGE 36
STEERING.....	PAGE 36
STORAGE.....	PAGE 37

SECTION F: ELECTRICAL SYSTEMS

ACCESSORY WIRING COLOR CODE AND FUSE SIZES.....	PAGE 39
TYPICAL OUTBOARD INSTRUMENT/SWITCH PANEL WIRING DIAGRAM...	PAGE 41
TYPICAL STERN DRIVE INSTRUMENT AND SWITCH PANEL WIRING DIAGRAM.....	PAGE 42
175 SPIRIT ACCESSORY WIRING DIAGRAM.....	PAGE 43
ACCESSORY WIRING DIAGRAM: 190 TOURNAMENT.....	PAGE 44
ACCESSORY WIRING DIAGRAM: 208 ADVENTURE.....	PAGE 45
ACCESSORY WIRING DIAGRAM: 209 ESCAPE.....	PAGE 46
ACCESSORY WIRING DIAGRAM: 22' TOURNAMENT.....	PAGE 47
ACCESSORY WIRING DIAGRAM: 23' GULFSTREAM SERIES.....	PAGE 48
ACCESSORY WIRING DIAGRAM: 22' SEAFARER AND 24' EXPLORER SERIES.....	PAGE 49
ACCESSORY WIRING DIAGRAM: 25' SAILFISH SERIES.....	PAGE 50
ACCESSORY WIRING DIAGRAM: 25' DOLPHIN SERIES.....	PAGE 51
HARDTOP WIRING DIAGRAM: 20'/22'/23'/24' SERIES.....	PAGE 52
HARDTOP WIRING DIAGRAM: 25' SAILFISH SERIES.....	PAGE 53
DOCKSIDE POWER WIRING DIAGRAM: 25' SAILFISH SERIES.....	PAGE 54
DOCKSIDE POWER WIRING DIAGRAM: 25' DOLPHIN SERIES.....	PAGE 55
AC WIRING SCHEMATIC AND WARNING LABEL.....	PAGE 56

TABLE OF CONTENTS - Continued...

SECTION G: WATER SYSTEMS

HEAD OPERATING INSTRUCTIONS FOR 25' SAILFISH SERIES.....	PAGE 57
IN-LINE MACERATOR INSTRUCTIONS.....	PAGE 58
HEAD DISCHARGE BUTTON.....	PAGE 58
FRESH WATER SYSTEM FOR 209 ESCAPE.....	PAGE 59
FRESH WATER SYSTEM FOR 208 ADVENTURE AND 22' TOURNAMENT...	PAGE 60
FRESH WATER SYSTEM FOR 22' SERIES.....	PAGE 61
FRESH WATER SYSTEM FOR 23' SERIES.....	PAGE 62
FRESH WATER SYSTEM FOR 24' SERIES.....	PAGE 63
SHOWER AND HOT WATER SYSTEM (PRESSURIZED) FOR 25' SAILFISH SERIES.....	PAGE 64
FRESH WATER SYSTEM FOR 25' DOLPHIN SERIES.....	PAGE 65
WASHDOWN/LIVEWELL SYSTEM.....	PAGE 66
ENGINE ACCESS LIVEWELL.....	PAGE 67

SECTION H: GENERAL CONSTRUCTION

TYPICAL GAS TANK DRAINAGE.....	PAGE 68
HULL/DECK/LINER LAYOUT.....	PAGE 69
COMMONLY USED NAUTICAL TERMS.....	PAGE 70

WARRANTY

SECTION A: BOATING SAFETY

REQUIRED SAFETY EQUIPMENT

The U.S. Coast Guard requires that every boat has specific equipment on board, which varies according to the size of the boat. There are also local agencies which require additional equipment, so find out if your local regulations require more equipment than the list of Coast Guard requirements below.

As your Grady-White is between 16 and 26 feet, it is classified as a Class 1 boat and requires the following safety equipment:

1. FIRE EXTINGUISHER

Your fire extinguisher should be easily accessible, and each passenger should be aware of its location.

2. PERSONAL FLOTATION

Each passenger (and skier) must have a U.S. Coast Guard approved personal flotation device. They should be stored where they can be reached easily and quickly. Small children and non-swimmers should wear these flotation devices at all times. Each Class 1 boat is also required to carry an approved Type 4 throwable flotation device, such as a ring buoy or boat cushion.

3. HORN

All Class 1 boats are required to carry a hand, lung, or power-operated horn that is audible for at least one mile.

4. VISUAL DISTRESS SIGNALS

Coast Guard-approved visual distress signals are now required when operating in U. S. waters and on the high seas. The Coast Guard pamphlet "Visual Distress Signals for Recreational Boats" lists the equipment necessary.

5. REGISTRATION NUMBERS

Federal and state laws require that a power boat be registered in the state where it is principally used. Both registration numbers and validation stickers must be displayed according to the regulations, and the registration certificate must be carried on board. The boat's serial number, required on the registration form, is found on the upper right hand corner of the transom.

6. LIGHTING

All Grady-White boats are equipped with navigational lights that meet the latest requirements for inland and international waters. If there is any doubt, or if requirements change, consult your dealer.

For more information on Coast Guard required safety equipment refer to the U. S. Coast Guard publication CG-290.

ADDITIONAL RECOMMENDED EQUIPMENT

In addition to required safety equipment, we also recommend the following:

Anchor and anchor line	Hand operated bilge pump
Sea anchor	Extra keys
Boat hook	Marine electronics
Fenders (2)	Extra drain plug
Mooring lines (2)	Oar or paddle
Spotlight or flashlight	Insect repellent
Spare fuses	Drinking water
First aid kit	Sun screen
Compass and navigational charts	Bucket and sponge

Tool kit including: adjustable wrench, slip-joint pliers, spark plug wrench and spark plugs, screwdrivers (slotted & Phillips), box end wrench set, hammer, roll of flexible wire, electricians tape, knife, spare propeller & prop nut, and spare hydraulic fluid.

BOATING SAFETY TIPS

The following tips will add to your boating safety and convenience:

1. Advise someone on shore or the local Coast Guard as to the name of your launch site, your expected direction, and expected return.
2. Watch the weather. You should not attempt to go out when there are storm or small craft warnings. If you are caught in a storm, reduce speed, head into the wind/waves, and keep all gear and passengers close to the center line of the boat for stability. Head for the nearest shelter.
3. Instruct at least one passenger on the fundamentals of operating your boat in case of any emergency.
4. Report any boating accident to the local authorities, whether you are involved or not.

IN CASE OF ACCIDENT

 If you are involved in a boating accident on the navigable waters of the United States, you are required by law to stop and render assistance. You are also required to identify yourself and your boat to the injured person or owner of the damaged property. If there is more than \$100 in property damage, an accident report must be filed with proper authorities within five days of the accident. If the accident results in death, disappearance, or injury requiring medical attention, an accident report must be filed within 48 hours. Report forms may be obtained through Coast Guard installations, most harbor patrol offices, and many sheriff and police stations.

5. If you develop trouble and do not have a radio, the regulation distress signal is continually raising and lowering your arms outstretched at your sides. Other signals include waving a shirt tied to a pole, repeatedly sounding your horn or flying your boat's ensign upside down and lighting flares.
6. Keep your boat speed under control. Respect for other boaters and those on shore is common courtesy. In addition, the operator is responsible for any injury or damage caused by the boat's wake. Your wake could swamp or damage a smaller craft and endanger its passengers. Stay alert to areas having signs posted "No Wake Zones".

7. Be prepared to give assistance to other boats in distress.
8. Become familiar with the handling characteristics, capabilities, and limitations of your boat.
9. Turn off engines before swimmers enter or exit the boat. A shift lever in neutral could become engaged accidentally, seriously injuring swimmers.
10. Consult with people familiar with the boating area when venturing into unknown waters. Obtain a chart for new areas whenever possible.
11. Since clean water and air are the responsibilities of everyone, carry a litter container on board and dispose of refuse properly. If your Grady-White is equipped with a marine head, become familiar with local laws regarding the discharge of waste.
12. Recommend boat shoes or tennis shoes to your passengers rather than street shoes or bare feet.

IMPORTANT!!

The fumes from the engine(s) contain carbon monoxide, which may be a health hazard and can be fatal if breathed over a prolonged period of time. Carbon monoxide is a gas formed by the combination of one molecule of carbon and one molecule of oxygen. Chemists refer to it as CO, its chemical formula, "C" for carbon and "O" for oxygen. CO is a colorless, odorless, and tasteless gas. Its weight is about the same as air, so it cannot be expected to rise or fall like some other gases, but will distribute itself throughout space.

Carbon monoxide can accumulate in cabins and under canvas. If your boat is equipped with canvas that encloses the aft cockpit and the propulsion equipment, do not operate the boat with this canvas closed.


A boat operator should be aware that CO is emitted from any boat's exhaust. The operation, mooring, and anchoring in an area containing other boats may be in an atmosphere containing CO that is not of the operator's making. An operator, likewise, needs to be aware of the effect of his actions on other boats. Of prime concern is the operation of an auxiliary generator with boats moored along side each other. Be aware of the effect your exhaust may have on other vessels, and be aware that the operation of other vessel's equipment may affect the Carbon Monoxide concentration on your vessel.

LOADING CAPACITY

Close to the steering wheel, you will find a Metal Coast Guard Capacity Information tag indicating the maximum weight and person capacity of your boat. If you have an outboard or Grady Drive boat, the tag will also designate the maximum horsepower capacity. You and your passengers will be in jeopardy and your warranty void if any of these requirements are exceeded.

Though overloading is a primary cause of many boating accidents, improper loading is equally as hazardous. Boaters should not only pay attention to the amount of weight, but also the distribution of weight in the boat. Performance of your boat is directly affected by the distribution of weight on board.

The capacity plate does not relieve the operator from the responsibility of sound judgment. Rough water and adverse conditions can reduce the boat's capacity, so you should maintain a watch on weather conditions.

U. S. COAST GUARD	
MAXIMUM CAPACITIES	
8 PERSONS	
2400 LBS. PERSONS, MOTOR, GEAR	
200 O.H.P. MOTOR	
THIS BOAT COMPLIES WITH U.S. COAST GUARD SAFETY STANDARDS IN EFFECT ON THE DATE OF CERTIFICATION	
MANUFACTURER:	GRADY WHITE BOATS INC.
MODEL:	19 GREENVILLE, NC
DESIGN COMPLIANCE WITH NMMA REQUIREMENTS BELOW IS VERIFIED. MFR. RESPONSIBLE FOR PRODUCTION CONTROL.	
LOAD AND H. P. CAPACITY • LEVEL FLOTATION STEERING, FUEL AND ELECTRICAL SYSTEMS COMPARTMENT VENTILATION • INTERNATIONAL LIGHTS	
 NATIONAL MARINE MANUFACTURERS ASSN.	

Example: 190 Tournament
Capacity Plate

This tag, means that your Grady-White is certified by the National Marine Manufacturers Association. With this tag, you are assured that your fuel system, lighting, ventilation, steering, flotation, capacities, and horsepower ratings are not only in compliance with the U. S. Coast Guard Regulations, but also meet the more stringent standards of the National Marine Manufacturers Association.


The National Marine Manufacturers Association is a national trade organization serving all elements of the recreational boating industry, including manufacturers of boating equipment. With this tag, you can have confidence in the quality of your boat.



SECTION B: INSTRUMENTS AND SWITCHES

GAUGES AND SWITCHES

The instruments in stern drive models are electrically connected to the ignition key and operate when the ignition switch is in the "on" position.

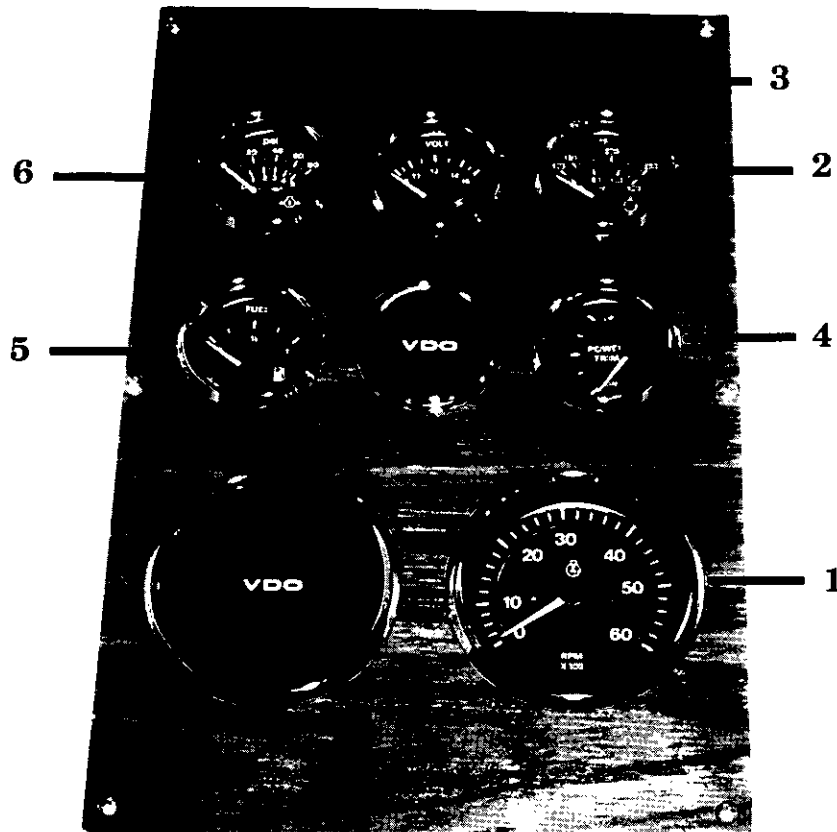

1. **TACHOMETER GAUGE**
Standard equipment on stern drive models, the tachometer indicates engine revolutions per minute (RPM's). Consult your engine owner's manual for recommended operating RPM's.
2. **ENGINE WATER TEMPERATURE GAUGE**
Standard on stern drive models, this gauge indicates the temperature of the cooling water circulating through your engine. When the temperature exceeds the recommended operating range indicated by your engine owner's manual, immediately shut off your engine to prevent damage. Overheating is often caused by obstruction of your engine's intake on the lower unit. Check the intake first if you experience trouble.

WATER TEMPERATURE, OIL LEVEL, AND FUEL SYSTEM WARNING BUZZER
(Not shown on diagram)

Outboard models may have a warning buzzer, which is located in the throttle control or under the dash.

3. VOLTMETER

This meter indicates the battery charge. With the ignition "on", a reading of 12 or 13 volts is normal, indicating a fully-charged battery. Readings below 11 indicate a weak battery, which may not start the engine(s). A reading of 13 to 15 volts when the engine is running is normal. Readings over 15 volts may indicate regulator problems. Low or fluctuating readings may indicate loose connections, loose belts, or trouble in the regulator and alternator circuit. A voltage drop soon after the engine is shut down indicates a bad battery or a heavy load on the electrical system.

4. TRIM GAUGE

This trim gauge is standard on all stern drive models. This gauge indicates the angle of thrust of the lower unit of the engine(s). See the PERFORMANCE section of this manual (page 26) for trim adjustment recommendations.

5. FUEL GAUGE

This gauge indicates the fuel level when the ignition key is in the "on" position. The electric sending unit senses the level of fuel and indicates this on the gauge. When reading this gauge, remember two things: (1) the accuracy of your gauge varies with the attitude of your boat in the water (trim or list) and (2) the fuel pickup tube inside the gas tank is not capable of withdrawing all of the fuel from the tank. For these reasons, never operate your boat at extremely low fuel levels.

6. OIL GAUGE

The oil gauge is standard on all stern drive models. This gauge indicates the oil pressure at the engine. Consult your engine owner's manual for proper operating ranges.

IGNITION SWITCH (Not shown on diagram)

The ignition switch is factory installed on all stern drive models.


TRIM/TILT SWITCH


Trim and tilt are standard on most stern drive models. The trim and tilt switches are located in the throttle control or as separate switches on the dash. The trim switch changes the angle of thrust of the engine (see PERFORMANCE section, page 26). The tilt switch raises the drive unit for trailering.



TRIM TAB SWITCH

Trim tab switches control the optional trim tabs used for adjusting the attitude of the boat while running. (See TRIM TABS in the PERFORMANCE section, page 26).

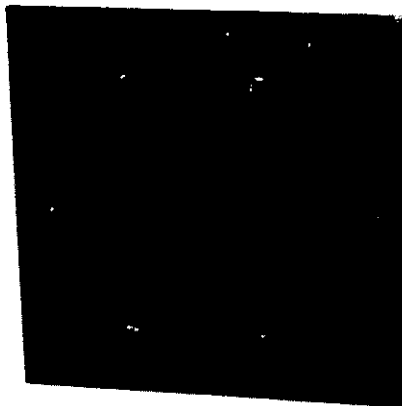

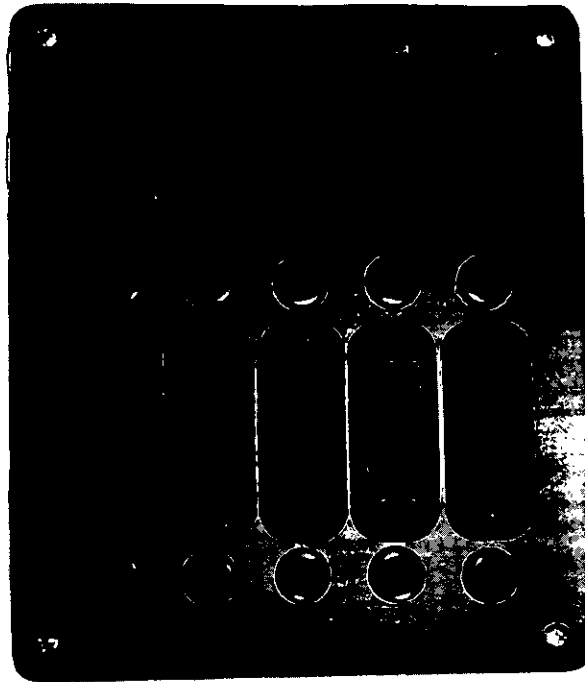

SWITCH PANEL

At the helm station you will find an accessory switch panel similar to the one pictured above. Accessory switches are noted below.

BILGE PUMP

This 2-way switch serves as an overriding manual switch in the event of failure of the automatic switch in the bilge.

BLOWER

The blower is standard on stern drive models. The blower eliminates any gasoline fumes from the engine compartment. Therefore, it should be run at least 4 minutes before starting the engine and should be in operation when running slower than cruising speed.

HORN

The horn is standard.

COCKPIT LIGHTS

The cockpit lights are standard and are located in the cockpit area.

NAVIGATIONAL/ANCHOR LIGHTS

All models are equipped with lights that meet International lighting regulations. The three position switch (NAV-OFF-ANCHOR) changes the lighting configuration to running or anchor lights.

FUEL GAUGE

The fuel gauge is standard in all factory pre-rig models. When there are dual tanks, a 3-position switch (MAIN-OFF-AUX) gives you separate readings for each tank.

AERATOR

The washdown system may be either optional or standard.

WATER PRESSURE

This switch activates the pressurized fresh water system.

WINDSHIELD WIPER(S)

The windshield wipers are standard on some boats.

ACCESSORY

Switches labeled "Accessory" are blank switches, and fuses labeled "Accessory" are blank fuses. Both are used for non-factory installed accessories.

NOTE: Most accessory switch panels have indicator lights and fuse holders for each switch. (See the ELECTRICAL SYSTEMS section, page 39, for recommended fuse amperages). Switch identification labels are available from your dealer for non-factory installed options.

BATTERY SELECT SWITCH

The battery select switch allows selection of either of the two batteries, both batteries, or neither of the batteries (disconnected).

NOTE: Never turn the battery select switch to "OFF" with the engine running as this could damage the charging system.

AUXILIARY FUSE PANEL

Located under the dash, the auxiliary fuse panel offers the ability to hook additional electronics in excess of the extra accessory switches located in the dash. All models have the same auxiliary fuse panel, except for the 208 Adventure and the 209 Escape. The 208 Adventure and 209 Escape have a fuse panel, which utilizes automotive type fuses (Figure A). All other models utilize glass fuses (Figure B).

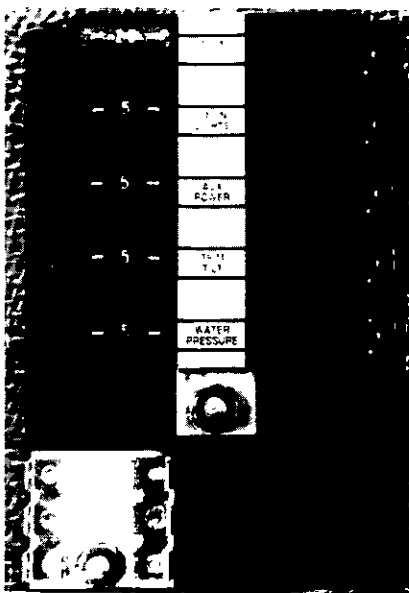


FIGURE A

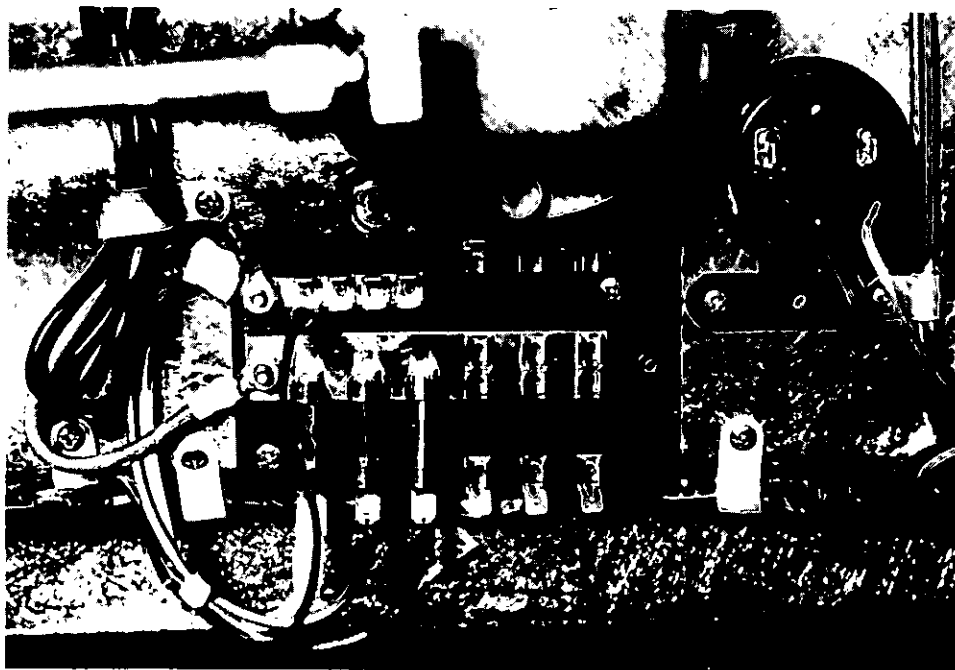


FIGURE B

SECTION C: MECHANICAL CONTROLS

MECHANICAL STEERING

Boats requiring mechanical steering are equipped with No Feedback Mechanical Steering. No Feedback Mechanical Steering provides easier steering and increased accuracy by compensating for engine torque.

NOTE: All I/O's are equipped with No Feedback Mechanical Steering. Stern driven autopilots cannot be utilized by the No Feedback Mechanical Steering.


HYDRAULIC STEERING

TILT STEERING

Tilt steering is available on certain models in conjunction with hydraulic steering. This feature enables the operator to tilt the wheel up or down. Refer to steering system's owner's manual for information on oil levels with Tilt steering.

THROTTLE/SHIFT CONTROL

The throttle/shift control, located at the helm station, controls the flow of fuel to the engine and acts as a gear shift lever to control the forward and aft thrust of the propeller.

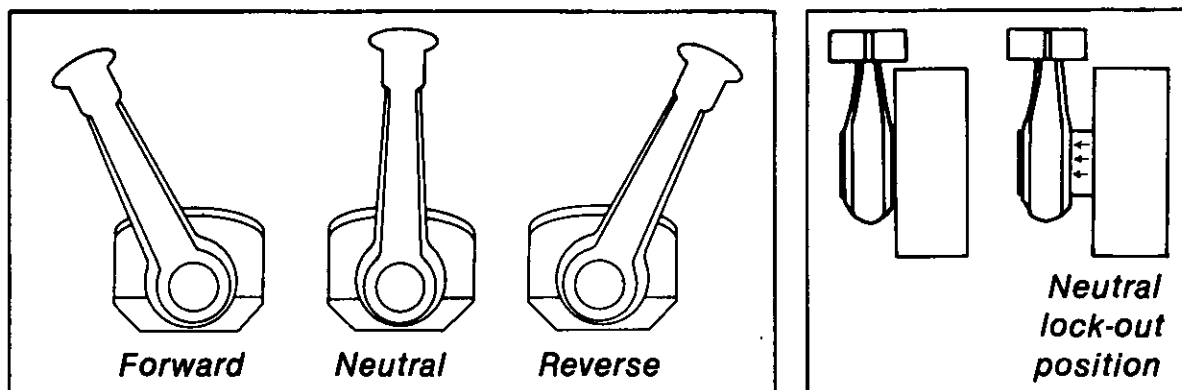

The vertical position of the throttle control is normally the neutral position. Move the control forward to engage the shifting mechanism, which creates a forward thrust of the propeller. Increase the forward movement to increase the fuel flow to the engine and increase the forward thrust.

Move the control lever aft of the neutral position to reverse the shift mechanism and create a reverse thrust of the propeller. Increase the aft movement to increase the reverse thrust.

All controls have a safety mechanism that does not allow the engine to start when the control is in gear. In order to increase the flow of fuel to the engine while remaining in the neutral position, you may use the neutral lock out button in the control handle.

You may reverse the shift mechanism in order to provide a "braking action", slowing the boat. This braking action causes a following wake which may rise above the transom and flood the boat if the boat is moving at too great a speed, so exercise caution. Propellers are designed for maximum forward thrust, so reverse thrust will not be as efficient.

CAUTION: ALLOW ENGINE RPM'S TO DECREASE BEFORE SHIFTING INTO REVERSE.


The control head at the helm should be cleaned and kept free of corrosion. Periodically check the mounting for loose screws. Also check the cable conduit for cracks, abrasions, or kinked or bent cable. Replace damaged cable (see your dealer).

The cable ends and cable fittings should be checked periodically for corrosion, loose brackets and loose, worn, or damaged fittings. Replace worn or damaged parts. Cable ends, fittings, and the control mechanism may be sprayed with a moisture-displacing lubricant. If your control has "quick disconnect" fittings, inspect the springs for corrosion. Should your throttle or shift cables need replacing, the data sheet at the front of this manual will indicate the lengths required.

Many throttle controls are equipped with trim buttons in the handle. Refer to the PERFORMANCE section (page 26) for instructions on trim.

TRIM TABS

Trim tabs are electrically-hydraulically operated and used to regulate the attitude of the boat while moving. They may also be used to adjust the boat's running angle in adverse seas or to compensate for unusual load conditions.

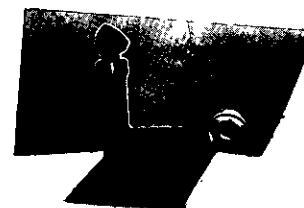

The trim tabs are operated by a two rocker switch panel and will aid in trimming the boat fore and aft for a smoother ride.



The switches are marked "bow down". Trim tabs in the extreme bow up positions will have no effect on the boat's ride.

Trim tabs can improve the ride of your boat by adjusting where the water is hitting the keel line. In a slight chop, the waves may be hitting the keel of your boat around the helm area, causing an uncomfortable ride. By adjusting the trim tabs and lowering the bow, the waves will hit the keel at a more forward point, softening the ride. Experimentation with your trim tabs in various sea conditions will help you determine the best positions for your boat under different load conditions.

Trim tabs are also useful in correcting listing from side to side under varying weight conditions. Usually the list can be corrected by pushing the "bow down" switch position on the higher side. This will tend to lower the bow by pulling the high side to a level position. If your bow is already in a low position, you may correct list by pressing the lower switch position on the lower side. This will cause the low side to rise and level the boat. It will also gradually improve the running angle.

Trim tabs in the extreme "bow down" position will cause the boat to come on plane with minimum bow rise. Unless you are operating at low speeds or with considerable cockpit weight, you will likely want to raise the tabs slightly when underway in order to avoid "plowing" water. With the tabs in the "bow down" position, you will be able to maintain a plane at the least possible RPM's.

When running in a following sea, the best performance is obtained with the tabs in the "bow up" position.

TRIM TAB PUMP LOCATIONS

280 MARLIN

The Trim Tab pump is located in the transom wall on the starboard inboard stringer. It is accessible through the aft rigging compartment door located on the aft cockpit wall. The pump is also accessible through the inspection plate in the motorwell. If removal or servicing of the pump is necessary, the most convenient method is to remove the motorwell lid. NOTE: If motorwell lid is removed, it must be resealed with a marine grade silicone sealer.

25 SAILFISH

Trim Tab pump is located behind the aft berth wall. The pump is accessed through the removal of the center section of the aft berth wall.

25 DOLPHIN

Trim Tab pump is located in the starboard berth storage compartment.

24 EXPLORER

Trim Tab pump is located in the starboard berth storage compartment.

23 GULFSTREAM

Trim Tab pump is located in the starboard berth storage compartment.

22 SEAFARER

Trim Tab pump is located in the starboard berth storage compartment.

225G

Trim Tab pump is located in the forward starboard storage compartment.

208 ADVENTURE

Trim Tab pump is located in the starboard berth storage compartment.

209 ESCAPE

Trim Tab pump is located underneath the center console.

NOTE: Trim Tabs are optional on the 22 Seafarer, 225G Tournament, 208 Adventure, and 209 Escape.

TROUBLE SHOOTING

ENGINE CONTROL

PUSH-PULL CABLE STEERING

SYMPTOM	CHECK POINTS	SYMPTOM	CHECK POINTS
Engine starter does not engage when lever is in neutral position.	<ol style="list-style-type: none"> 1. Neutral start switch not properly adjusted. 2. Neutral start switch malfunctioning or stuck. 3. Dead battery or loose electrical connection. 	Steering stiff or unusually hard operating, jerky or erratic.	<ol style="list-style-type: none"> 1. Corrosive deposits at cable output end, either inside cable sleeve or inside motor tilt tube. 2. Crushed or kinked cable conduit. 3. Bent cable ram at output end. 4. Friction device at helm overtightened. 5. Internal corrosion or damage to cable. 6. Engine and boat not "Trimmed out" properly. 7. Engine trim tab loose, damaged or incorrectly set. 8. Transom bracket improperly mounted, bent or distorted. (Boat mounted systems only.) 9. Bent or distorted engine link may be interfering with engine. (Motor mounted systems only.)
Control becomes stiff or unusually hard operating, jerky and erratic	<ol style="list-style-type: none"> 1. Control cable(s) are crushed, kinked or bent too sharply. 2. Cable(s) are corroded at ends or are clogged internally with dirt and grime. 3. Engine shift or throttle linkage not working properly. 4. Remote control mechanism is defective, faulty or has been damaged internally. 5. Foreign objects interfering with throttle or shift mechanism at either control head or engine. 	Steering sloppy and has excessive free steering wheel movement.	<ol style="list-style-type: none"> 1. Cable transom bracket loose or cable and fittings loose or badly worn. 2. Steering wheel loose on helm. 3. Worn or loose fasteners in helm unit or drive unit. 4. Worn push-pull cable.
Throttle and shift does not respond properly to control hand lever.	<ol style="list-style-type: none"> 1. Cable ends and connection fitting not properly secured at the engine or control head. 2. Wear in the control mechanism or excessive backlash caused by too many bends in the push-pull cable(s) conduit. 3. Control system not properly adjusted. 	Steering system won't turn.	<ol style="list-style-type: none"> 1. Corrosive buildup at output end of cable. WARNING: If the system does not free easily, replace the steering cable. 2. System badly damaged at the helm or cable output end.
Engine starter engages remote control hand lever is in forward or reverse.	<ol style="list-style-type: none"> 1. Neutral start switch not properly adjusted. 2. Neutral start switch malfunctioning or stuck in "closed" position. 3. Faulty wiring. 		


SECTION D: BOAT OPERATION

FUELING

Safety during fueling requires common sense and caution. Please study the following procedure carefully, and ask your dealer if there is doubt about any procedure.

1. Check your engine owner's manual to make sure that you only take on the type of fuel specified by the manufacturer. Do not use gasoline containing alcohol. If you operate an outboard with an oil injection system, check the engine manual for the recommended type of oil and fill the oil tank completely.
2. Close all ports, hatches, windows, and engine compartments before fueling, in order to prevent gasoline fumes from accumulating.
3. Stop all engines, motors, and fans (including bilge pump), and turn off lights before fueling.
4. Extinguish all cigarettes and other lighted materials.
5. Constantly observe fuel flow to prevent overflow or spillage.
6. After fueling, wash down and clean off any spilled fuel. Dispose of any rags, sponges, etc. used for clean-up. Do not carry these items on board.
7. Avoid an empty fuel tank, even during storage, as condensation can develop and result in water in your fuel system.
8. In stern drive boats, turn the bilge blower on at least four minutes before starting engines. Check for gas fumes in the engine compartment before starting and continue to run the blower until they are eliminated.
9. After securing the fuel cap, ventilate all ports, windows, hatches, engine compartments, and closed areas.
10. Make sure gasoline was not spilled into the bilge.
11. Dual fuel tank installations utilize a manual switching valve for tank selection, located in the port side aft compartment. Select your first tank carefully, taking into consideration the distribution of your load as fuel is consumed. Performance will be affected by the type of engine and weight distribution.


12. On all stern drive models and any 280 model that receives a generator option, the fuel tank compartment is sealed with a removable compartment drain. This drain is located to the starboard side of the keel line drain tube in the aft bilge compartment. This plug should be removed periodically to drain any water accumulated in this area.

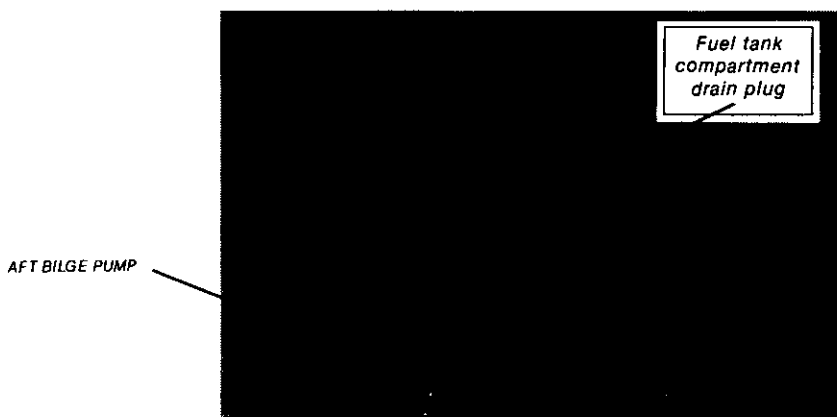

FUEL MAINTENANCE TIPS

If you are experiencing fuel flow problems, a quick method of checking if the problem is in your fuel system is to connect a 6-gallon portable tank to your engine.

Your fuel tank is equipped with an anti-siphon valve (see diagram for location), which should be checked if you are experiencing problems.

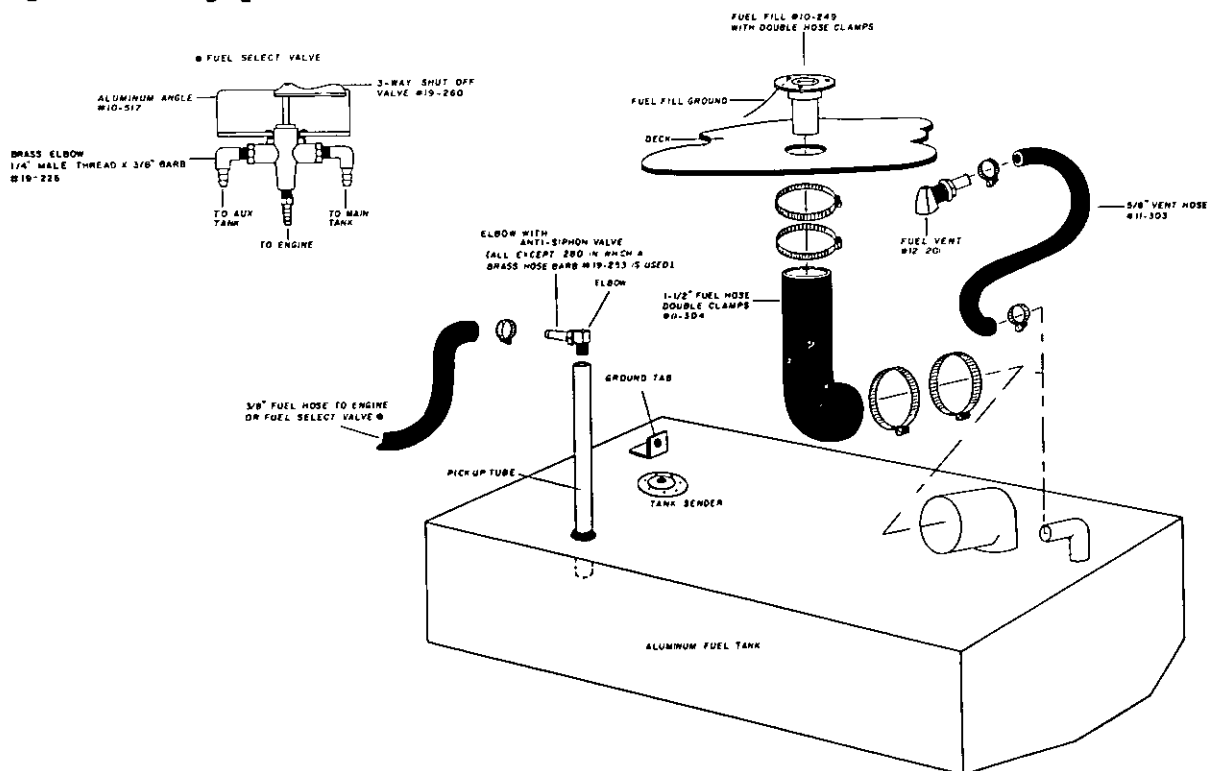

The manual shut off valve should be closed when servicing the fuel system to avoid any spillage of fuel into the bilge.

Do not use fuels containing alcohol. Alcohol, particularly methanol, will absorb water, which makes fuel more corrosive to metals in tanks and carburetors, and shortens the life of elastomers, such as hoses and gaskets.


After fueling, inspect the fuel lines, connections, and fuel tanks for tightness, signs of leaks, and deterioration. At least annually, conduct a more thorough inspection of fuel system components, especially those hidden from a routine inspection. Replace any deteriorated hoses, clamps, connections, or fittings.

PROPELLER

The condition of your propeller is a major influence on the performance of your boat. Your engine is equipped with the best size propeller for normal conditions. If you have unusual uses or weight conditions, you may require different propellers for different applications. It is advisable to keep an extra propeller on board. A damaged propeller can affect your boat's top speed, cause vibrations or a sudden drop in RPM's, or increase your fuel consumption.

CAUTION: When replacing propellers, make sure you stay within the engine manufacturer's maximum and minimum RPM ranges. This information is in your engine owner's manual. If your boat does not have a tachometer, consult your dealer for propeller changes.

Cavitation occurs in all propeller driven boats under certain conditions. It is easily recognized by sudden increases in RPM's (revving) or a sudden drop in speed. This occurs when cavities, or air pockets, form around the propeller. Cavitation is influenced by propeller design, speed, placement, and even water temperature. In most cases, a change in the drive angle (trim) will correct the problem. If the problem persists, you will need to experiment with different size propellers.

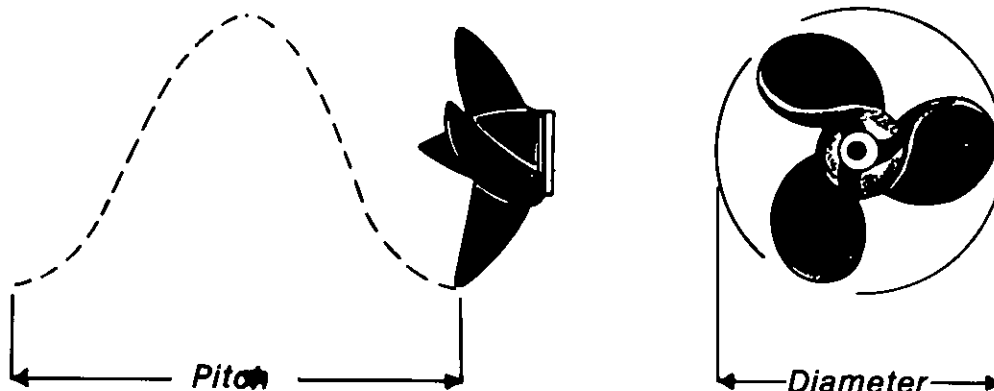


TRAILERING


The adjustment and balance of your boat on your trailer largely determines the trailability of your boat. Swaying while trailering is usually caused by a tail-heavy load. A rule of thumb is that the tongue weight on the hitch ball should be between 5-10% of the total weight of your boat, motor, and trailer. The rollers and/or bunkers of your trailer should be adjusted so that the weight is distributed evenly across the stern and forward throughout the keel section. Your dealer should be responsible for adjusting your trailer properly.

Check the following prior to trailering your boat:

1. Hitch is tight and secure.
2. All nuts and bolts are securely tightened and the safety chain properly secured.
3. Winchlocks and tilt mechanism in correct positions.
4. Tires are properly inflated and in good condition (including spare).
5. Signal, stop, and other lights operating properly.
6. Gear on boat is properly secured for travel.
7. Tie down straps are secure.
8. Wheel bearings properly greased (each year).
9. All cabin windows and doors secured.
10. All canvas tops and side curtains are taken down and secured to prevent wind damage/loss in transit.
11. All lines are properly secured.
12. Mooring cover removed. (Damage to canvas during transit is not covered in warranty).

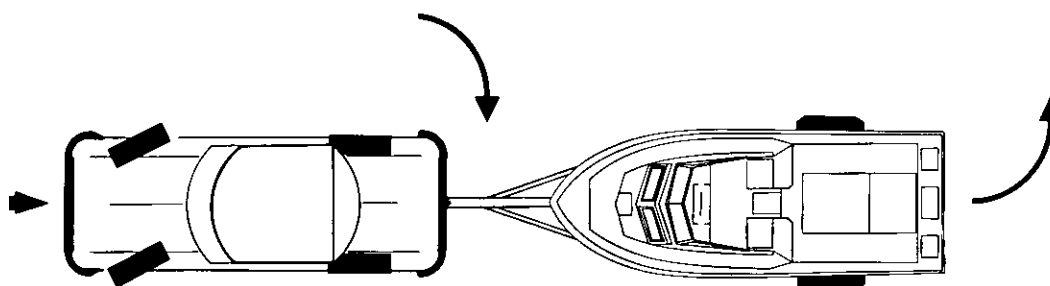

BACKING TO RIGHT

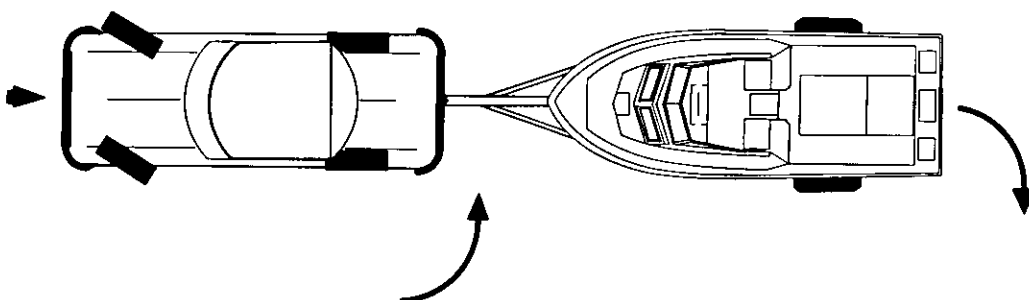

BACKING TO LEFT

PRE-LAUNCH CHECK LIST

Prior to initial launch, familiarize yourself with this manual and all aspects of your boat. At the launch, go through a pre-launch check list. The check list should be suited to your particular needs, but the following items should be included:

1. Make sure drain plug is in place.
2. Have a launch rope attached.
3. Have the proper safety equipment on board.
4. Check the capacity plate and maintain capacity ratings.
5. Tilt engine or drive unit to "up" position.
6. Remove tie down strap.
7. Make sure engine drain and freeze plugs are closed.

After the pre-launch check, back your trailer slowly into the water, preferably keeping the axle hubs above water (unless your trailer is a submersible model). Set the hand brake of your car and place chocks under the rear wheels if chocks are available. Attach a bow line securely to the boat, release the winch cable, and give the boat a firm push.

After the boat is clear of the trailer and secured to the dock, move the trailer to the parking area.

PRE-START CHECK LIST

Before starting your engine:

1. Check the bilge for excess water and leaks.
2. Turn on the bilge pump to remove any excess water, and leave the pump on stand-by.
3. On stern drives, turn on the bilge blower and check for leaking fuel or fumes. Run the blower at least four minutes prior to starting.
4. Check engine oil level, battery cable connections, electrolyte level, and all drive belts for proper wear and tension. Check steering for freedom of movement and tightness. Check navigation lights.

STARTING

1. Lower the drive unit to the "down" position. Be sure the propeller is free of any obstruction.
2. Set the control lever in the neutral position. Engage the neutral lock out button in the control handle and pump the control throttle forward 2 or 3 times. Set control throttle slightly forward of straight up and turn the ignition key to start. Adjust the throttle to 1200 RPM's and check instruments. If the oil pressure gauge does not respond immediately, shut off the engine. If the oil pressure is normal, check the area again for fumes or leakage. Test steering response and throttle response at the dock.

PERFORMANCE

Keep your hull clean for maximum performance. Detailed recommendations for hull cleaning are included in the MAINTENANCE section (Section E).

Stern drive models and many outboard models are equipped with power tilt and trim mechanisms. The purpose of the tilt is to raise the engine for launching, loading, or trailering your boat.

Trim refers both to the weight distributions inside the boat and to the angle of thrust of the drive unit. The proper weight distributions of passengers and gear can affect performance. The angle of thrust of the drive unit either forces the bow up or down. A drive unit tilted too far in (forward) will cause the bow to nose downward or "plow". A drive unit tilted too far out (aft) will cause the bow to ride too high. Adjust the trim so that the angle of thrust is parallel to the water at full throttle at a normal running attitude.

When the angle of thrust is too far out (aft), the engine noise may rise indicating that the propeller is cavitating. Adjust the engine trim in (forward) to correct the problem. The boat may also tend to "porpoise" in maximum bow up position as well. This can be corrected by adjusting the engine trim in and trimming the bow down.



For a smoother ride when running into heavy seas, the bow should be adjusted so that the entry point into the water is slightly forward of the helm location. When running in a following sea, the bow should be trimmed up higher to prevent the boat from plowing into the seas. As sea conditions change, experiment with the trim to find the best performance for your particular boat and load.


VERY IMPORTANT

Most drive units are equipped with an adjustable rudder trim tab. This trim tab should be adjusted to balance the steering at the speed which you travel most frequently. Variations in speed, boat load, or changes in the drive unit trim will cause the steering to pull in one direction. If the boat pulls to the left, adjust the trim tab to the left and vice-versa.

ANCHORING

The size of your boat along with the type of lake, sea, or river bottom in your boating area should determine the size and type of anchor. The recommended anchor line length is 4 to 7 times the depth of the water. In strong winds and currents, this length should be increased.

A 3 to 4 foot length of chain between the anchor and the anchor line will help prevent the line from chaffing on rough obstacles below the surface and will also help hold anchor flukes down for more secure anchoring.

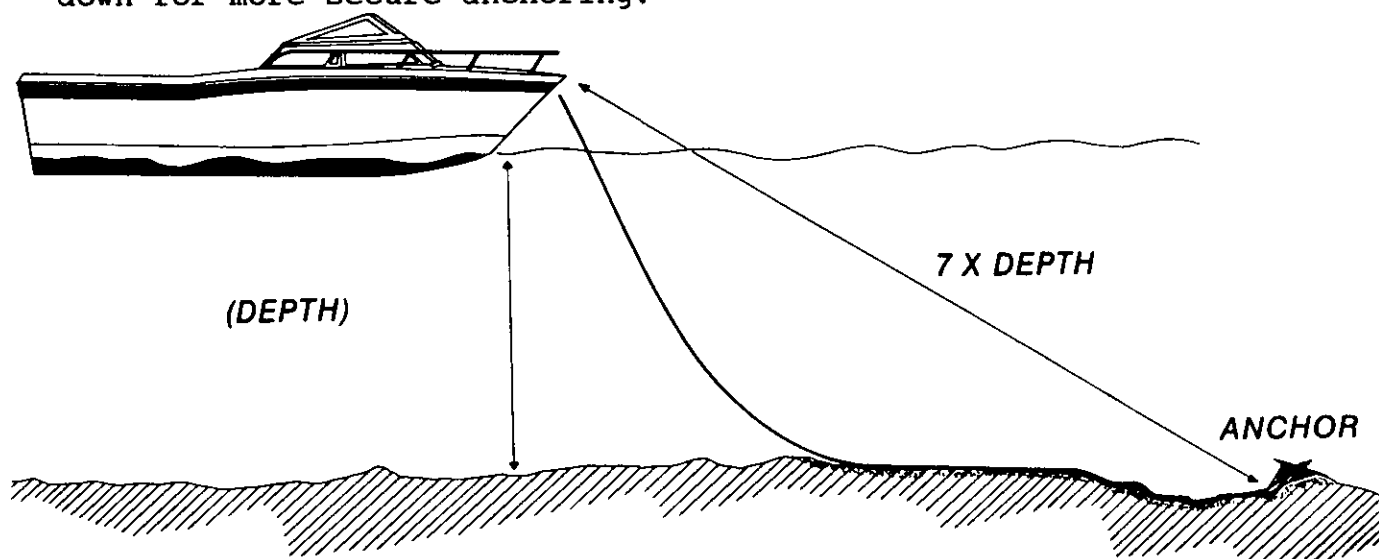

To anchor, head the boat into the wind or current to stop forward motion. Make sure your anchor line is secured to a cleat and runs under the bow rail. Lower the anchor into the water until it reaches the bottom. Feed out anchor line slowly as the wind or current forces the boat backward, reversing engine if necessary. Before stopping engines, make sure anchor is secure.

To raise anchor, reverse the procedure by driving the boat slowly to the point directly above the anchor and pull straight up. If the anchor is difficult to raise, you may tie off the anchor line while directly over the anchor and slowly motor forward to "free" the anchor from the bottom.

Even while anchored, your boat will swing with the wind, so do not anchor close to other boats or objects. In addition, remember that it is illegal to tie your boat to navigational aids, such as buoys and markers.

WARNING: Never anchor off the stern of the boat, especially in strong winds or currents. The weight of the stern and flat surface to the seas can easily cause water to enter over the transom, swamping the boat.


 



DOCKING

Unlike an automobile, the stern of your boat reacts first when turning. A turn to the right will swing the stern to the left and vice-versa. Remember that turning your boat away from an object such as a dock will tend to swing the stern toward that object. Before bringing your boat to the dock, consider the wind and how it may be used to your advantage. Approach the dock at a 30 to 45 degree angle at a slow speed. Before the bow reaches the dock, shift the engine to neutral, turn the steering wheel toward the dock, and shift the engine into reverse. The boat will slow and the stern will swing toward the dock.

When pulling away from the dock, push the stern clear of the dock to make sure you have enough room to maneuver. You can then ease away without bumping the stern against the dock.

Slowing and stopping your boat requires some practice. As you slow the throttle, the boat will slow down. The length of time to come to a complete stop will vary with wind and current. In addition, the judgment of distance and momentum on the water is a skill that improves greatly with practice.

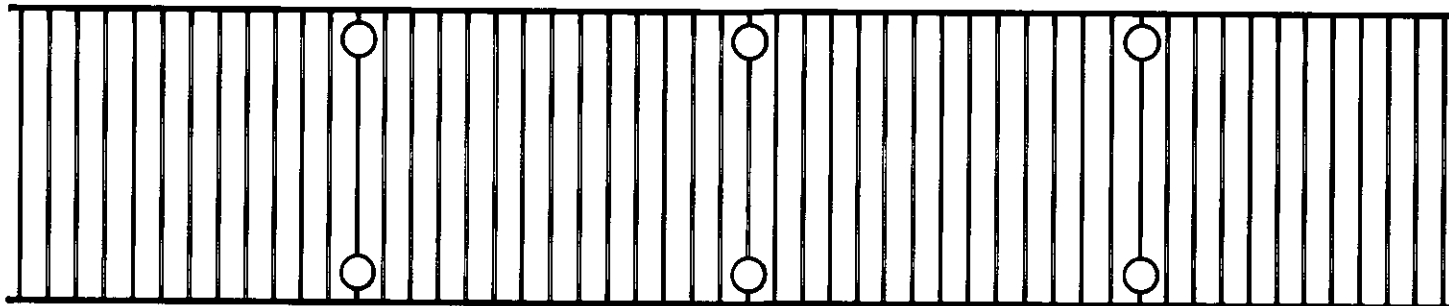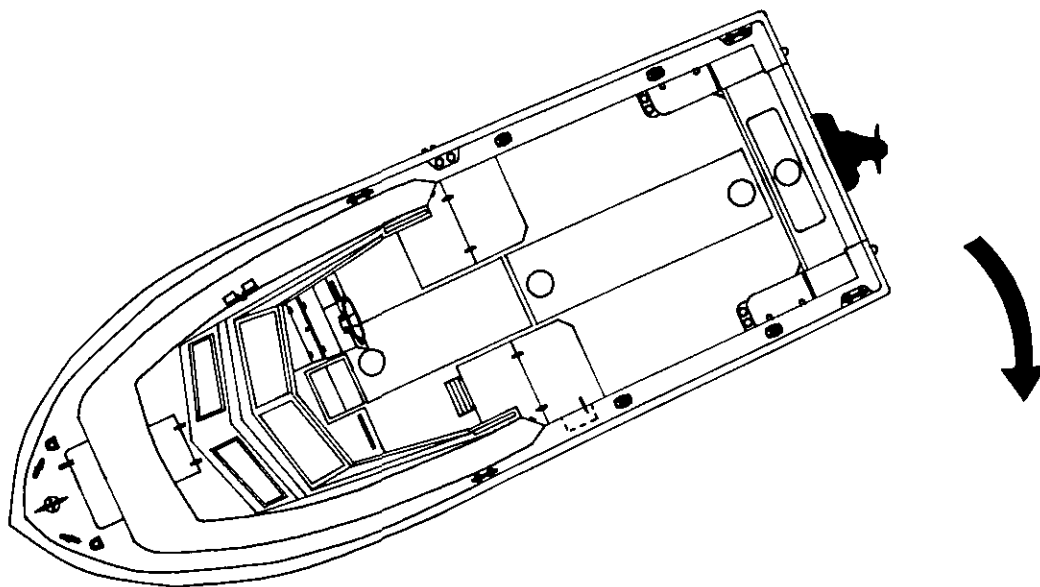



SECTION E: MAINTENANCE AND SERVICE

Your hull and deck are constructed by the hand lay-up method using the highest quality fiberglass mat and woven roving. This method of construction insures a proper fiberglass-to-resin ratio and a uniform thickness, which together result in a much stronger boat than those constructed of "chopped glass". This is an expensive process, but insures that your Grady-White is the strongest, most durable fiberglass boat possible.

Proper maintenance of your boat is not only a source of pride but is the key to maintaining your boat's value. A few simple steps will keep your fiberglass Grady-White looking showroom bright for years.

FIBERGLASS FINISH

The outer skin, or gelcoat, of your Grady-White is a thin layer of resin with a finished color pigment. It is an integral part of the hull laminate. This tough, durable outer layer makes routine maintenance relatively simple.

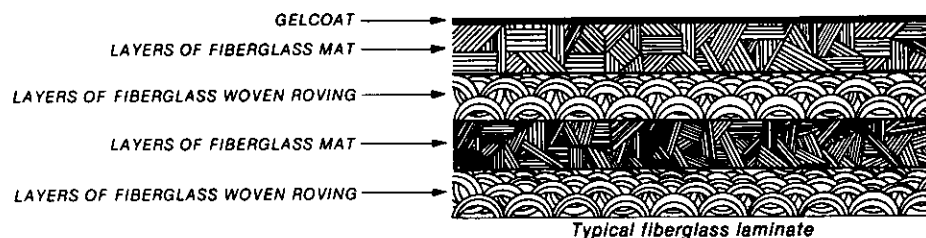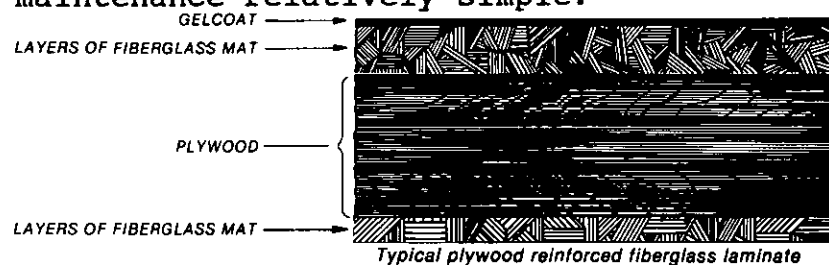

The gelcoat of your Grady-White is the finest available. The best method of routine upkeep is the same as maintaining the finish of an automobile. The best method of cleaning the boat is with a mild household detergent and plenty of fresh water. A coat of wax (either automobile or boat wax will do) will maintain the smooth, glossy finish and protect the boat's surface. Do not wax surfaces that may be walked on, as they will become quite slippery.

Though gelcoat is a very durable material, it can still be subject to scratches, blistering, and spider web-like cracks (crazing) over years of use. It is elastic enough, however, to withstand strong blows while flexing with the hull's movement. Gelcoat problems are cosmetic and will not affect the structural integrity of your boat.

If you store your boat in the water for more than a few days at a time, the bottom of the boat below the waterline should be painted with anti-fouling paint to protect it from marine growth, barnacles, and blistering, which inhibit performance. Since anti-fouling paint slowly dissolves to prevent marine growth, inspection and cleaning of the boat bottom at least once per season is advisable. Repaint whenever necessary.

GELCOAT REPAIR

Many gelcoat imperfections can be repaired using the following procedure:

1. Obtain the original colored gelcoat from your dealer and a small amount of M.E.K. (catalyst), which when mixed with the gelcoat will cause it to harden. You may also wish to obtain acetone, which is the most suitable cleaning agent for gelcoat.

WARNING! M.E.K. (Methyl ethyl ketone peroxide), gelcoat, and acetone are flammable and hazardous if not handled properly. Follow instructions on the containers carefully. After gelcoat is catalyzed, it may become hot in the mixing container and catch on fire. Before disposal, submerge gelcoat in water until cool.

2. If the surface to be repaired is flat, lightly sand this surface (removing all glossy areas) so that the new gelcoat will adhere to the surface. If the area to be repaired is cracked, the crack should be routed out with a small instrument. Tape off all adjacent areas around the damaged area. Any crack extending past the gelcoat surface and into the fiberglass will need a more extensive repair. We suggest you consult your dealer for additional instructions.
3. A small amount of gelcoat should be tested with the catalyst before mixing the material for your repair. You will then be able to understand how the chemicals react. Pour approximately 1/2" of gelcoat into a small cup with approximately 1.5% M.E.K. (about 3 to 5 drops) and stir thoroughly. Spread a small amount of the mixture on a test surface and measure the time it takes to harden. Hardening time should be from 15 to 45 minutes. Too little M.E.K. will lengthen the hardening time. Too much M.E.K. will cause the patch to become rubbery and cure improperly. It is best to be under catalyzed. When you obtain the proper mixture in a test, you are ready to mix a new batch for actual repair, using the same ratio of M.E.K. to gelcoat.

4. Apply to the defective area using a small stick (a medical tongue depressor or popsicle stick works well). The mixture should be applied in a thin layer, bringing the patch up to the level of the original surface. Too much material will require extra sanding.
5. When the patch has hardened, any raised area should be sanded carefully with 220 grit sandpaper bringing it level with the original surface. As you approach the finished surface, use 400 or 600 grit sandpaper that has been dampened with water. The water will reduce scratching. Wrapping the sandpaper around a small block of wood will help keep the sanded area level.
6. Remove the tape around the patch and you will notice that it has a dull finish. Any good automotive buffing compound applied with a power buffer will bring a luster to the surface.

INTERIOR MAINTENANCE

Your interior vinyl upholstery may be cleaned with a mild solution of household detergent and fresh water. Commercially available cleaners for vinyl also work well. Be sure to follow the instructions on the label.

Some cabin cushions are of a Herculon-type fabric and may be cleaned with upholstery cleaner. Most cabin cushions are removable and may be dry cleaned. DO NOT MACHINE-WASH THESE FABRICS.

Since the seams of your upholstery are not water proof, your upholstery should be stored in the cabin or covered when not in use.

Lounge seat bases, which are constructed of exterior fir plywood, should be partially spread for ventilation when the boat is not being used.

CANVAS

Follow these steps to maintain your boat's top and other canvas:

1. Dry all canvas before storing to prevent mildew.
2. Wash canvas periodically with a heavy-duty detergent and warm water. Do not use petroleum-based or ammonia cleaners on canvas or clear vinyl as they will yellow.

3. Lubricate the snap buttons and zippers with petroleum jelly or paraffin and they will be much easier to operate.
4. Clean clear vinyl thoroughly with denatured alcohol, and then apply a protective layer of clear wax. Do not use paste wax as it will turn vinyl yellow. This process should be repeated as necessary to maintain the protective wax coating.
5. The top, front, and side panels must be removed and rolled up for storage. This procedure is necessary to prevent the front and side vinyl pieces from cracking. NEVER FOLD THESE PIECES!
6. Never trailer your boat with the canvas up. All canvas should be stored and secured before trailering.

Though your Grady-White boat's canvas is made using the highest quality vinyl and latest sewing techniques, your boat's canvas will not be completely leak proof. The seam holes in your canvas may stretch and tend to leak water. However, you can correct much of this problem by rubbing paraffin over the seams. Although your boat is equipped with canvas, remember that it is basically an "open" vessel.

Please understand that Grady-White does not warrant the fit and design of the canvas to be completely watertight.

TEAK

Teak is used in many Grady-Whites, because of it's beauty and it's need for little maintenance. Richly supplied with natural oils, teak weathers well. Without protection, however, the teak will weather after repeated exposure.

One of two things may be done to return the teak back to it's natural color. If your teak is slightly weathered, it may be cleaned with detergent or a commercial teak cleaner and then oiled with a lemon based furniture polish. If the teak is severely weathered, you may need to sand it down until all the gray is removed. Then rub in three or four coats of tung oil, allowing each coat to dry thoroughly. Once your base coat is dry, all you need to do to protect your teak is apply the lemon-based furniture polish when cleaning your boat after each use.

DURATRIM

In the cockpit areas of your boat, duratrim is used for trim work. This material has an appearance similar to teak, but requires almost no maintenance. Maintenance of your duratrim should include regular cleaning with soapy water and an application of a surface protector, such as PENETROL, once or twice per season. Never sand your duratrim!

HARDWARE

Even though your hardware is made of laboratory grade 316 stainless steel, it needs regular cleaning to maintain it's "less staining" properties. Use a mild solution of soap and water to clean your stainless after using your boat. If a bit more "kick" is needed, add a small amount of vinegar to the solution. Stains and discoloration may be removed with a non-abrasive metal cleaner.

You should NOT try to remove stainless steel stains with an acidic solution, such as a household cleaner. In fact, where acid rain is a problem, you should rinse your boat with fresh water after each rainfall.

The real key to maintaining your stainless steel is to keep it clean. Try to remove all salt or dirt from your stainless on a regular basis. Also, remember to rinse your hinges on baitwells and fishboxes regularly. In addition, to avoid sticking and rusting, hinges may need a small amount of penetrating oil.

HARDWARE MOUNTING

When drilling mounting holes in boat surfaces, be sure each hole is sealed properly. Sealing will prevent water leakage, which is especially important in fiberglass areas that have been reinforced with plywood. A hole sealed improperly allows water inside the fiberglass, which leads to saturation of the plywood reinforcement.

BATTERY


No matter what type of power your boat uses, your battery(ies) are extremely important. They should be secured in a non-metallic tray to avoid electrolyte spills. Battery terminals should be covered by an insulated boot.

Check the fluid level in each battery cell at least once a month. Fill the battery to the upper level with distilled water as shown in the illustration below. Never overfill the battery.

Keep terminals clean by scrubbing them with a stiff brush and a mixture of baking soda and water. Afterwards, apply a light coat of grease. Be careful not to let any of the baking soda/water mixture enter the battery.

Check the battery each month when not in use by using a battery hydrometer, which measures the specific gravity. The meter should read between 1250 and 1280.

Never disconnect the battery when the engine is running as damage to the charging system could result.

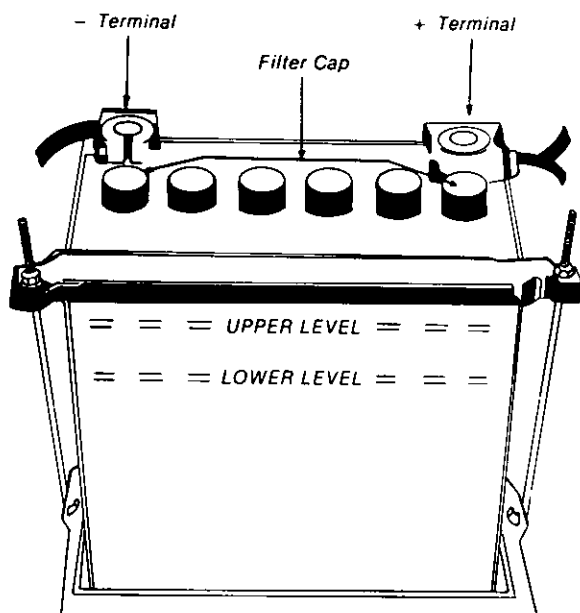

The battery contains sulfuric acid. Avoid contact with skin, eyes or clothing. Antidote: EXTERNAL — Flush with water. INTERNAL — Drink large quantities of water or milk. Follow with milk of magnesia, beaten egg or vegetable oil. Call physician immediately. Eyes: Flush with water and get prompt medical attention. Batteries produce explosive gases. Keep sparks, flame, cigarettes away. Ventilate when charging or using in enclosed space. Always shield eyes when working near batteries.

KEEP OUT OF REACH OF CHILDREN.

Remember when disconnecting and reconnecting battery cables that the black cable must be connected to the negative terminal, and the red cable must be connected to the positive terminal of the battery. Reversing this procedure will immediately damage your system.

SCUPPERS

Most Grady-White boats have self-bailing cockpits, meaning that water on the cockpit floor drains through overboard drains rather than into the bilge. The stern drains (scuppers) have an external scupper flap assembly (as shown below), which restricts the flow of water back into the boat. Inspect the flaps periodically to make sure that they are free of debris. The scupper flaps will need periodic replacement.



RIGGING COMPARTMENTS

The 230/232G Gulfstream series has a rigging compartment located aft of the gas tank compartment. This compartment is functional for rigging oil tanks or ignition protected pumps. A subfloor has been installed at a height that will allow easier access to the oil tank filler caps through the six inch inspection port.

WARNING! This compartment is NOT to be used for batteries or portable fuel tanks as this compartment does not have sufficient ventilation.

The rigging hatch and mounting screws must be sealed with silicone sealer after rigging is complete. If the lid is removed, it must be resealed to insure watertight integrity.

ENGINE

If your Grady-White is powered by a stern drive engine, refer to the engine manufacturer's manual for proper maintenance procedures. Complete the engine warranty card at the time of purchase and forward it to the manufacturer.

If your boat is outboard-powered, your dealer should provide an outboard owner's manual to help you with routine maintenance.

GRADY DRIVES

Since there is a chance of moisture entering the bracket, a drain has been provided. Any moisture entering the bracket should drain to the bottom of the bracket. The drain plug should be removed periodically to drain the bracket.

The Grady Drive is made of aluminum; therefore, it is very important to use an appropriate type of bottom paint. Consult a bottom paint specialist or your Grady-White dealer for advice on what type of paint to use.

STEERING

MECHANICAL

The mechanical steering system is designed to require a minimum of maintenance; however, you should periodically inspect the complete steering system for wear, rust or corrosion of the steering control heads or cable ends and attachments, and lubricate the parts when needed. If you ever notice any change in the feeling of the system, such as binding, looseness, noise, or sticking, immediately perform a thorough inspection.

In outboard models, the push rod at the end of the cable is susceptible to freezing if improperly greased. When the boat is not in use, the motor should be turned so that the push rod is not exposed to the elements. If you operate in salt water areas, lubrication is extremely important and you should make frequent inspections for corrosion.

HYDRAULIC

The hydraulic steering systems (not to be confused with power steering) require regular preventative maintenance for continued safe and reliable operation.

The oil level in the helm pump must be maintained within acceptable operating levels. A low oil level will cause air to be introduced into the steering system and result in unresponsive steering. The oil level should always be within 1/2 inch from the base of the fill hole, located on the front top portion of the helm pump.

Check the steering system for oil leaks. An unchecked leak, in time, will result in unresponsive steering and/or possible loss of steering.

All moving mechanical linkages, sliders, etc. must be greased as needed with a high quality marine grease.

Refer to steering manufacturer's owner's manual for specification recommendations and additional maintenance requirements. If owner's manual is missing, contact the steering manufacturer for a copy.

NOTE: Any slow or sudden change in the "feel" of your steering system indicates an immediate need for a thorough inspection.

All repairs and replacements to steering systems should be made only by an authorized dealer.

STORAGE

If your boat is out of use for the winter, special attention should be paid to areas that may be damaged by freezing temperatures. Even if you live in a warm climate, you should inspect your boat on an annual basis.

Use the following check list for winter storage:

1. There are detailed instructions in your engine owner's manual regarding the procedures for winterizing the engine. Follow these important instructions carefully and your engine should survive the most severe weather conditions.
2. Clean and wax your boat before storage. If you store your boat in the water, there may be a layer of growth on the bottom in addition to the anti-fouling paint. As it dries, this debris will harden, so scrub the bottom immediately after the boat is removed from the water.
3. If you are storing your boat on a trailer or cradle, make sure that it fully supports the keel, chines and under the transom.
4. Raise and block the trailer axle to prevent tire deterioration. This is an excellent time to lubricate and pack the wheel bearings per manufacturer's instructions.
5. Remove the bilge drain plug and open all valves and seacocks to keep the bilge dry. Drain all tanks, water lines, and pumps to prevent freeze damage. If desired, the fresh water system may have a nontoxic antifreeze added. This antifreeze can be purchased at most marine dealerships or camping dealers. In warmer climates, draining will help prevent water stagnation. Store your boat with the bow elevated to help drainage.

6. If you are sure your fuel does not contain alcohol, keep your fuel tanks full during storage or periods of infrequent use to prevent condensation of water vapor and subsequent engine malfunction. There are also additives available to inhibit condensation. Fuels containing alcohol will absorb humidity, and the resulting condensation will separate from the fuel as the temperature drops during winter months, causing corrosion. Fuel tanks should be empty during storage if fuel contains alcohol. This is a good time to have your fuel filters changed, if they have not been changed recently.
7. Check the electrolyte level in your battery and fully charge the battery before storing. A strong battery loses it's charge much more slowly than a weak battery. Ideally, you should disconnect the batteries and cover the terminals with some sort of grease to prevent corrosion. Store the battery in a cool, dry area on a wood board. Don't store your battery on concrete, because the cold, moist surface will drain the battery.
8. When possible, cabin cushions and other cushions should be taken indoors for dry storage to prevent mildew.
9. Pull all of your electronics and store them inside. Your compass, if built in, should be covered for the winter, as ultraviolet rays from the sun will "cloud" the compass and make it difficult to read.
10. Portable heads must be drained when stored in the boat. Remember to drain both the upper and lower tanks. Heads with deck pumpouts should have all water removed from the lines.

SECTION F: ELECTRICAL SYSTEMS

ACCESSORY WIRING COLOR CODE AND FUSE SIZES


<u>ACCESSORY</u>	<u>WIRE SIZE AND COLOR</u>	<u>FUSE/ BREAKER</u>	<u>LOCATION</u>
Bow Light	16 Ga. Gray	15.0	Accessory Panel
Aft Pole Light	16 Ga. Gray/White Stripe	15.0	Accessory Panel
Mast Light (forward bulb)	16 Ga. Gray/Red Stripe	15.0	Accessory Panel
Mast Light (aft bulb)	16 Ga. Gray/Black Stripe	15.0	Accessory Panel
Panel Lights	16 Ga. Dark Blue	15.0	Accessory Panel
Cabin Lights	16 Ga. Dark Blue/Green Stripe	10.0	Fuse Block
Cockpit Lights	16 Ga. Dark Blue	10.0	Accessory Panel
Spreader Lights	16 Ga. Dark Blue/Yellow	10.0	Accessory Panel
Bilge Pump (Forward):			
Rule 1100	16 Ga. Brown	5.0	Accessory Panel
Rule 1500	16 Ga. Brown/Black Stripe	8.0	Accessory Panel
Auto Float Switch (forward)	16 Ga. Brown/Red Stripe in line		Near Battery
Bilge Pump (Aft):			
Rule 1100	16 Ga. Brown	5.0	Accessory Panel
Rule 1500	16 Ga. Brown	8.0	Accessory Panel
Auto Float Switch (Aft)	16 Ga. Brown/White Stripe in line		Near Battery
Aerator Pump	16 Ga. Orange/2 Brown Stripes	2.0	Accessory Panel
Shower Pump			
(float switch)	16 Ga. Brown/Orange Stripe	4.0	Fuse Block
Water Pressure Pump (shower)	12 Ga. Orange/Red Stripe	15.0	Accessory Panel
Water Pressure Pump	16 Ga. Orange/Blue Stripe	2.5	Fuse Block
Washdown & Livewell Pump	12 Ga. Orange/Brown Stripe	15.0	Accessory Panel

Continued...


Continued...


<u>ACCESSORY</u>	<u>WIRE SIZE AND COLOR</u>	<u>FUSE/ BREAKER</u>	<u>LOCATION</u>
Bilge Blower	16 Ga. Yellow	10.0	Accessory Panel
Horn	12 Ga. Orange/White Stripe	15.0	Accessory Panel
Windshield Wiper (actuator)	16 Ga. Orange/Green Stripe	5.0	Accessory Panel
Port	16 Ga. Orange/Black Stripe	5.0	Accessory Panel
Starboard	16 Ga. Orange		
Windshield Wiper (position)	14 Ga. Orange/Purple Stripe	*	Accessory Panel
Windlass Solenoids	14 Ga. Orange/Yellow Stripe	*	Accessory Panel
	4 Ga. Red	*	Near Battery
Windlass Power Lead	4 Ga. Black	*	Near Battery
Accessory	16 Ga. Orange	10.0	Accessory Panel
Accessory Grounds (Ind)	16 Ga. Black	N/A	
Accessory Grounds Mains	10 Ga. Black	N/A	
Hydraulic Trim Tabs	16 Ga. Harness (Supplied)	20.0	Fuse Block
Main Fuel Tank (Sender)	16 Ga. Pink	2.0	Accessory Panel
Auxiliary Fuel Tank (Sender)	16 Ga. Pink/White Stripe	2.0	Accessory Panel
Accessory Panel Power Lead	10 Ga. Red circuit breaker	40.0	Near Battery
Ignition Switch Power Lead	10 Ga./16 Ga. Red in line	20.0	Ignition
Primer Pumps (Port)	16 Ga. Pink/Red	5.0	Accessory Panel
(Starboard)	16 Ga. Pink/Blue	5.0	Accessory Panel
VHF (Hardtop Radio Box)	10 Ga. Red/White in line	20.0	Near Battery


TYPICAL OUTBOARD INSTRUMENT AND SWITCH PANEL WIRING DIAGRAM

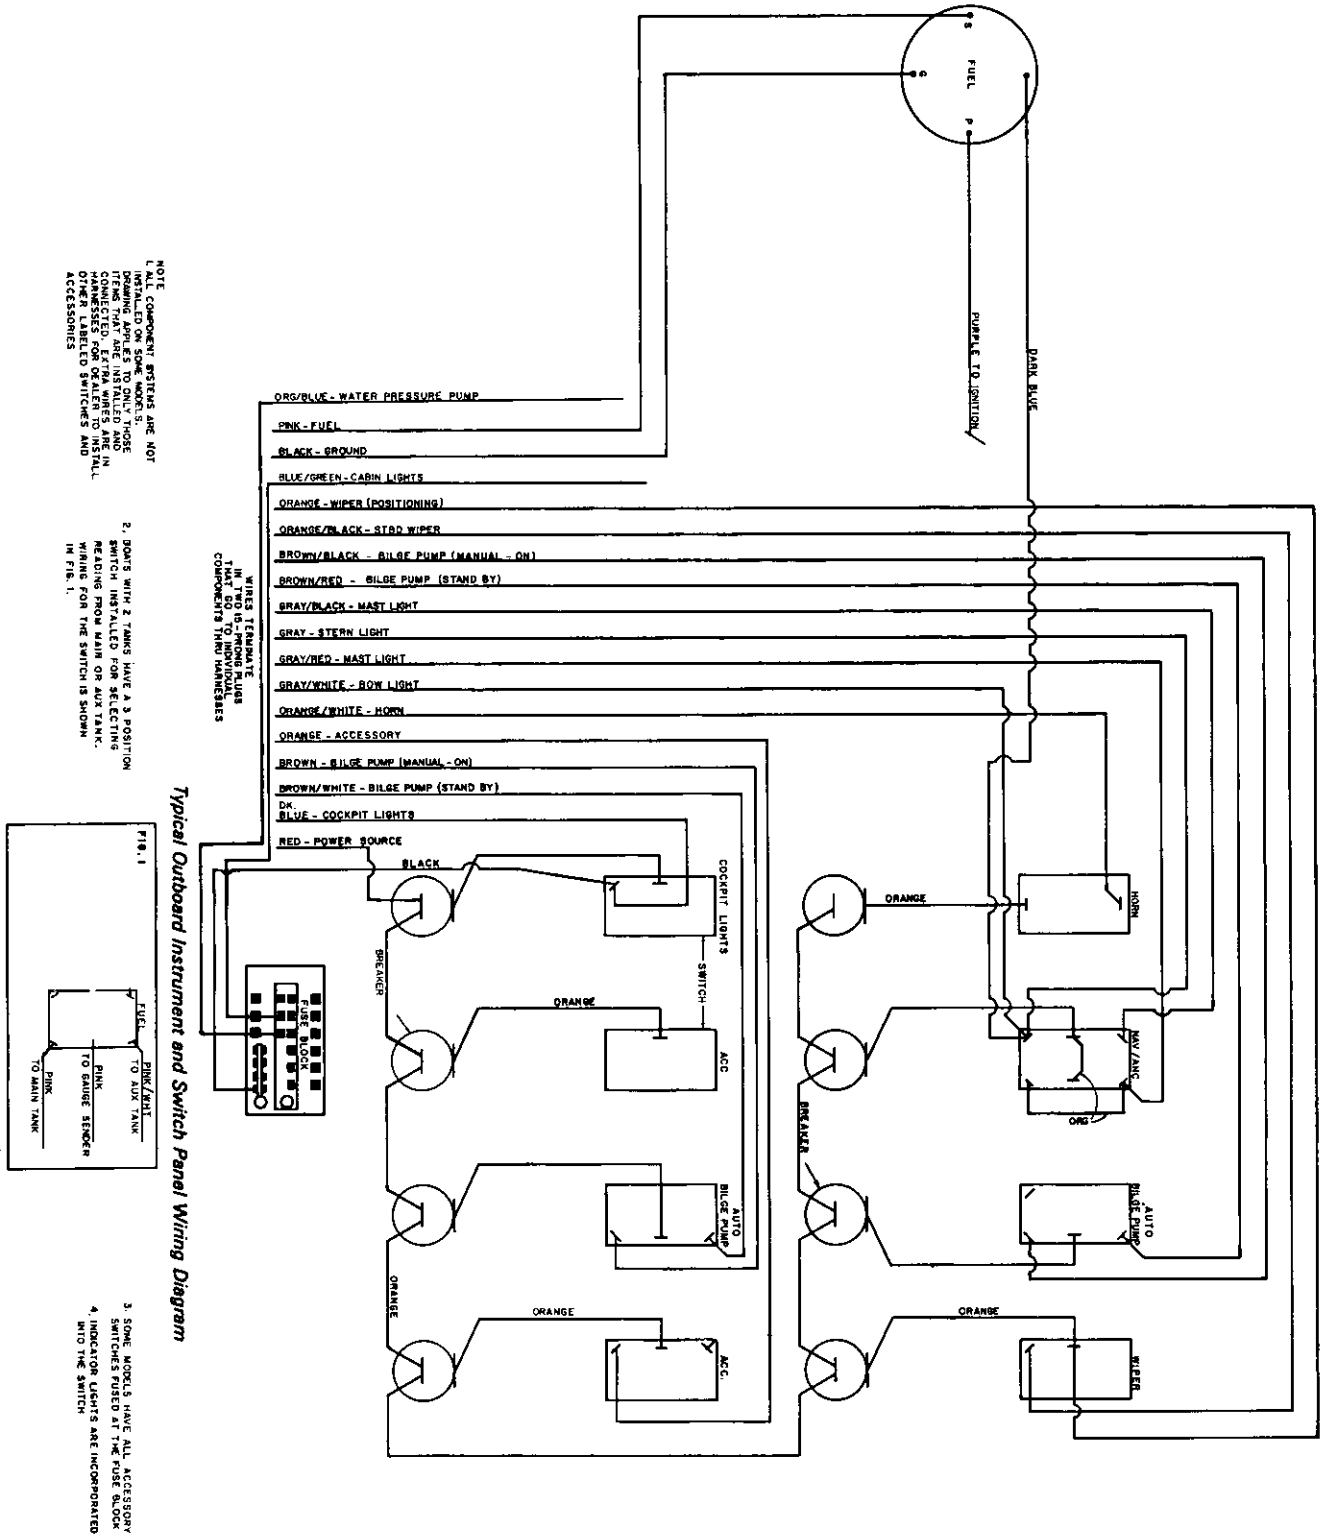


TYPICAL STERN DRIVE INSTRUMENT AND SWITCH PANEL WIRING DIAGRAM

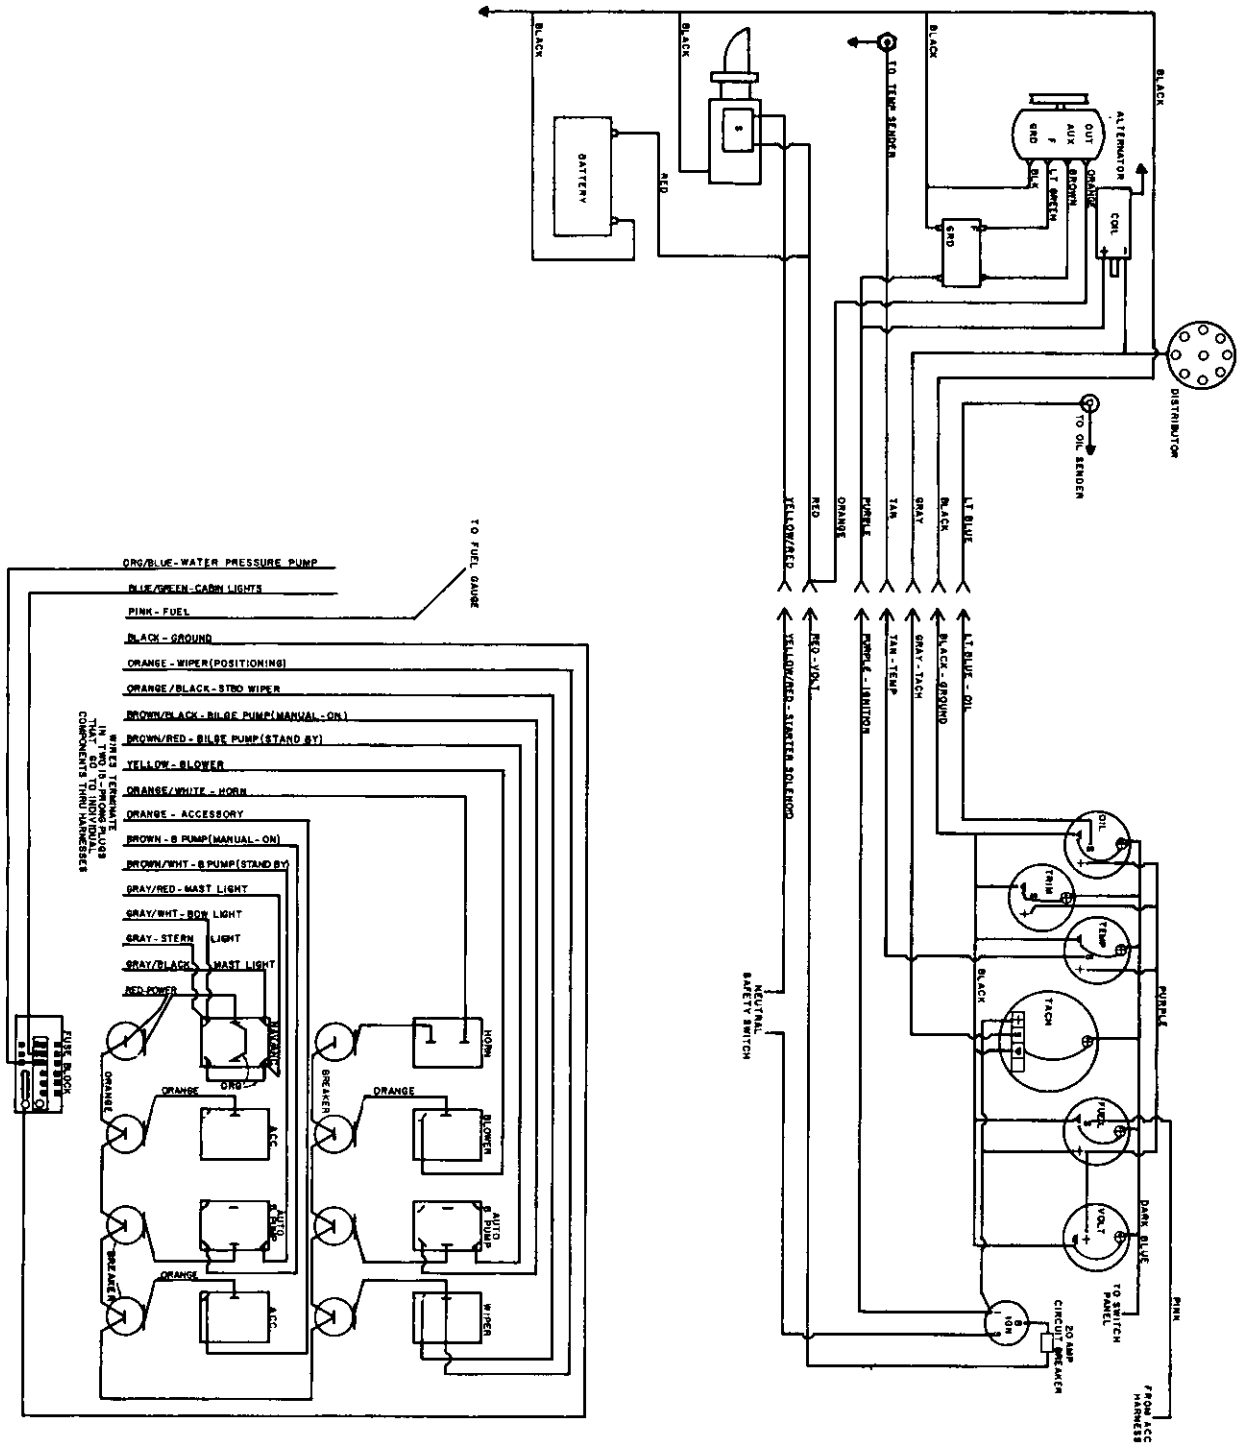

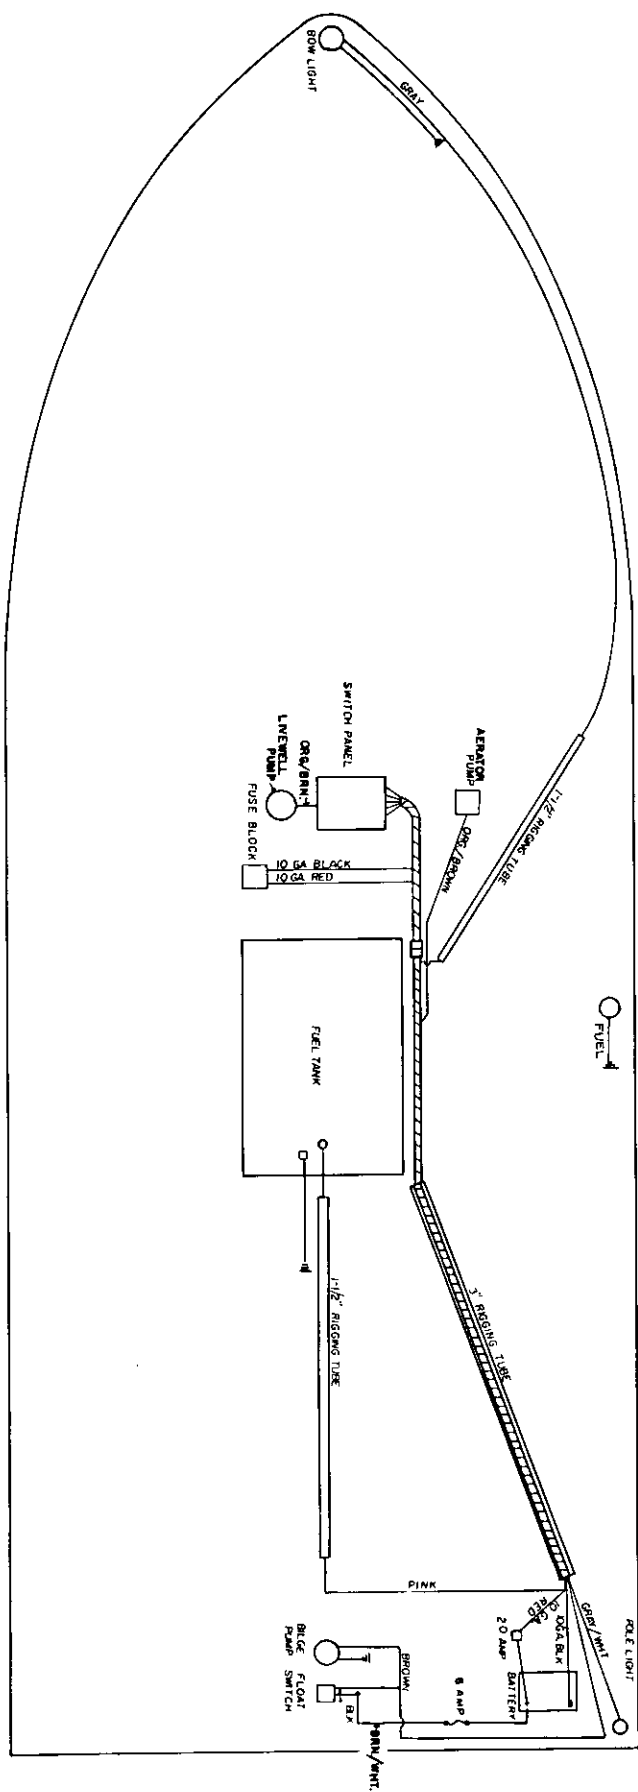


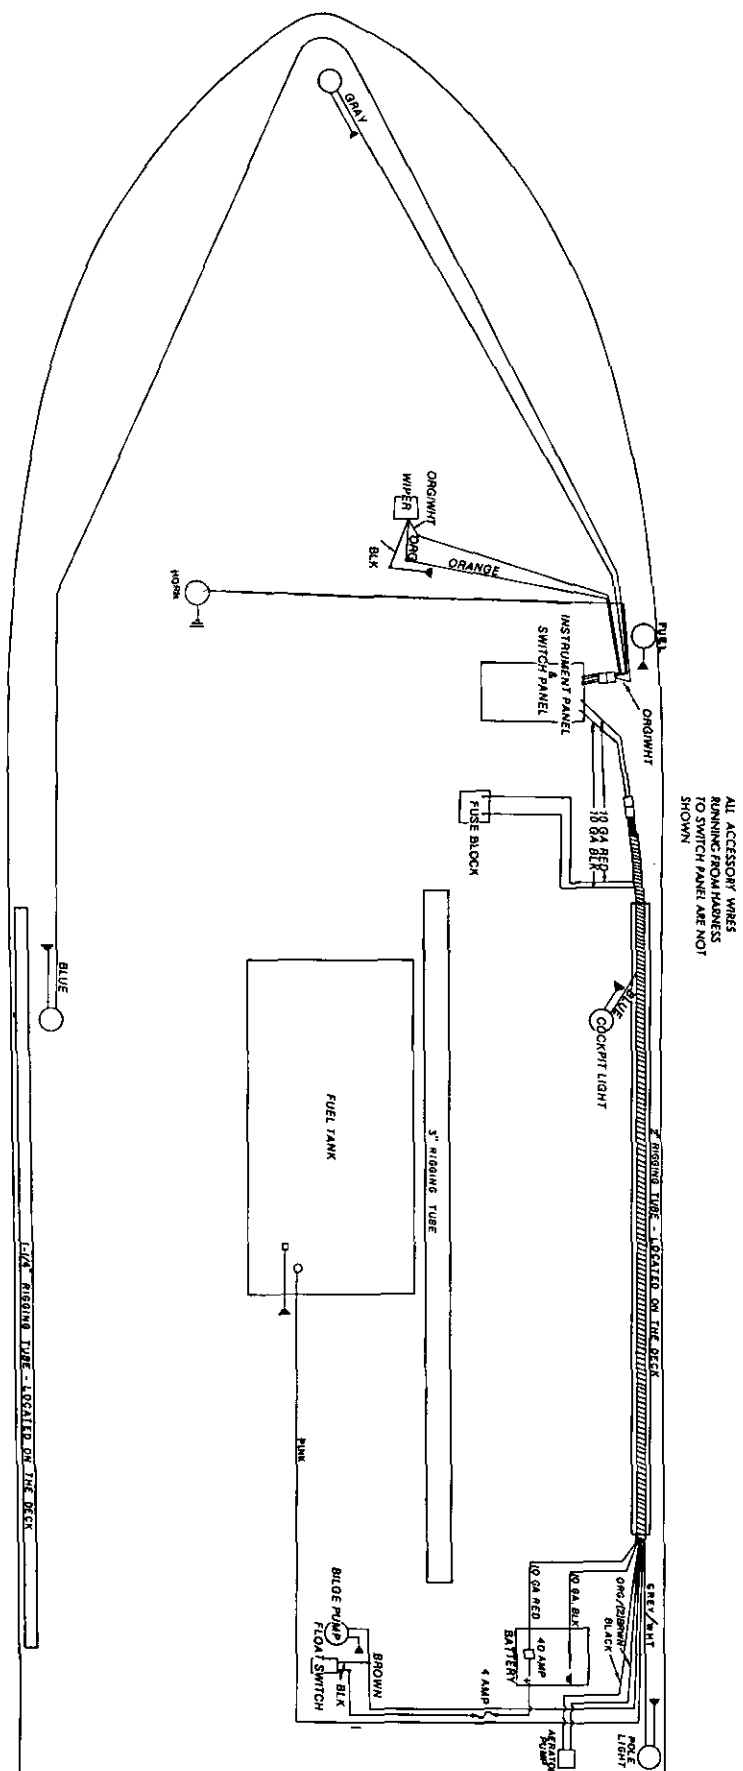


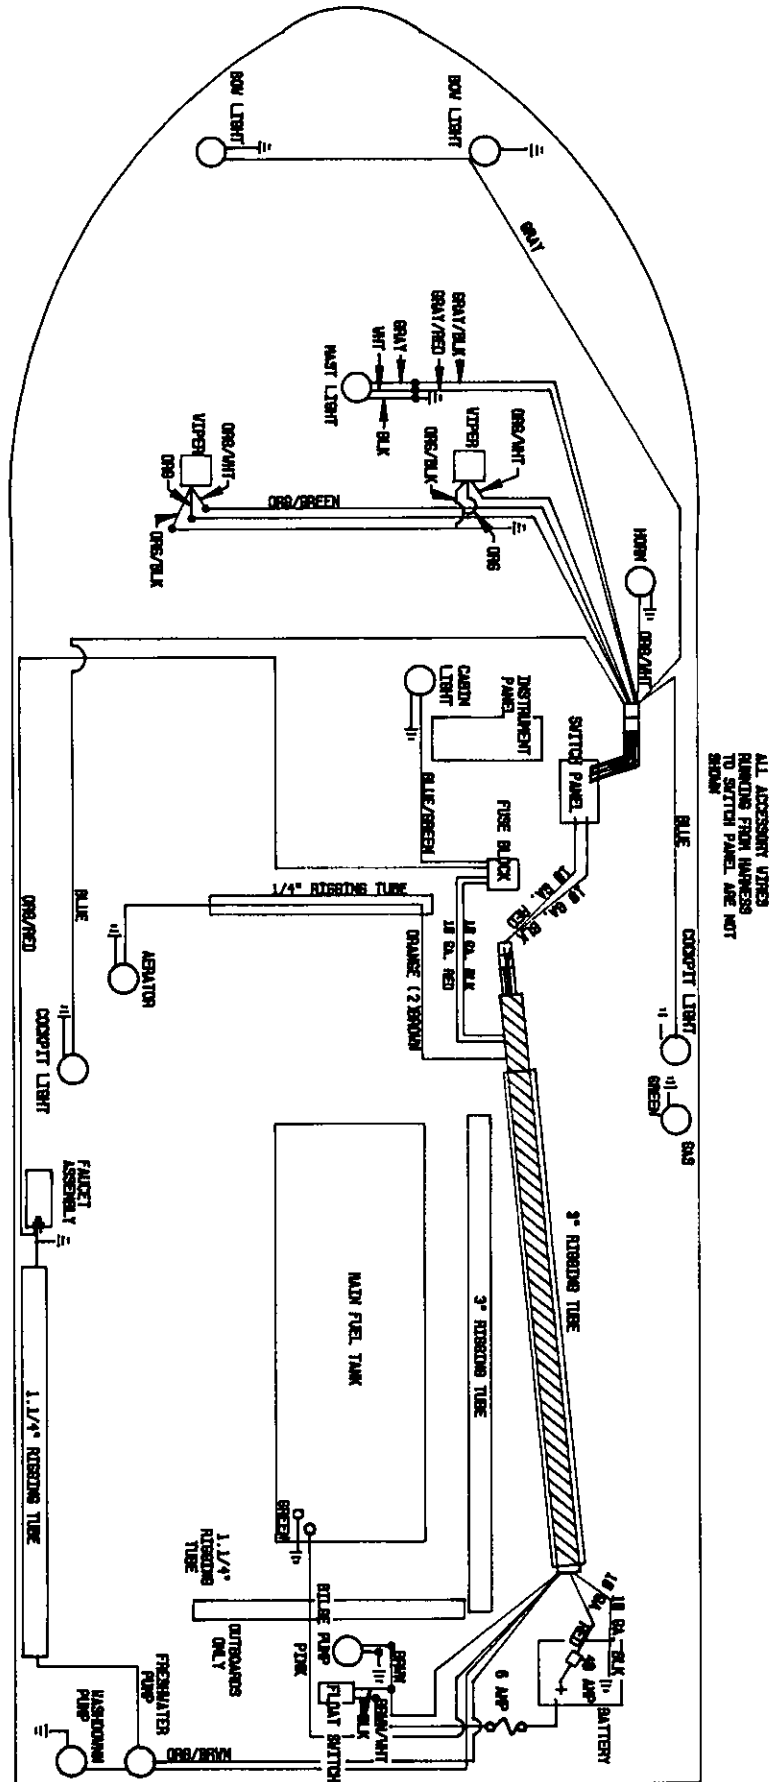


ACCESSORY WIRING DIAGRAM: 208 ADVENTURE

ACCESSORY WIRING DIAGRAM: 209 ESCAPE

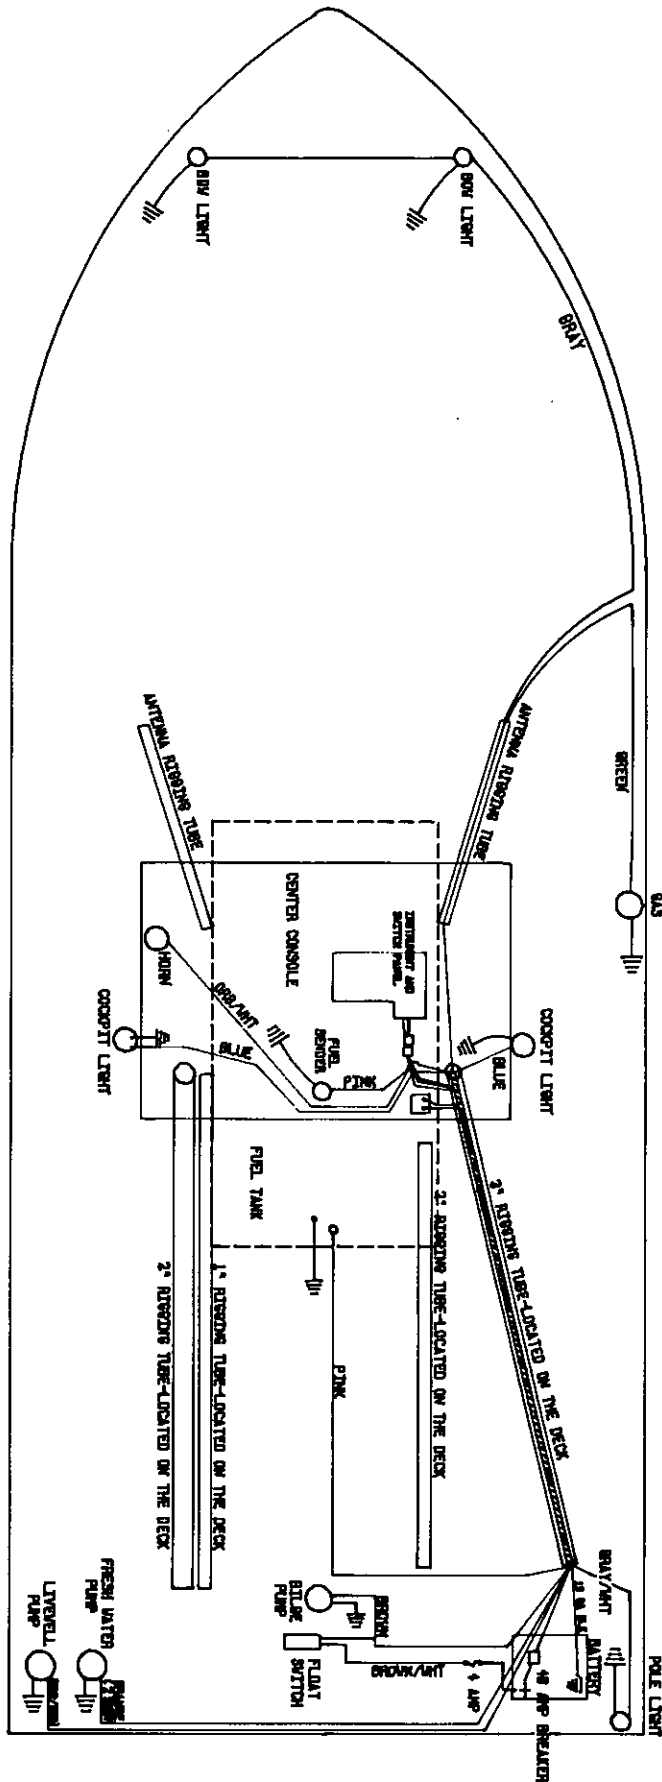


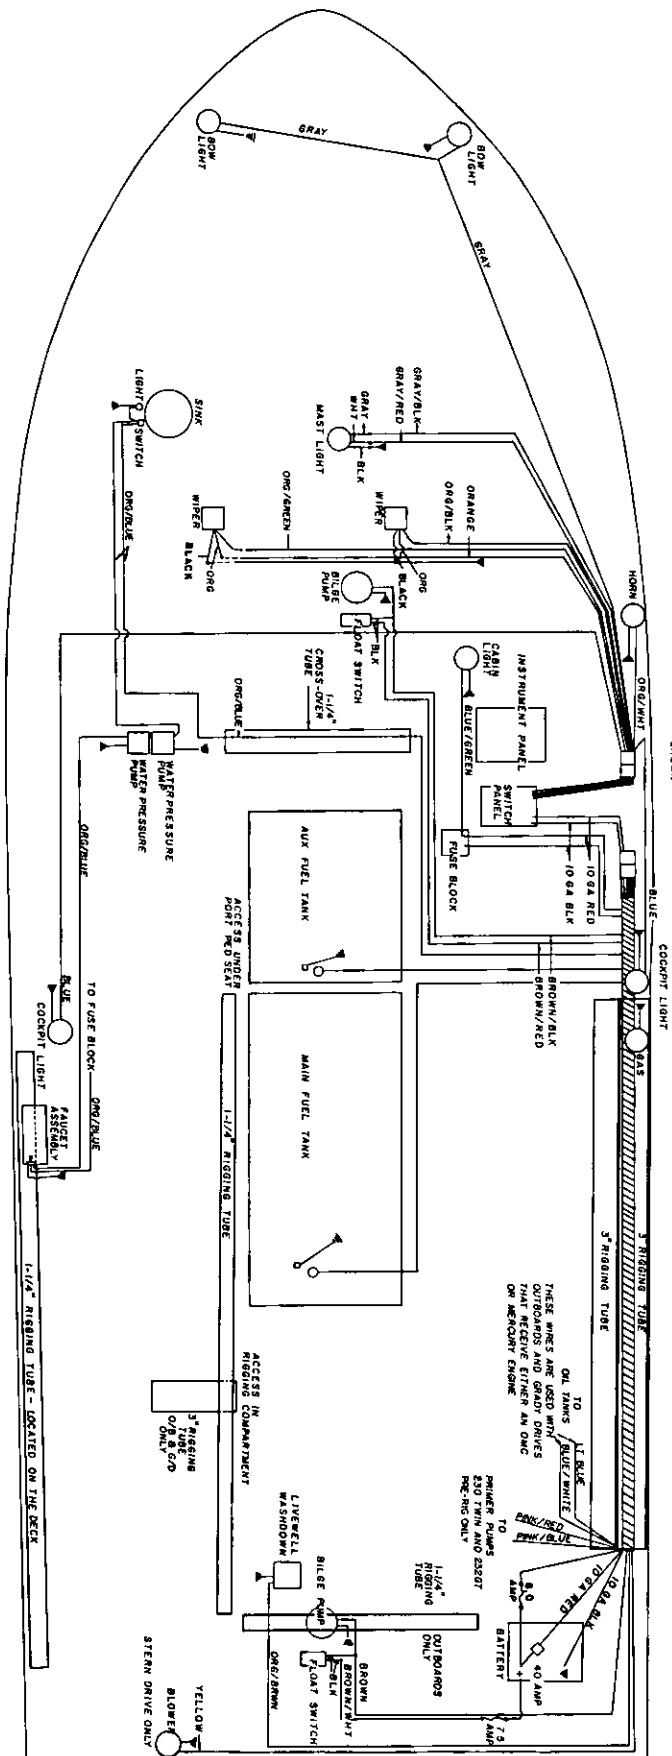


ACCESSORY WIRING DIAGRAM: 23' GULFSTREAM SERIES

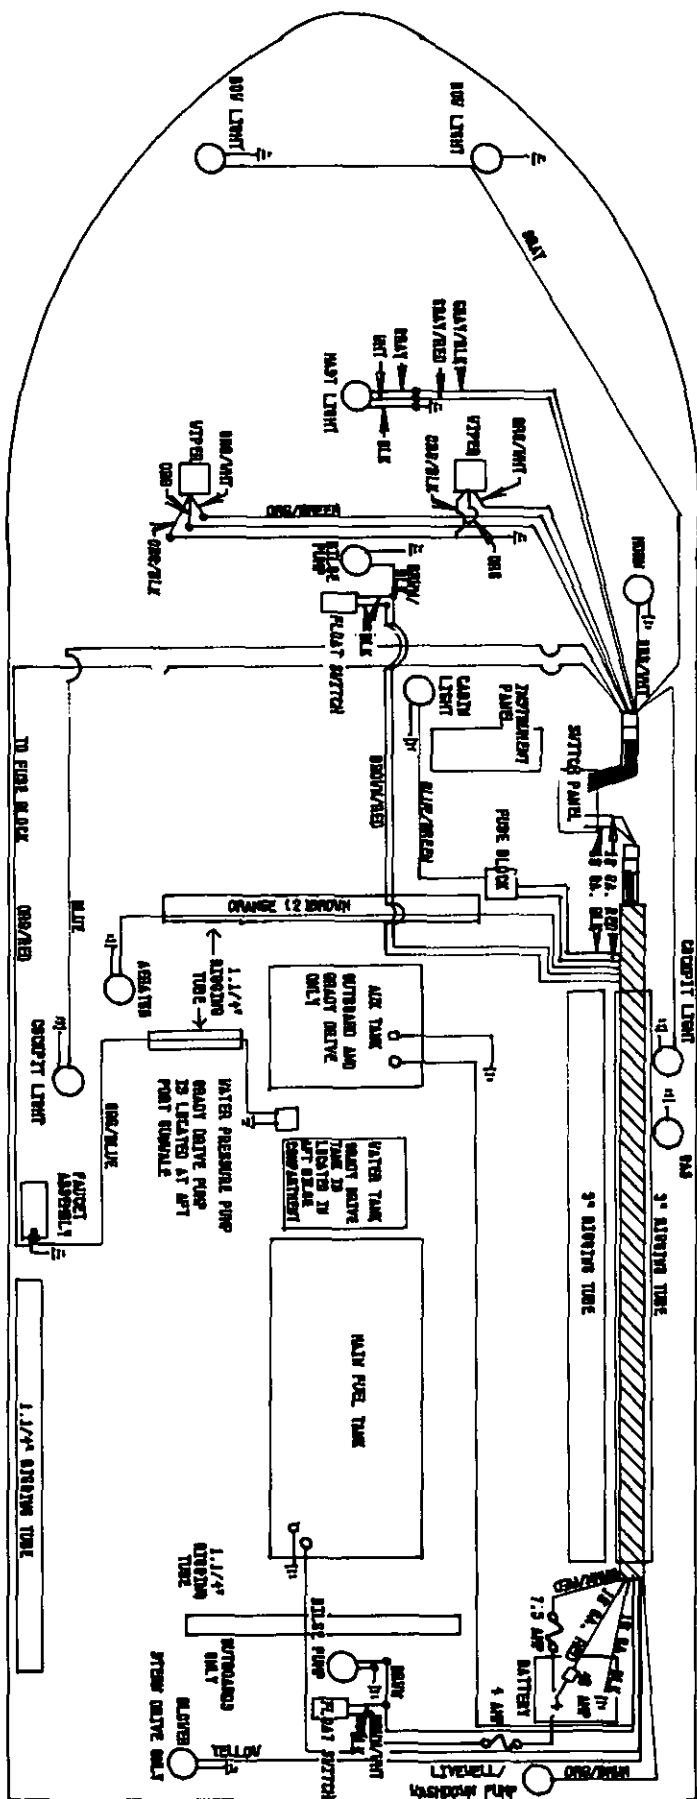



ACCESSORY WIRING DIAGRAM: 22' SEAFARER AND 24' EXPLORER SERIES

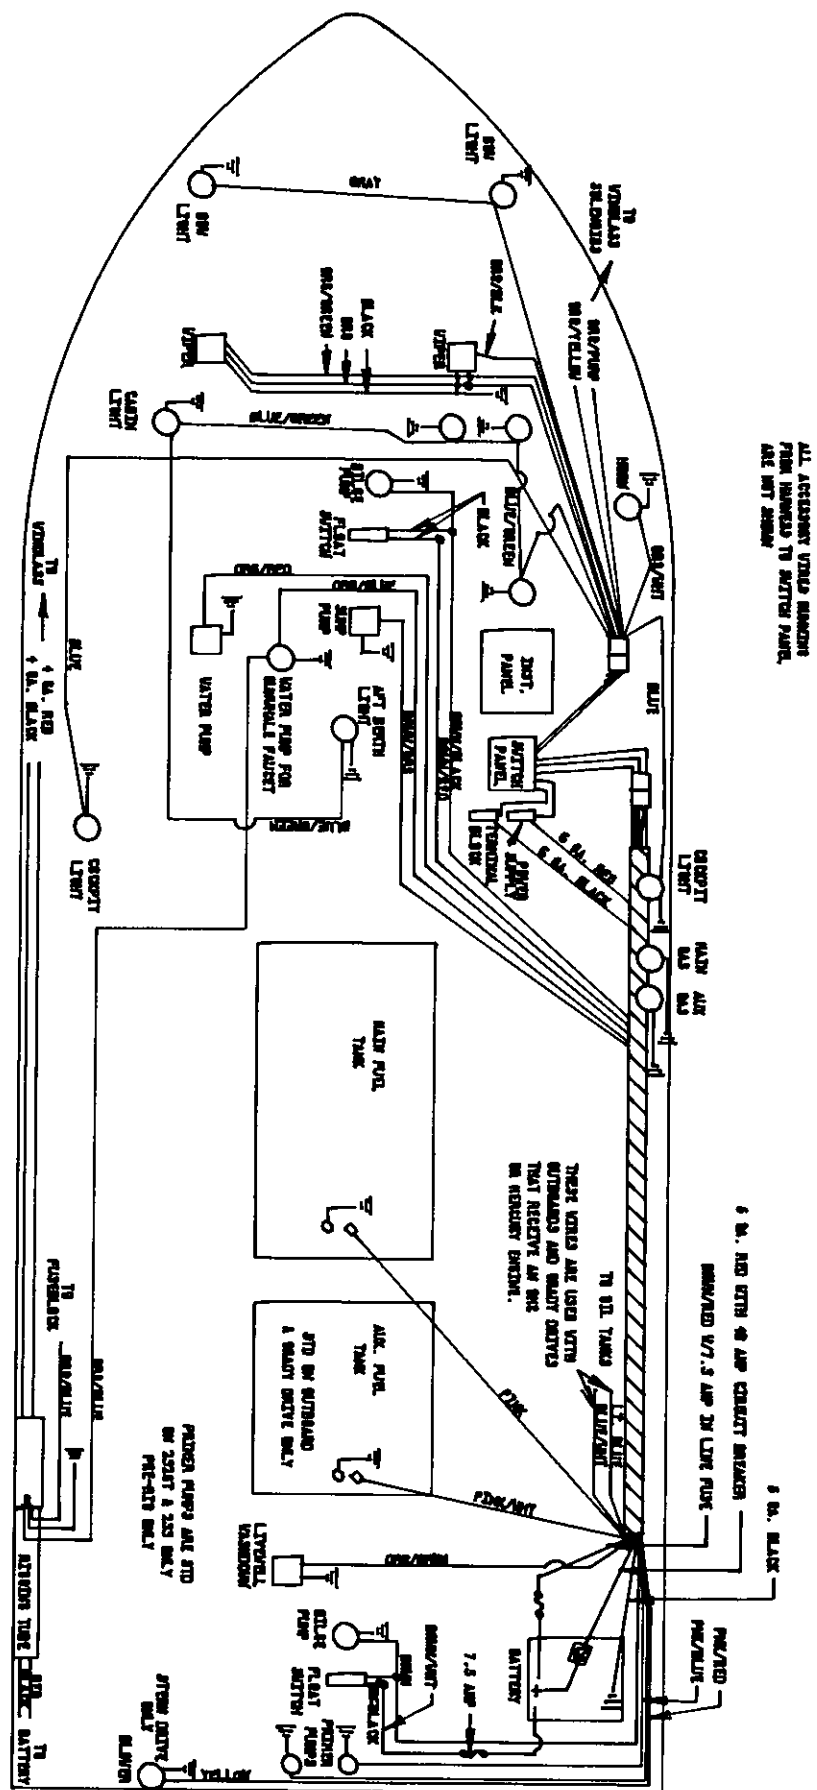

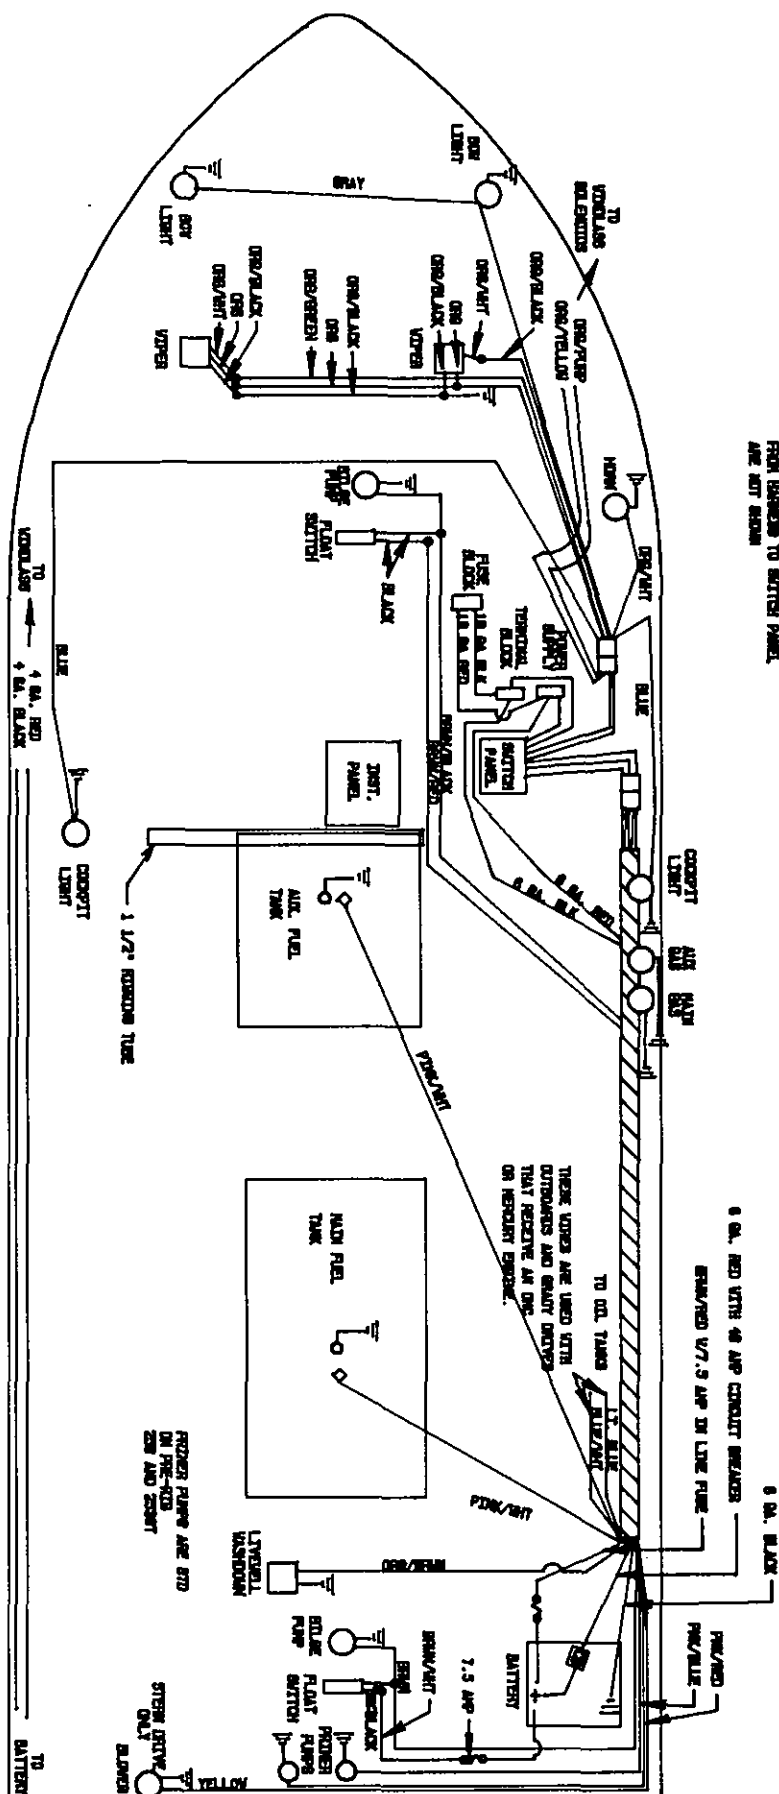


ACCESSORY WIRING DIAGRAM: 25' DOLPHIN SERIES

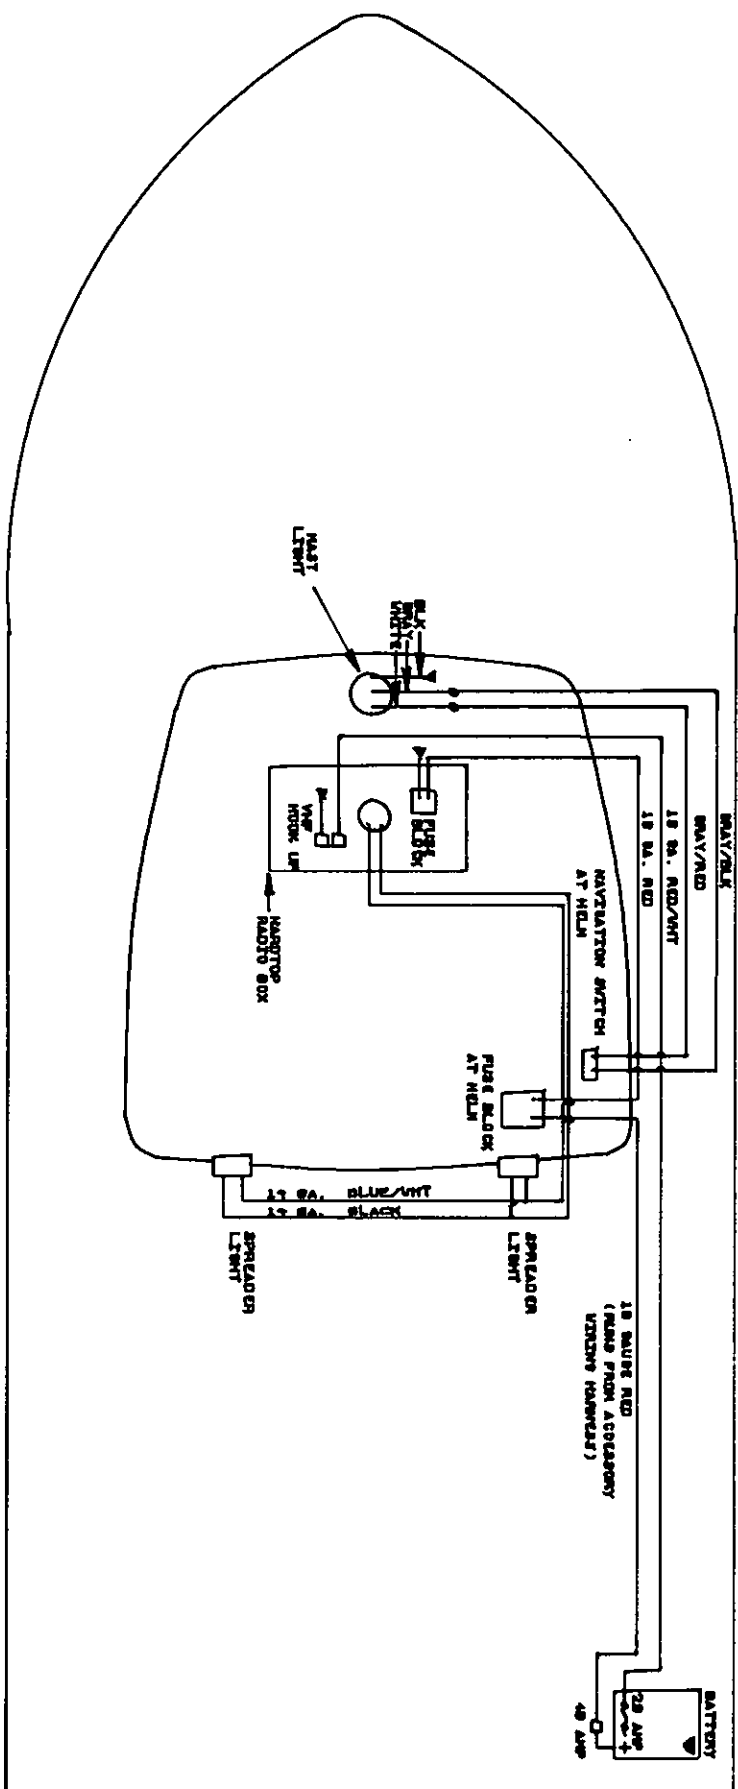


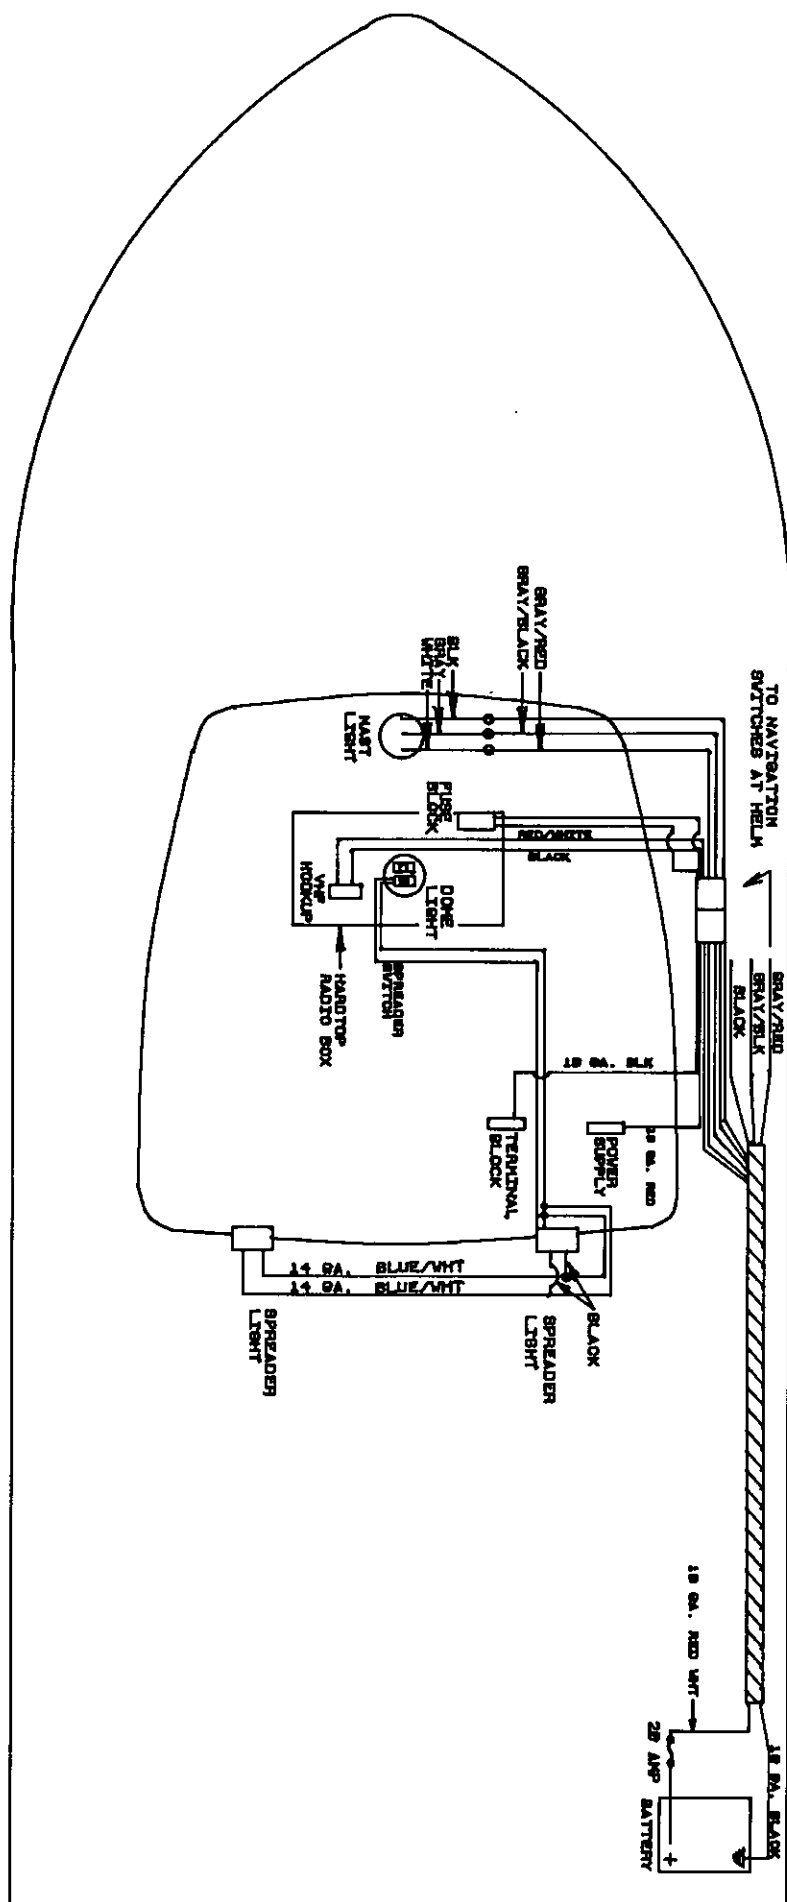

HARDTOP WIRING DIAGRAM: 25 SAILFISH/25 DOLPHIN

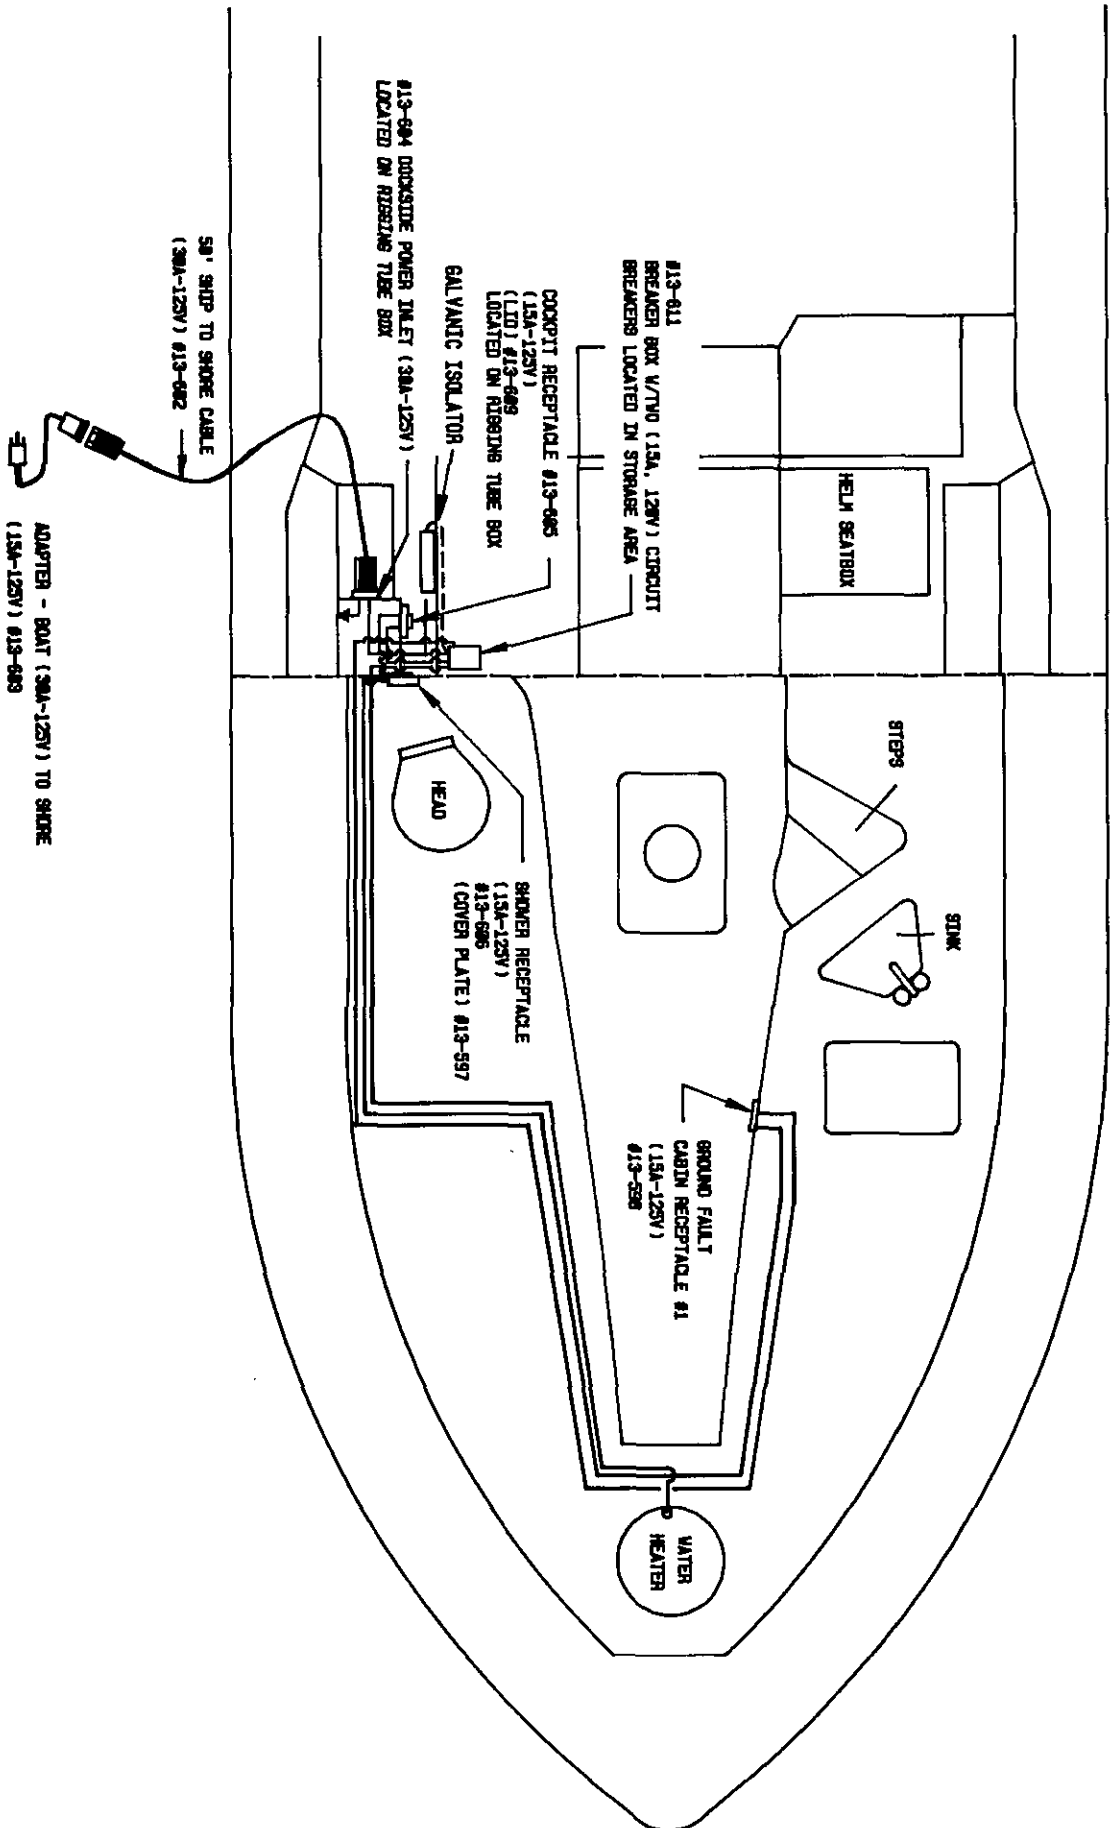


DOCKSIDE POWER WIRING DIAGRAM: 25' SAILFISH SERIES

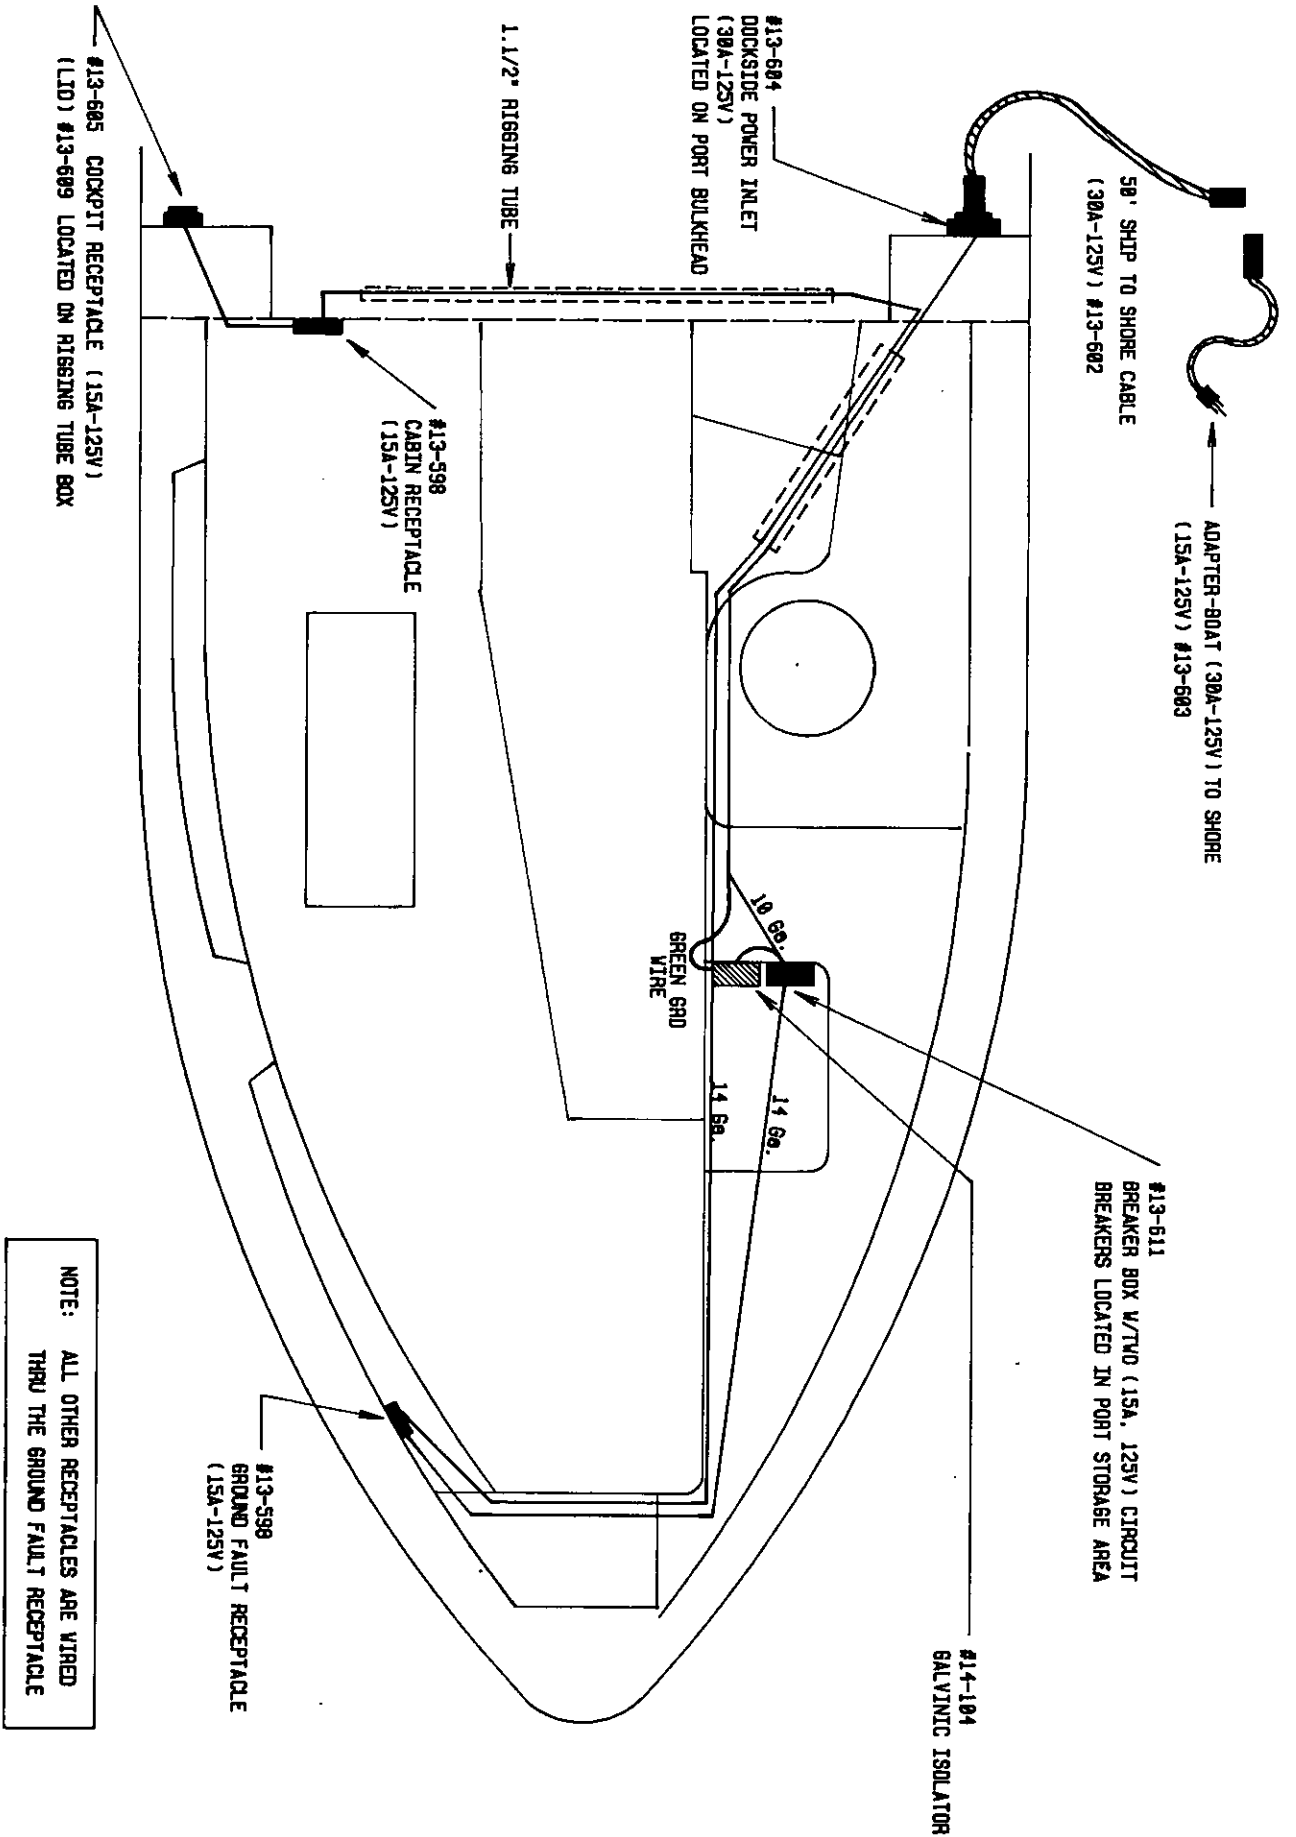

DOCKSIDE POWER WIRING DIAGRAM: 25' DOLPHIN SERIES

AC WIRING SCHEMATIC AND WARNING LABEL

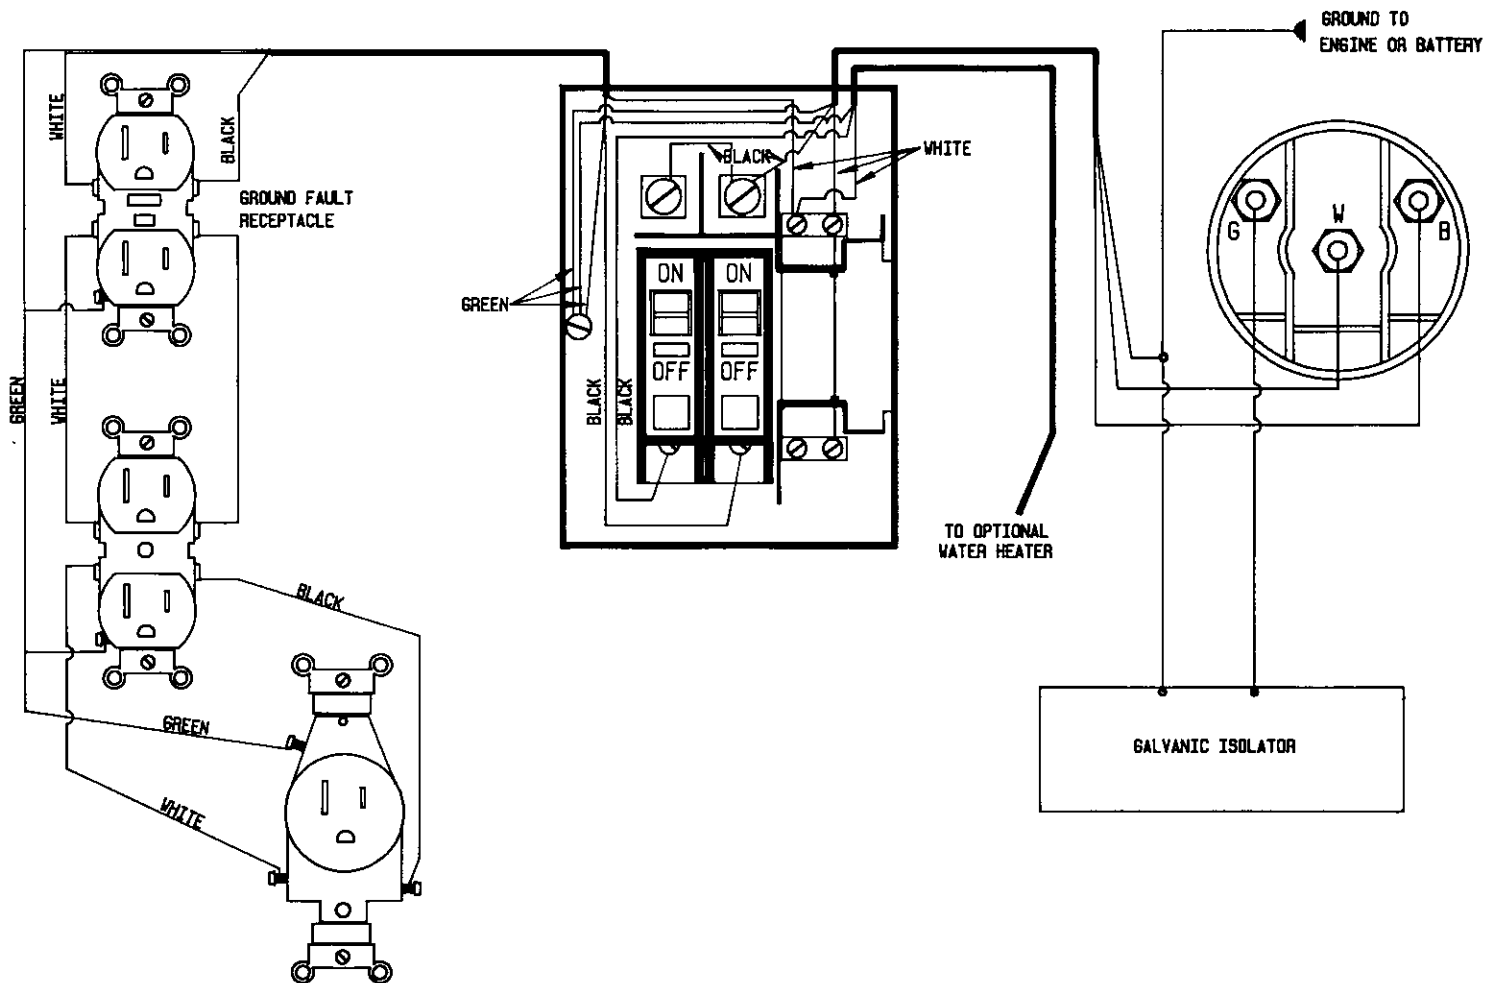

WARNING!


- (1) TURN OFF THE BOAT'S SHORE CONNECTION SWITCH BEFORE CONNECTING OR DISCONNECTING SHORE CABLE.
- (2) CONNECT SHORE-POWER CABLE AT THE BOAT FIRST.
- (3) DISCONNECT SHORE-POWER CABLE AT SHORE-OUTLET FIRST.
- (4) CLOSE SHORE-POWER INLET COVER TIGHTLY.
- (5) DO NOT ALTER SHORE-POWER CABLE CONNECTORS.

SECTION G: WATER SYSTEMS

HEAD OPERATING INSTRUCTIONS FOR 25' SAILFISH SERIES

Follow these instructions for operating the marine head flush knob:

1. Make sure the water inlet seacock, located on the starboard side of the forward bilge, is open (the seacock handle should be in the vertical position). See PLUMBING diagram below.
2. To fill the toilet with water, pull the valve handle (located on the right hand side of the toilet) to the vertical position and pump the knob two or three times.
3. To flush the toilet, first leave the valve handle open in the vertical position and pump knob two or three times to allow more water into the toilet. The toilet should then be flushed dry by closing valve handle by returning it to the horizontal position and pumping knob until all water is removed from the toilet bowl. The toilet should be left in the "flush dry" position when not in use.
4. If boat is moored and unoccupied, the water inlet seacock should be closed (the seacock handle should be in the horizontal position).

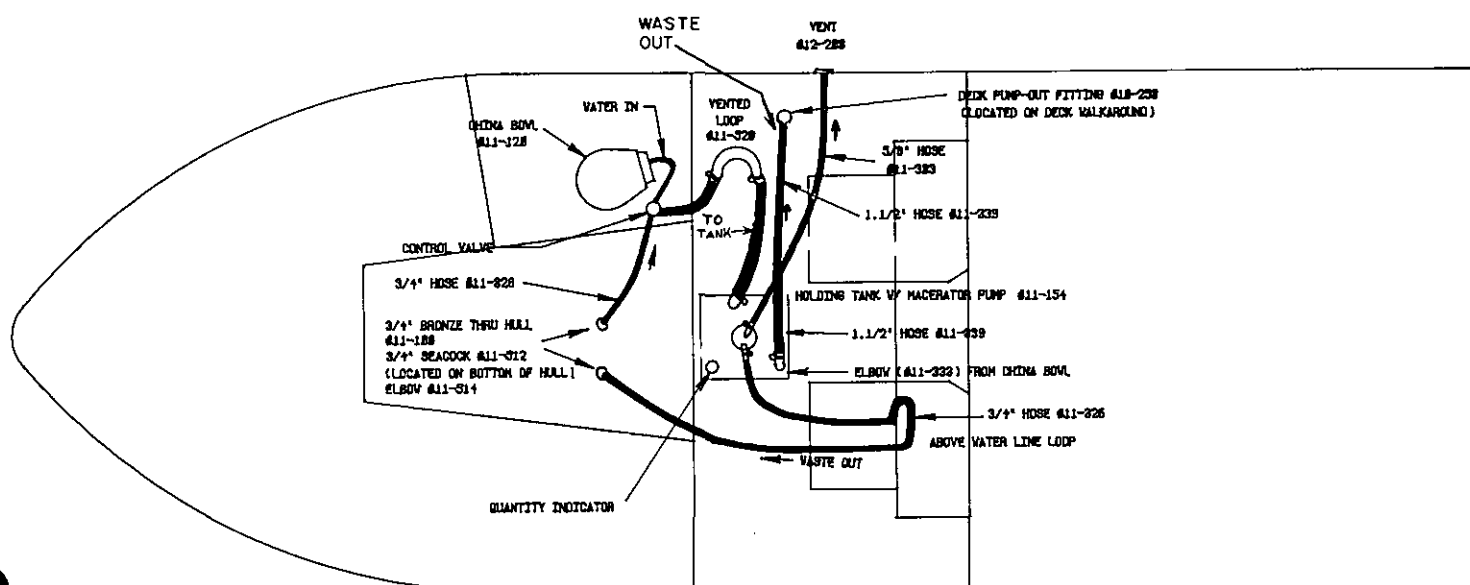


IN-LINE MACERATOR INSTRUCTIONS

This marine head system utilizes a portable head with both a deck pump-out fitting and an attached remote macerator pump. This system enables the owner to remove waste at a dockside pump-out station or discharge directly overboard.


To macerate and pump overboard, first make sure the seacock is open, and then place Y-valve in the discharge position. Next, press the macerator discharge button. After discharge, be sure to close the seacock.


HEAD DISCHARGE BUTTON

To empty the holding tank overboard, open the discharge seacock, located in the forward bilge on the port side. Turn the monitor on at the central panel. Note that the monitor switch must be on in order to operate the discharge button. Press the discharge button until lights on the control panel indicate the tank is empty. After emptying the holding tank, the seacock handle should be closed immediately (the seacock handle should be in the horizontal position). If the seacock is not closed after use, water may enter the system and refill the holding tank. **IMPORTANT!** Overboard discharge must be secured in the closed position within the required offshore limits. Consult local authorities concerning specific regulations and how they may apply to your area.

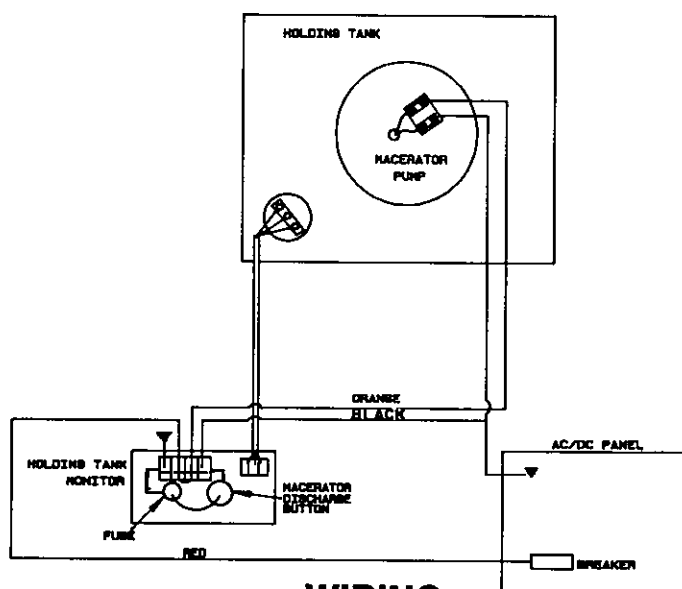


WIRING

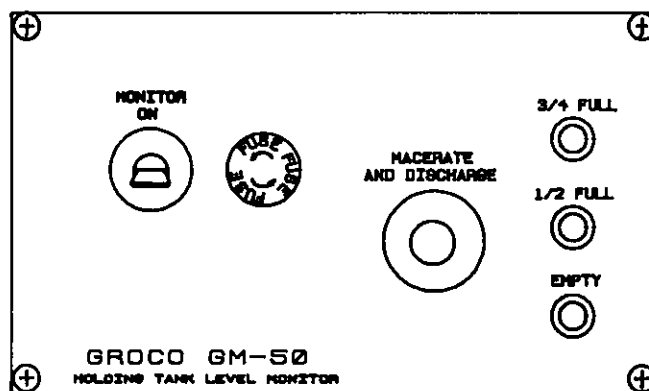

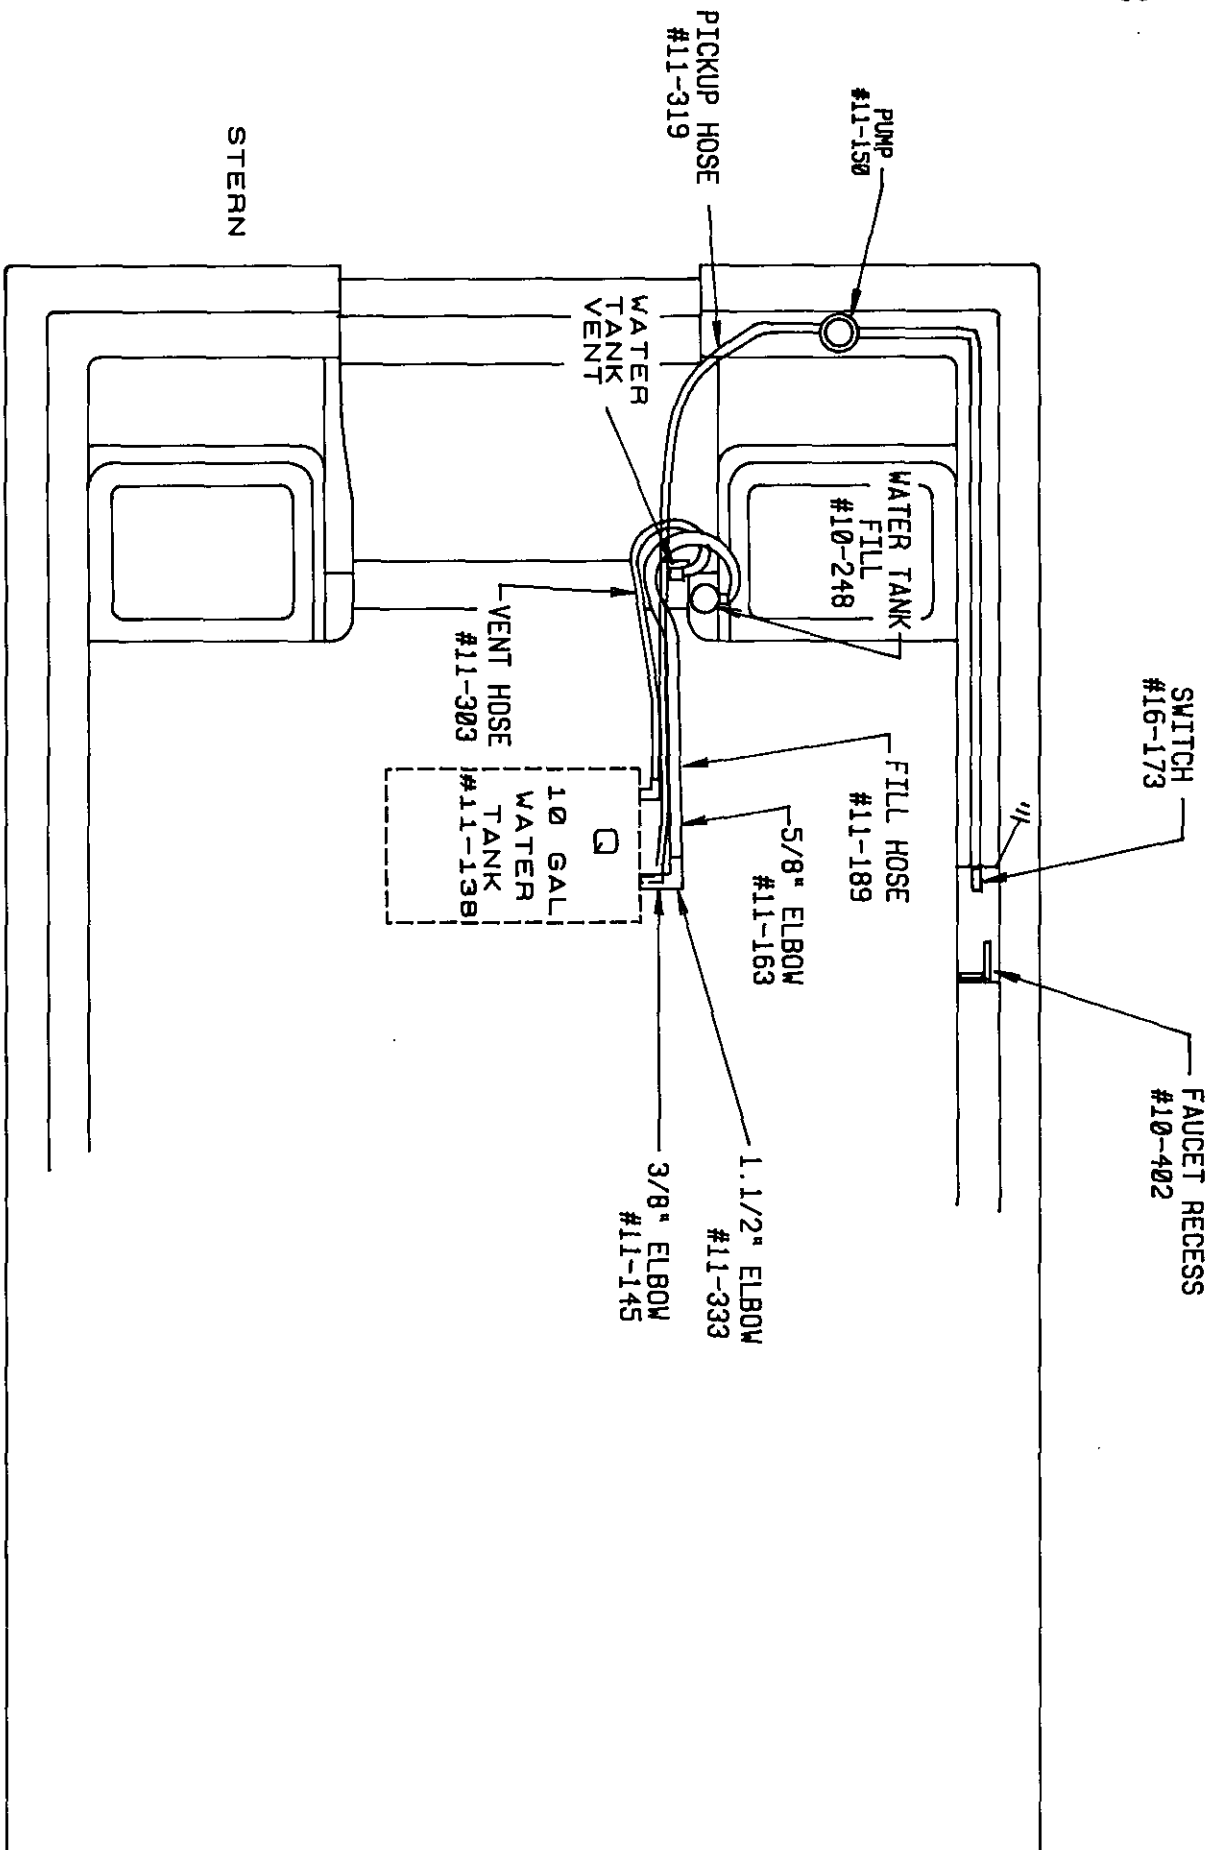



FRESH WATER SYSTEM FOR 209 ESCAPE

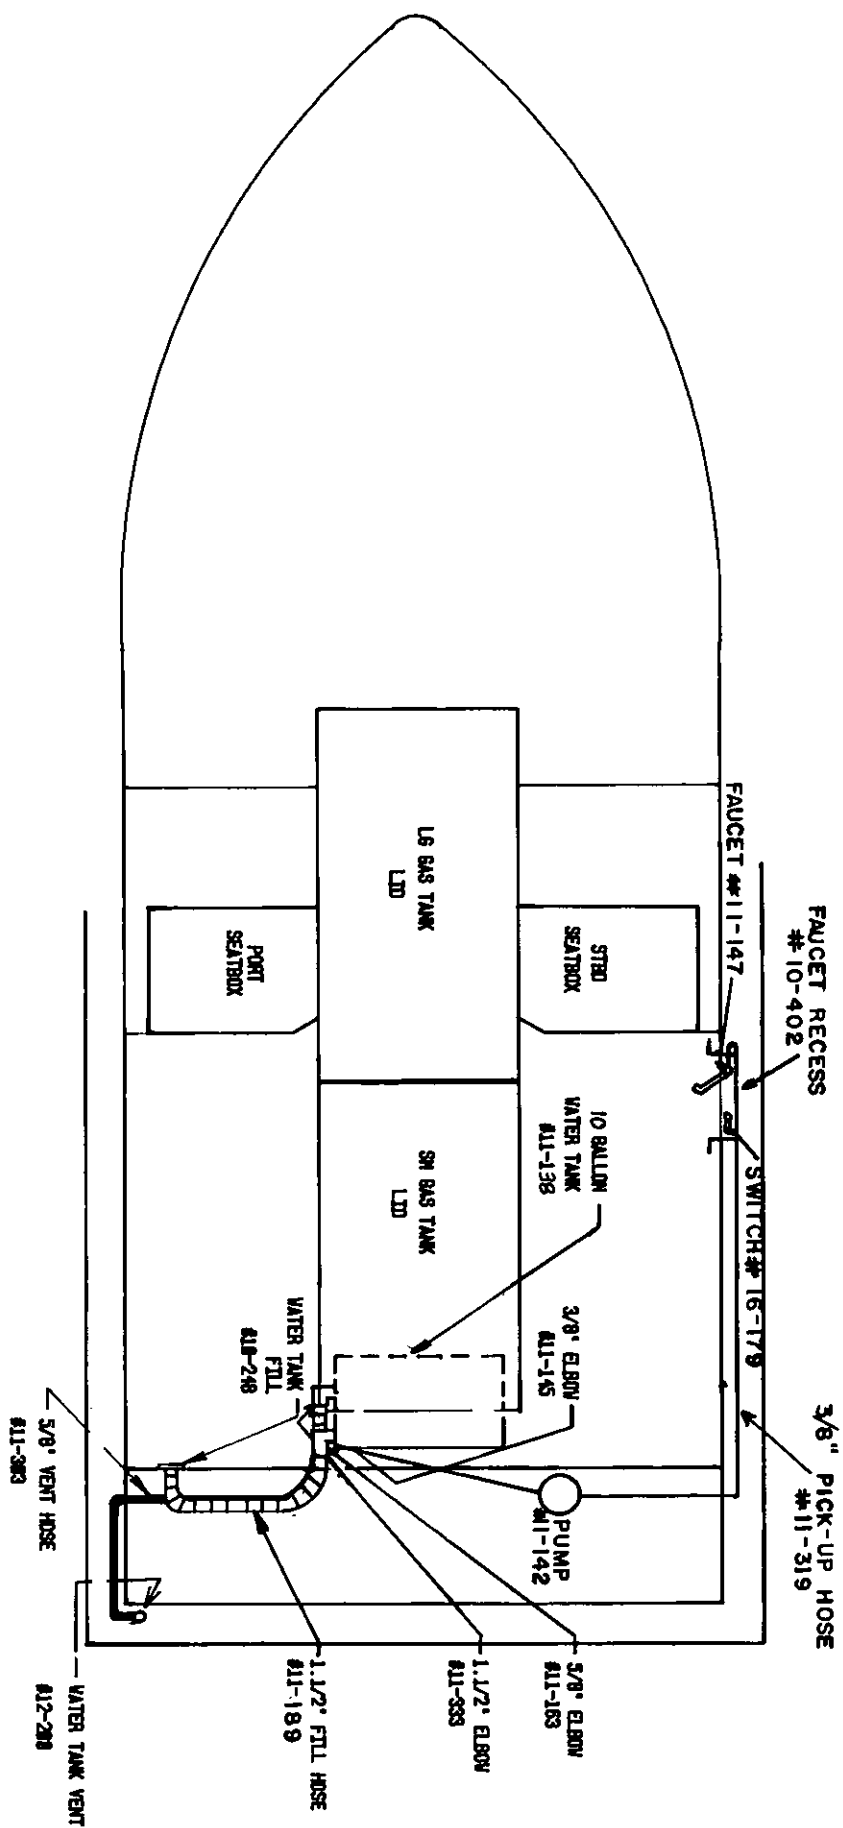


FRESH WATER SYSTEM FOR 22' SERIES

FRESH WATER SYSTEM FOR 23' SERIES

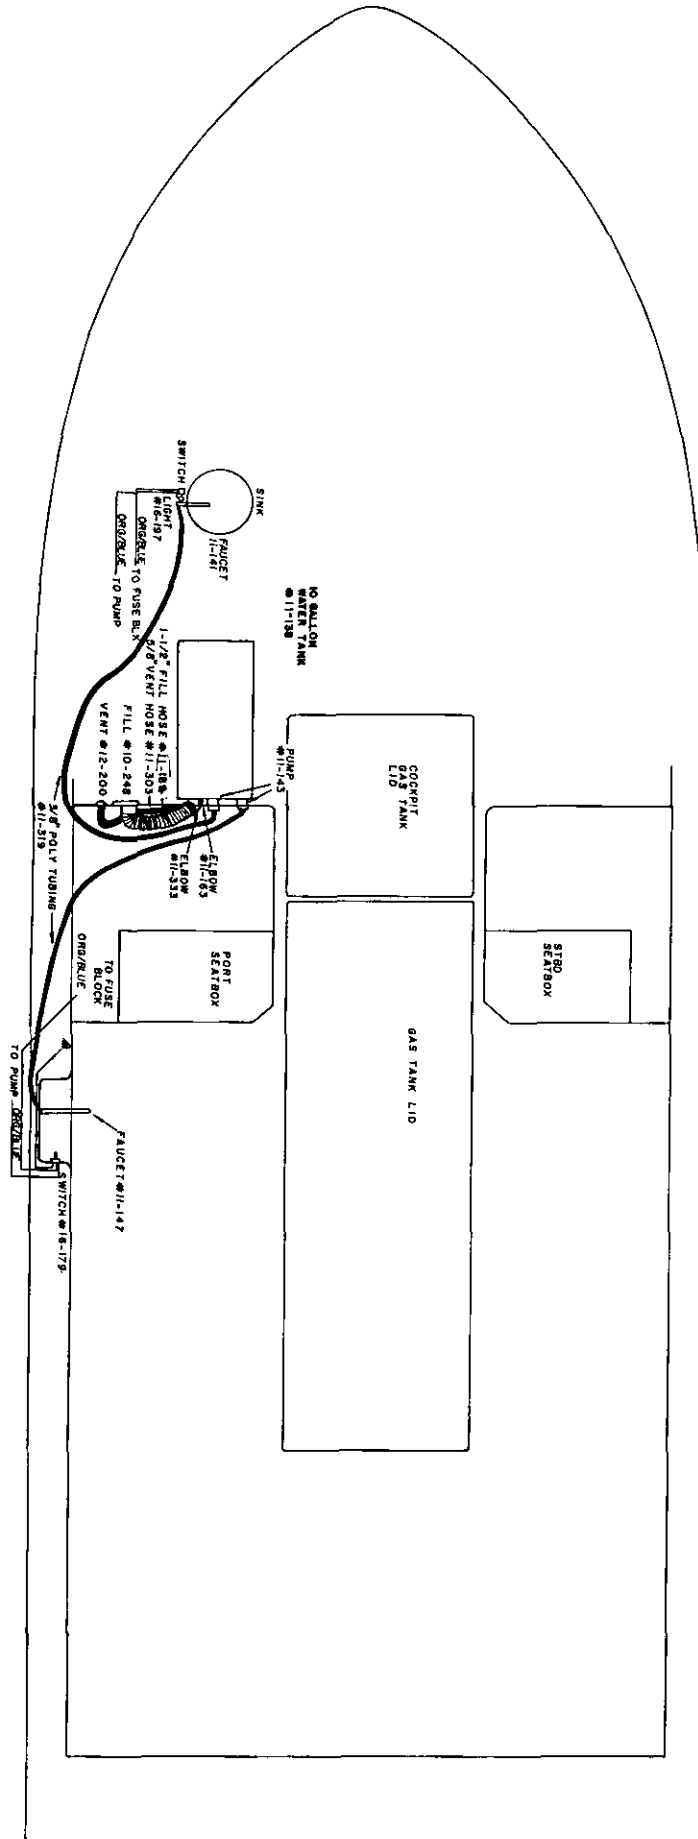

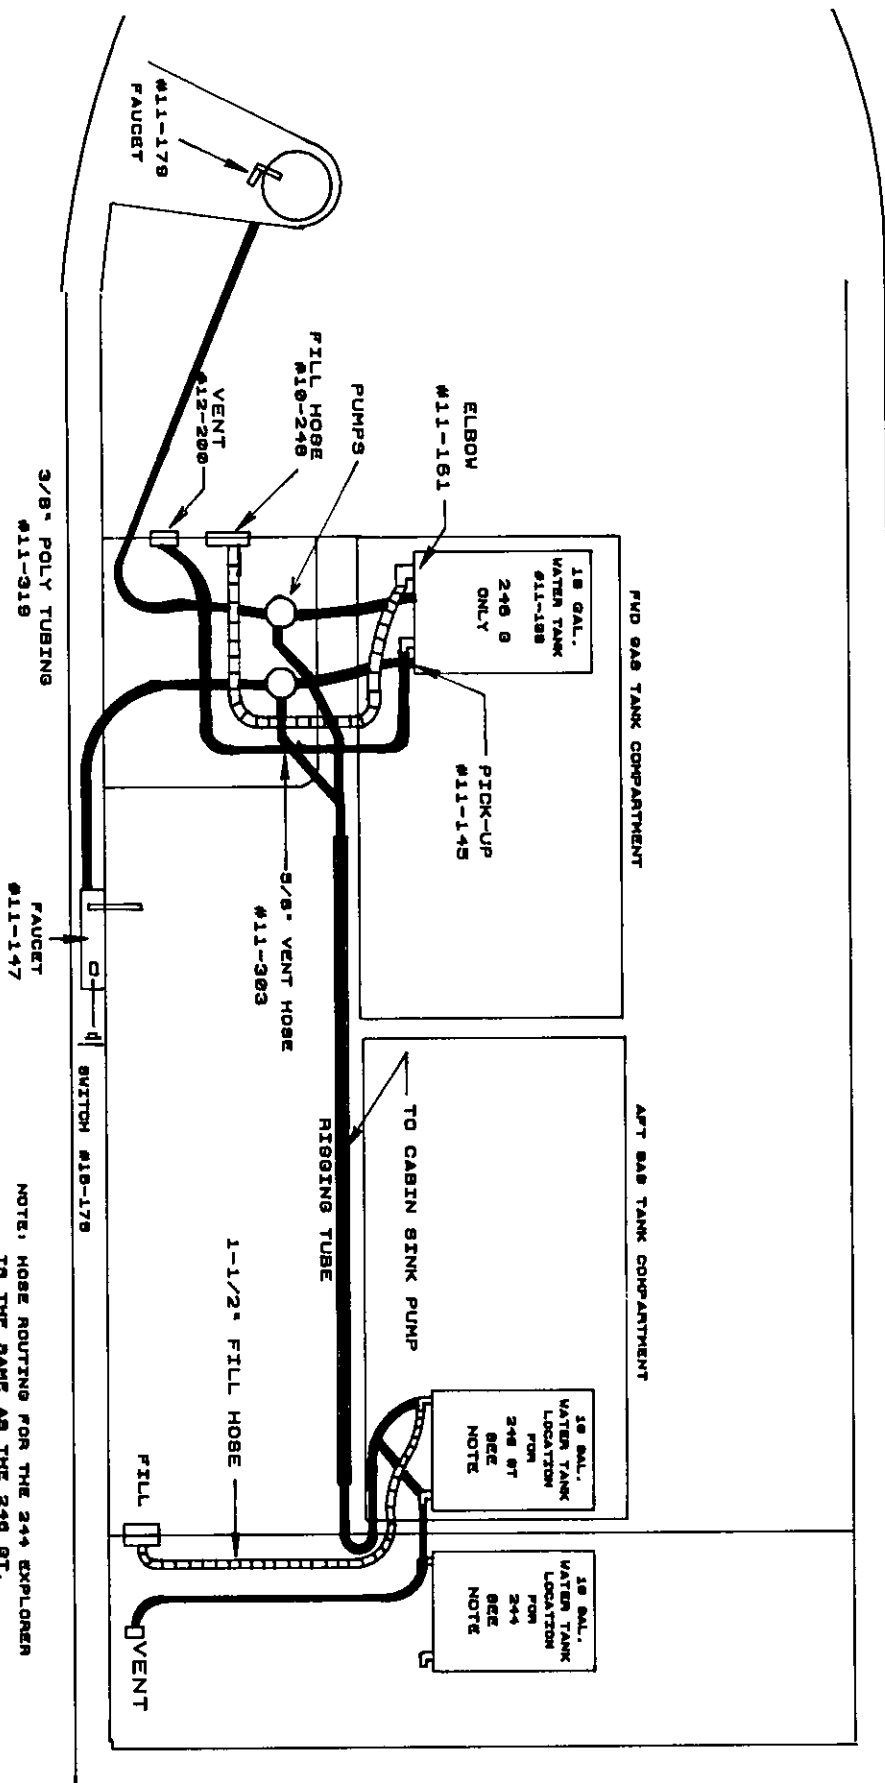


FRESH WATER SYSTEM FOR 24' SERIES

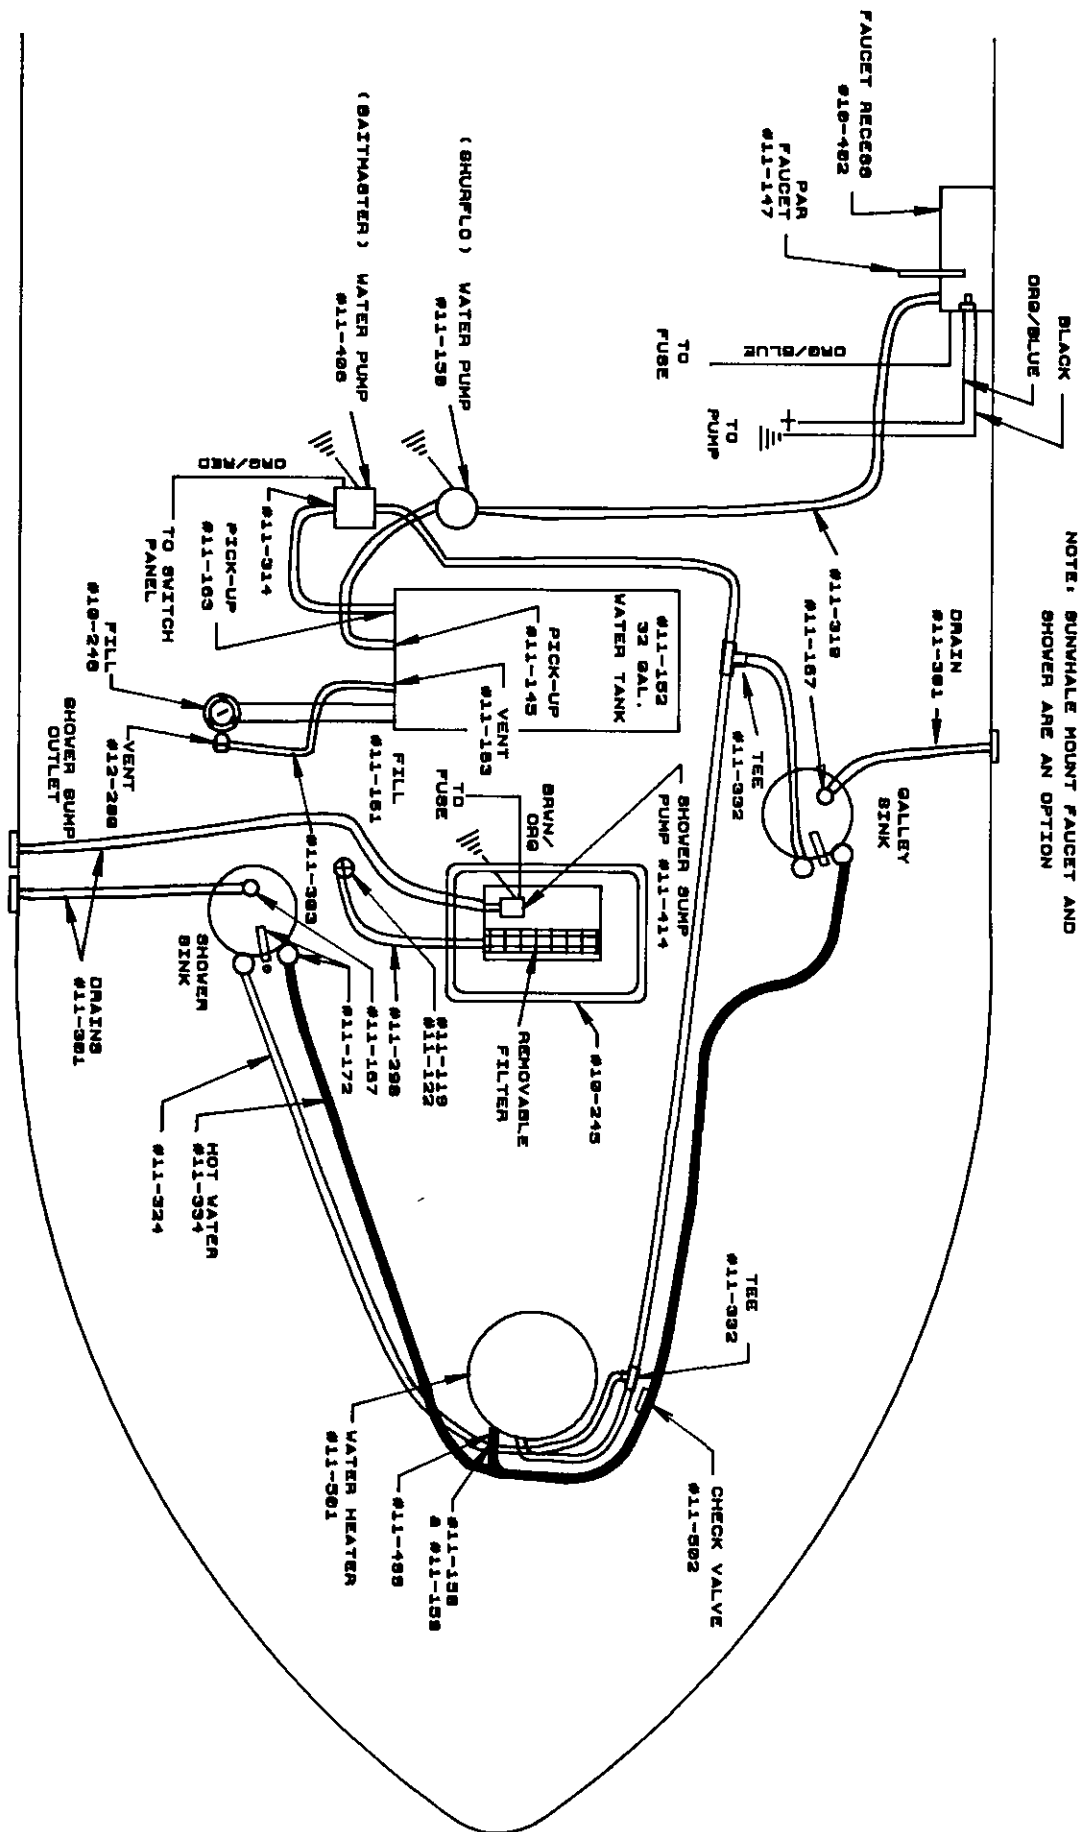


SHOWER/HOT WATER SYSTEM (PRESSURIZED) FOR 25' SAILFISH SERIES

250/253GT DOLPHIN

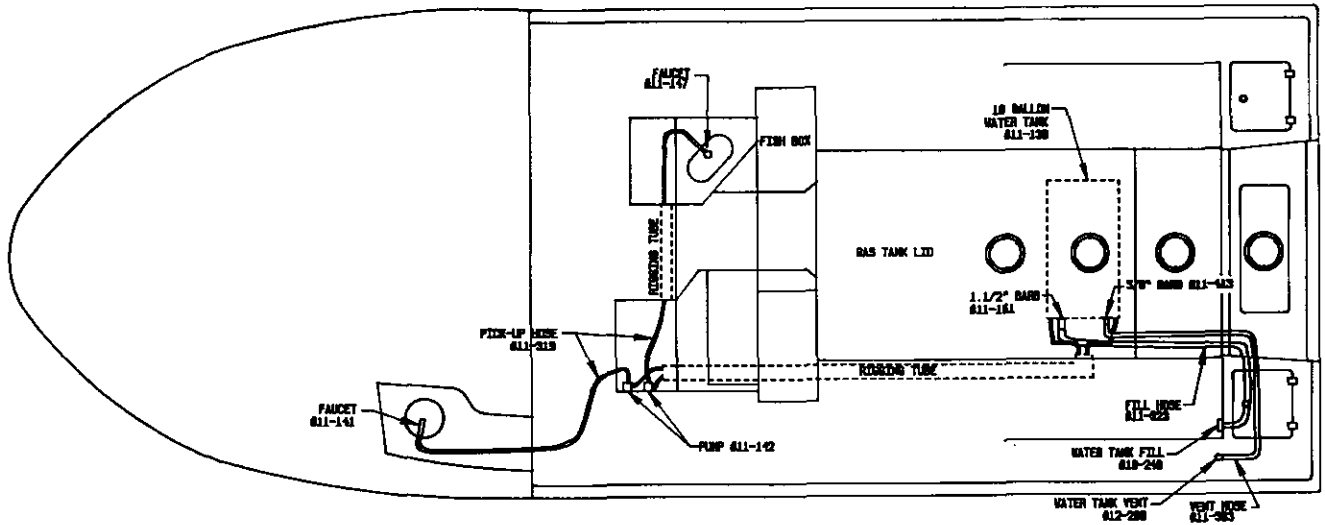



251 DOLPHIN

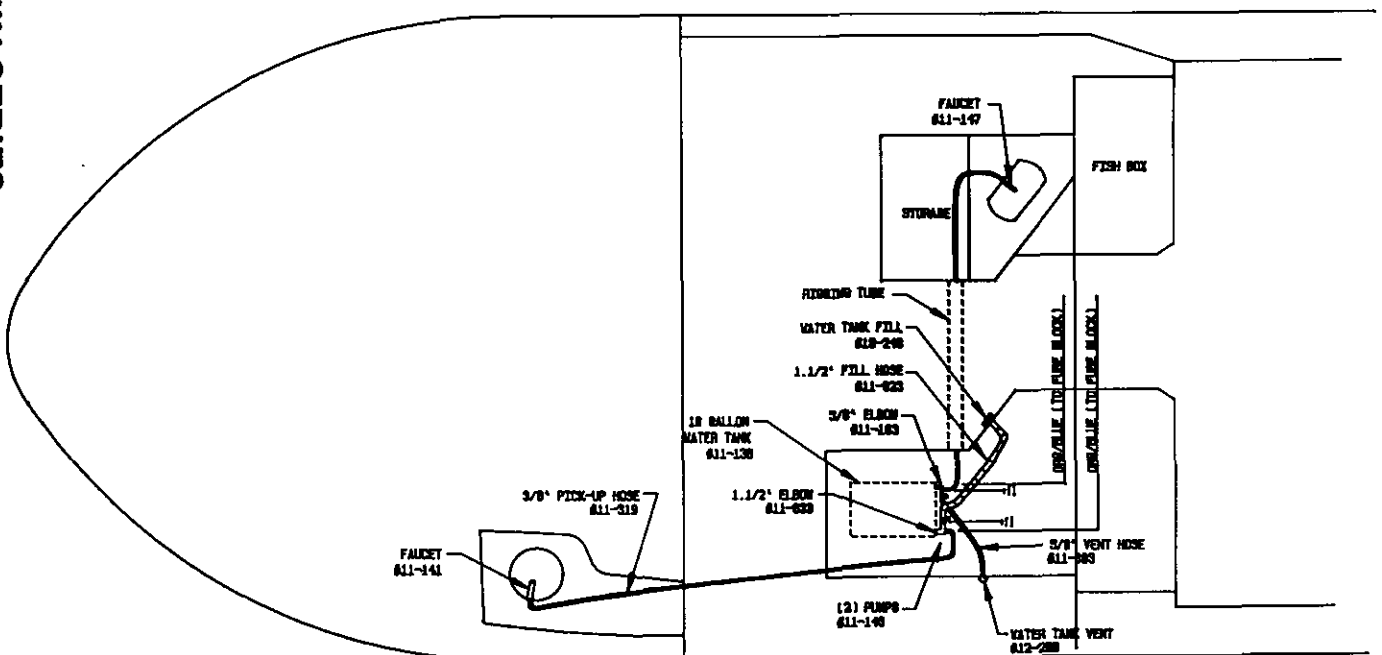

FRESH WATER SYSTEM FOR 25' DOLPHIN SERIES


WASHDOWN/LIVEWELL SYSTEM

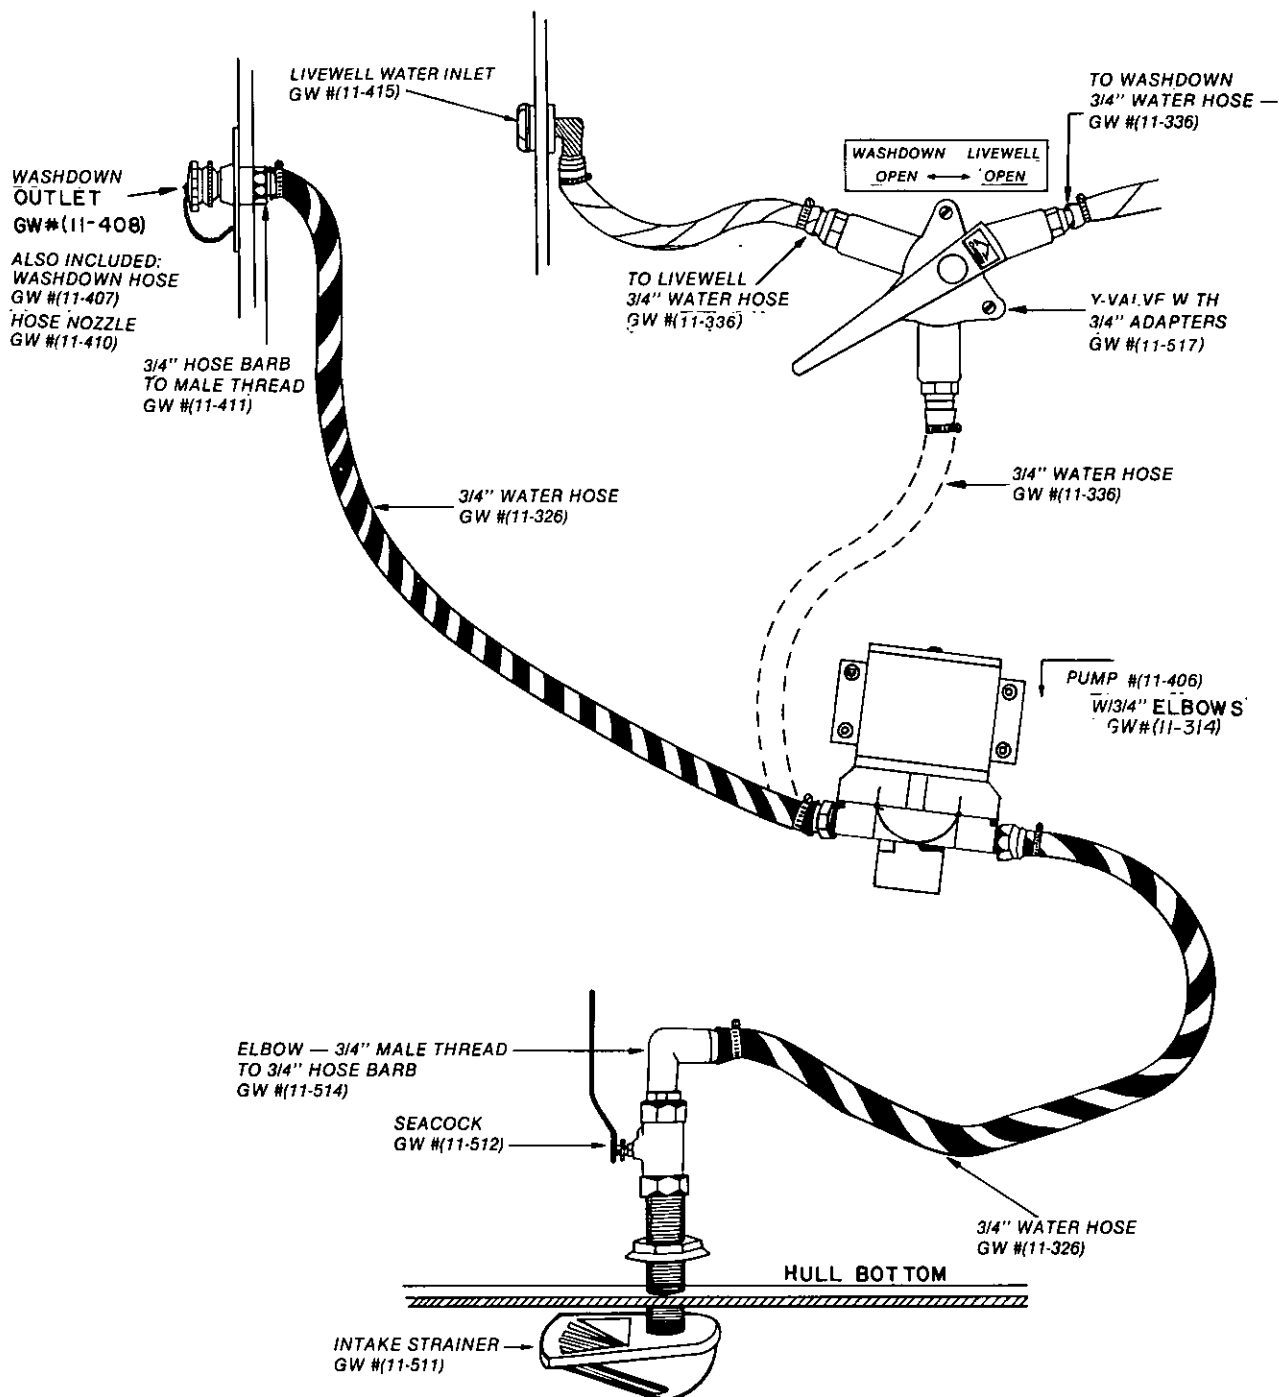

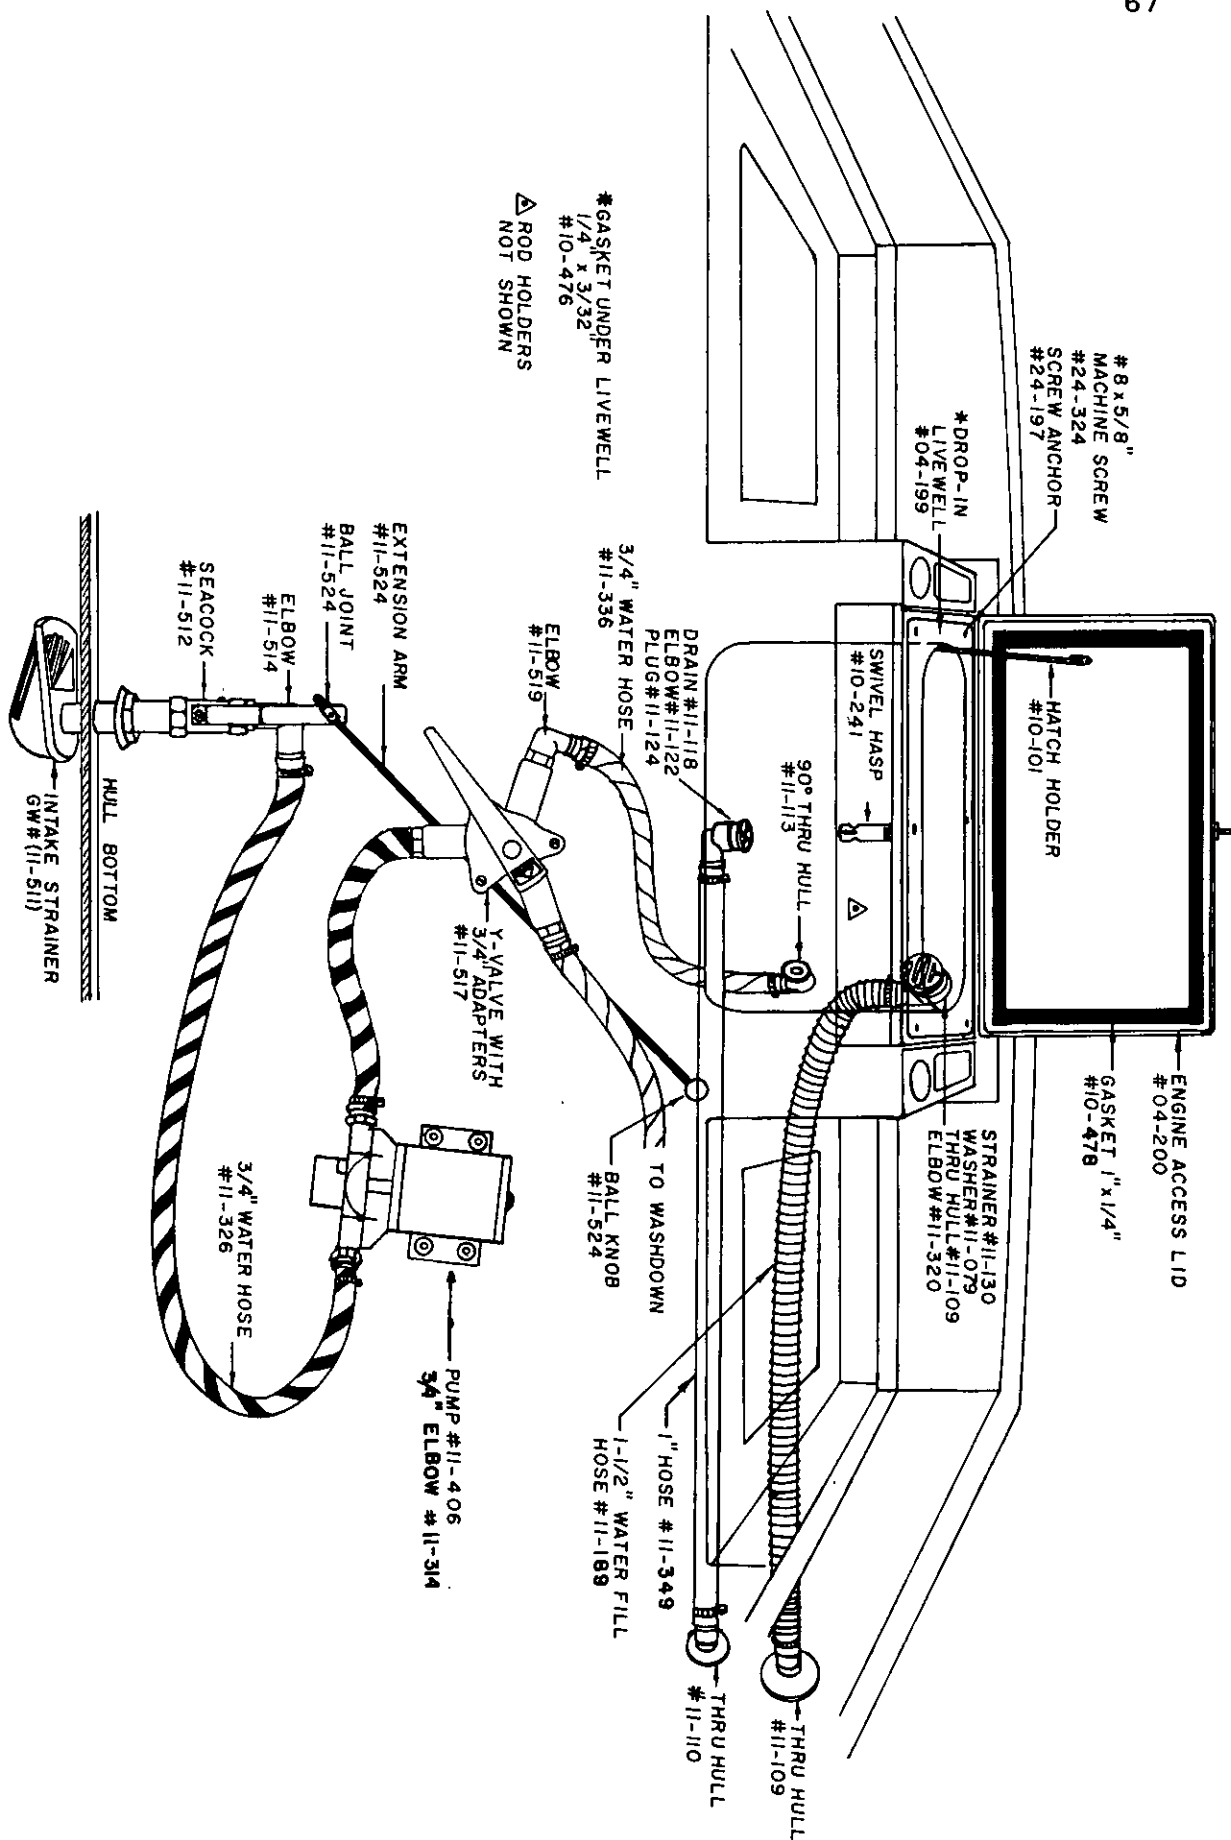


ENGINE ACCESS LIVEWELL

SECTION H: GENERAL CONSTRUCTION

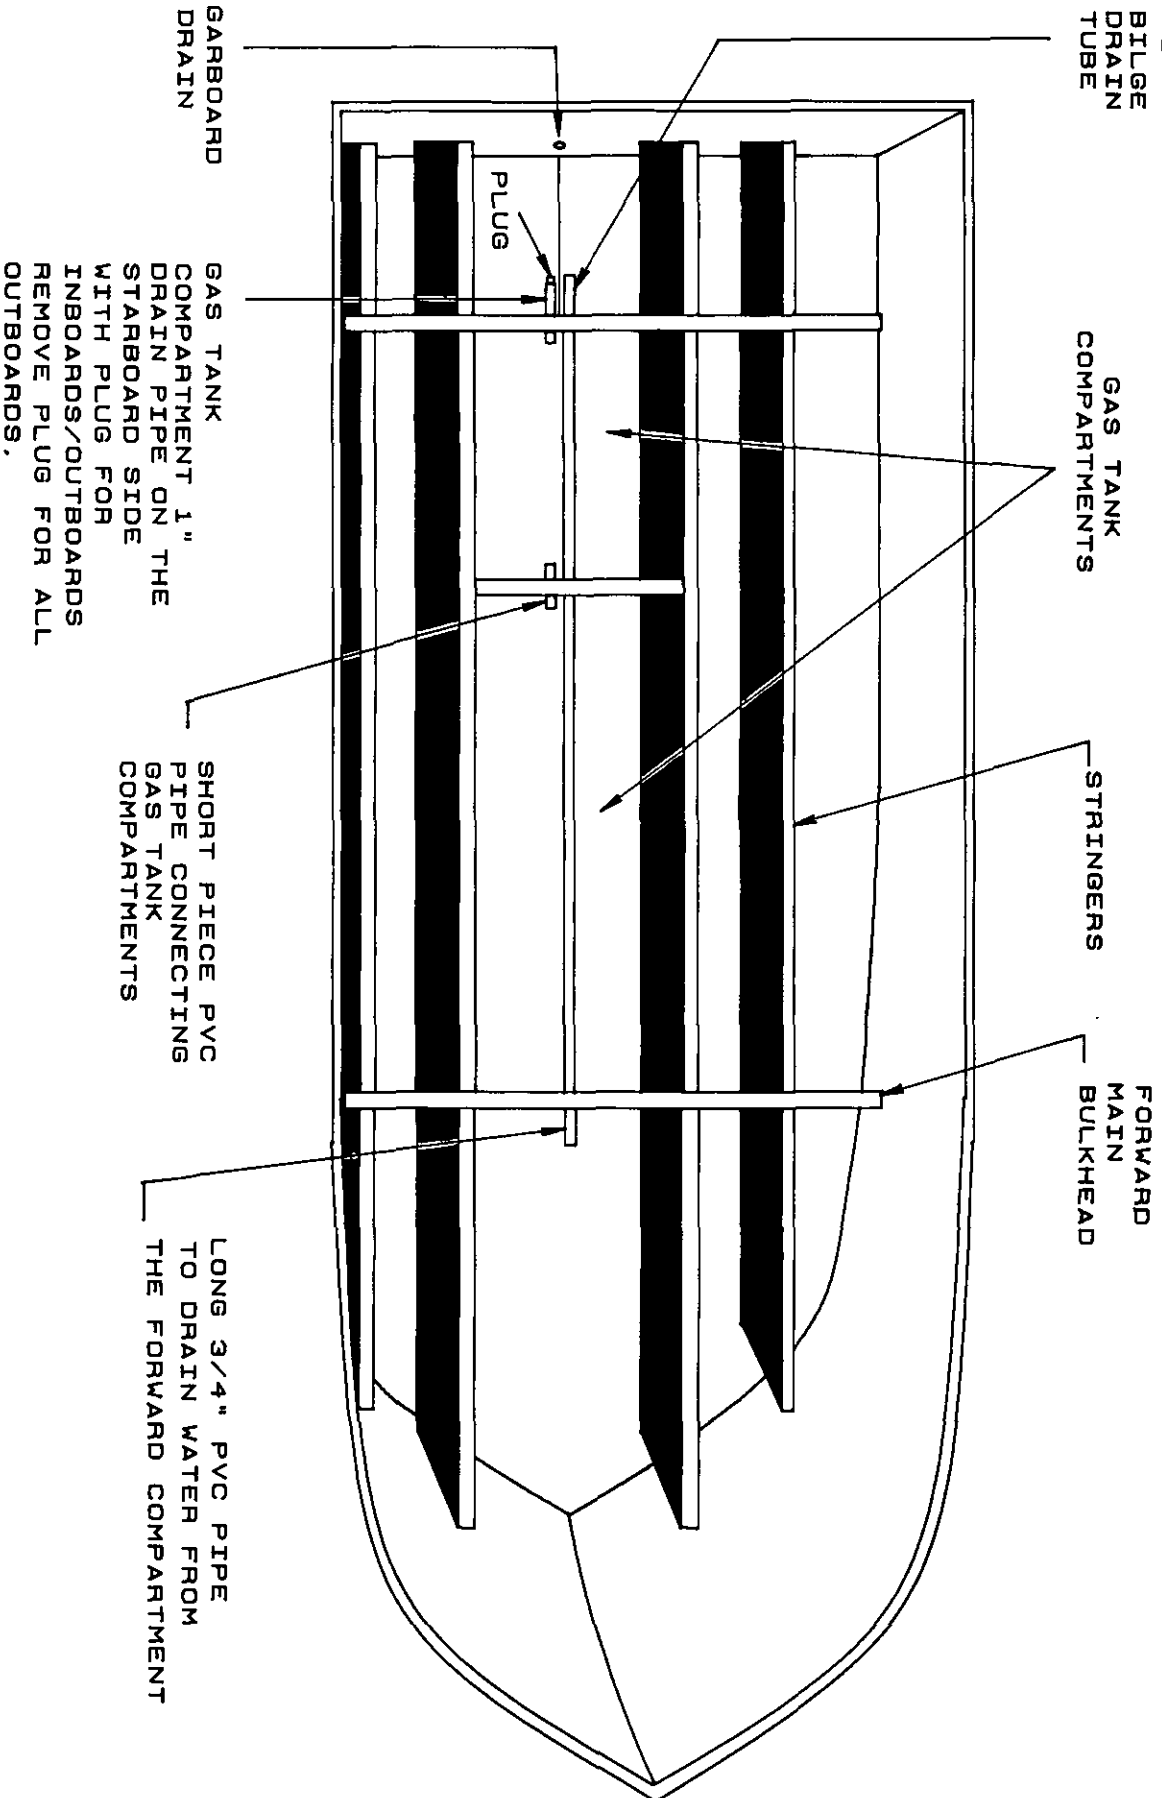

TYPICAL GAS TANK DRAINAGE

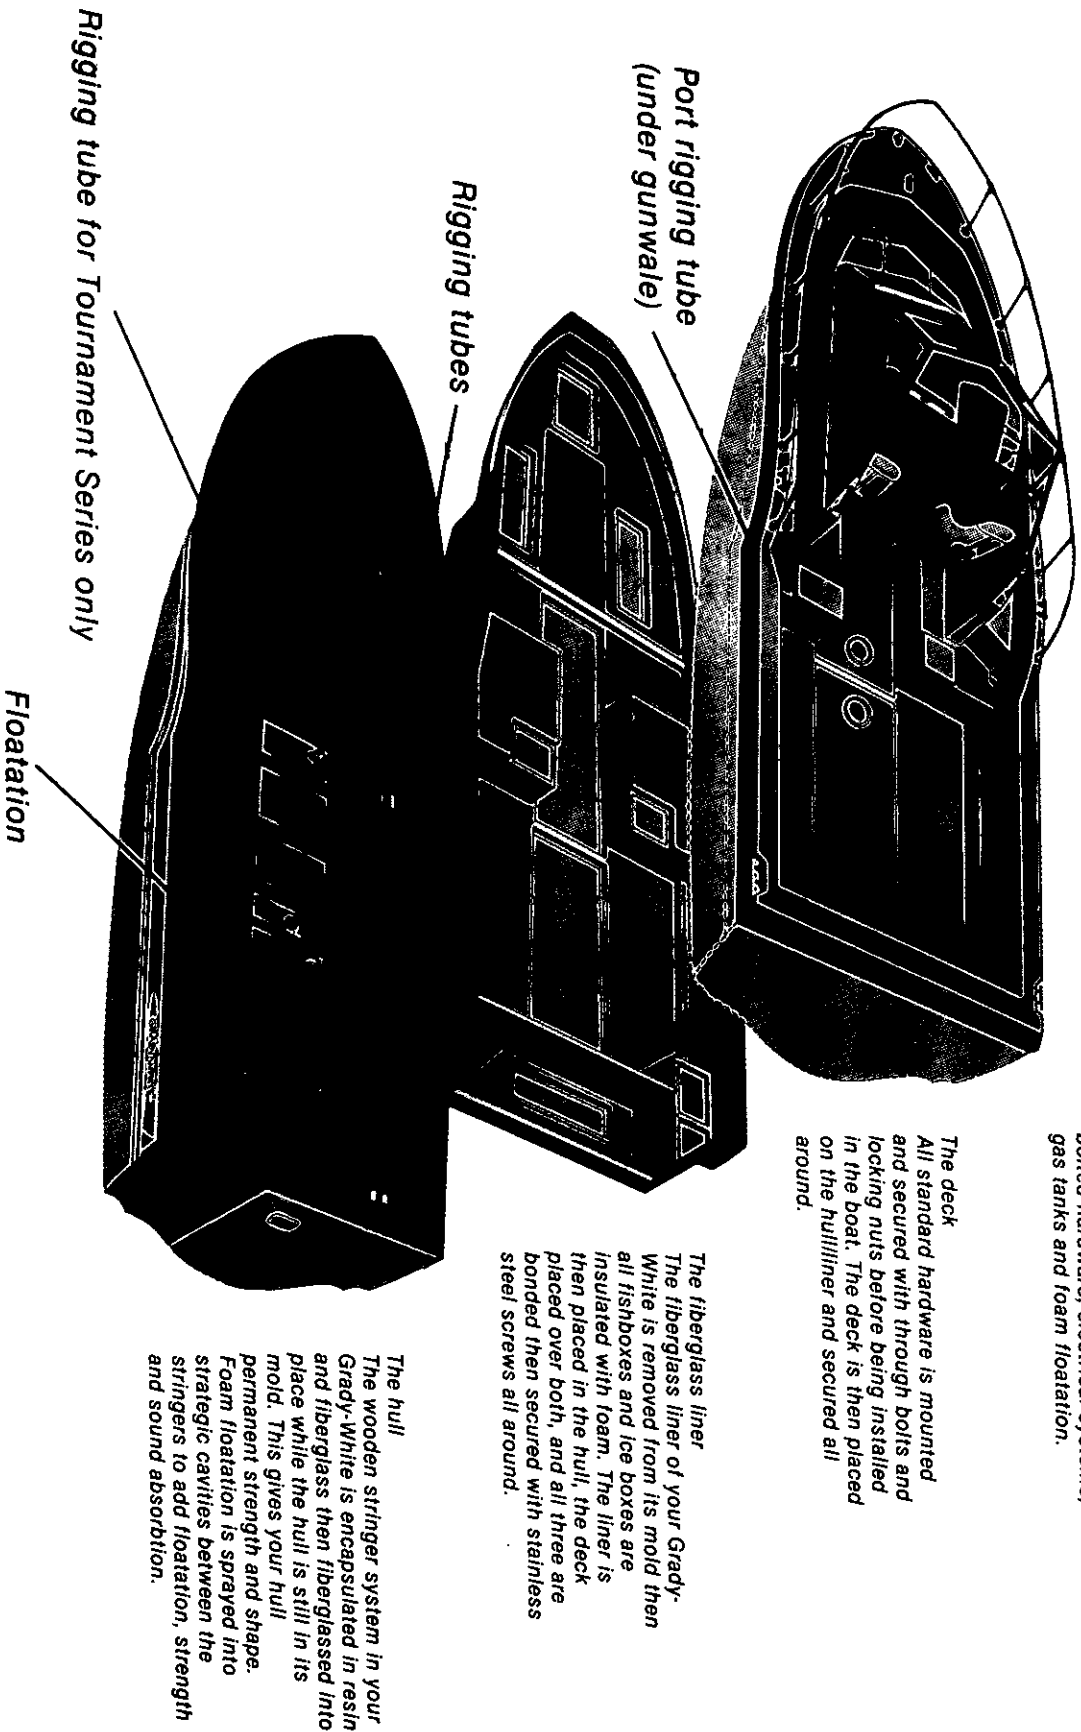

Grady-White Construction

Most Grady-Whites are built in three separate fiberglass pieces, the hull, the deck and the fiberglass liner as shown below. These three pieces are bonded together after installation of standard through-bolted hardware, electrical systems, gas tanks and foam floatation.

The deck

All standard hardware is mounted and secured with through bolts and locking nuts before being installed in the boat. The deck is then placed on the hull/liner and secured all around.

The fiberglass liner


The fiberglass liner of your Grady-White is removed from its mold then all fishboxes and ice boxes are insulated with foam. The liner is then placed in the hull, the deck placed over both, and all three are bonded then secured with stainless steel screws all around.

The hull

The wooden stringer system in your Grady-White is encapsulated in resin and fiberglass then fiberglassed into place while the hull is still in its mold. This gives your hull permanent strength and shape. Foam floatation is sprayed into strategic cavities between the stringers to add floatation, strength and sound absorption.

HULL/DECK/LINER LAYOUT

COMMONLY USED NAUTICAL TERMS

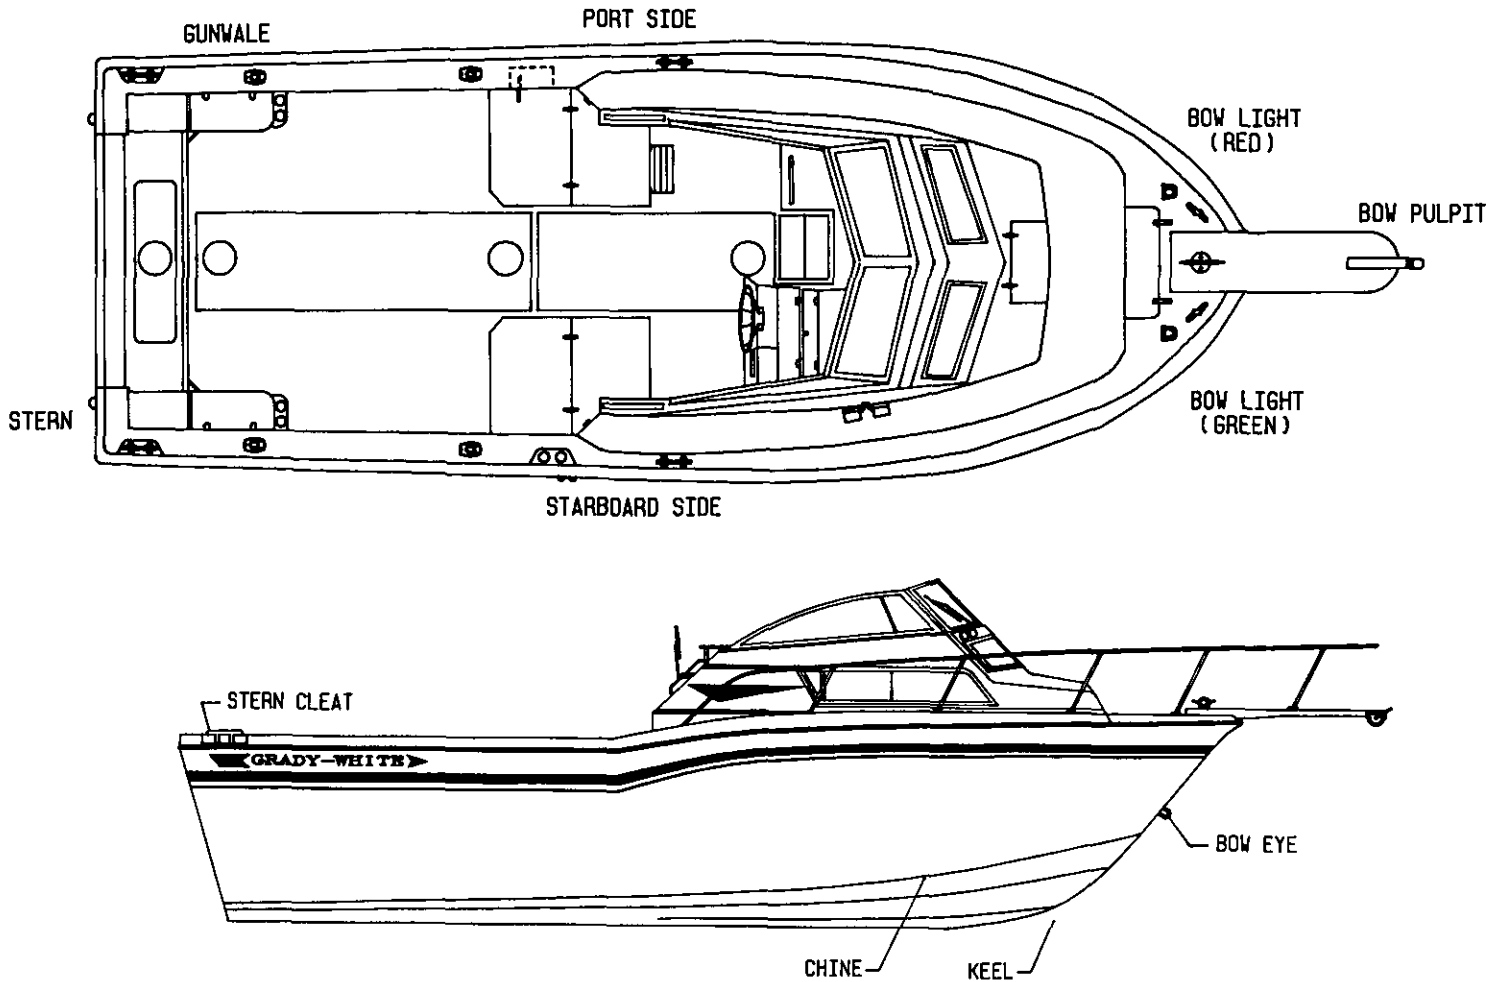

abeam — object 90 degrees to center line on either side of boat

abaft — a point on a boat that is aft of another

aft — toward the rear or stern of the boat

beam — the greatest width of a boat

bilge — the lower interior area of the hull

bow — the fore part of a boat

bulkhead — vertical partition in a boat

chine — meeting juncture of topside and bottom of boat

chock — deck fitting, used as guides for mooring or anchor lines

cleat — deck fitting with arms or horns on which lines may be made fast

deck — upper structure which covers the hull

draft — depth of water required to float boat

fathom — six feet

freeboard — height of topside from water line to the deck

gunwale (or gunnel) — meeting juncture of hull and deck

hatch — an opening in the deck to provide access below

head — a toilet or toilet area in a boat

headroom — vertical distance between the deck and cabin or canopy top

hull — the basic part of a boat; a watertight vessel that provides buoyancy to float the weight of the craft and its load

keel — the major longitudinal member of a hull — the lowest external portion of a boat

knot — unit of speed in nautical miles per hour

lee — the side that is sheltered from the wind

port — opening in a hull to admit light and air or lateral directions — term designating left side of the boat

port light — a hinge or sliding port in a boat hull

scupper — holes permitting water to drain overboard from deck or cockpit

sheer — curve or sweep of the deck as viewed from the side

starboard — lateral direction term designating right side of the boat

stern — the aft end of a boat

stringer — longitudinal members fastened inside the hull for additional structural strength

wake — disturbed water that a boat leaves behind as a result of the motion

windward — toward the direction from which the wind is blowing

LIMITED WARRANTY

REGISTRATION OF PURCHASE: The "Federal Boat Safety Act of 1971" requires all boat manufacturers to maintain a record of all first retail purchasers and their current address for the purpose of notification in case of defective parts or equipment, or in case of non-compliance with standards or regulations set forth by this act. Under the act, failure to complete and return your factory warranty card for our records will waive your right to notification of defect and/or repair at manufacturers expense.

FIVE YEAR HULL WARRANTY

Grady-White warrants to the original retail purchaser of each new Grady-White Boat that under normal use the hull will be free from structural defects for a period of five years from the date of delivery to the original retail purchaser. Any structural defects covered by the warranty will be repaired free of charge at either the Grady-White factory in Greenville, North Carolina, or at an authorized Grady-White dealer location as elected by Grady-White. Transportation to and from the point of repair will be the responsibility of the owner with all repairs subject to prior written authorization by Grady-White Boats, Incorporated. **NO BOAT IS TO BE SENT TO THE GRADY-WHITE FACTORY WITHOUT SUCH WRITTEN AUTHORITY.**

ONE YEAR MATERIAL AND WORKMANSHIP WARRANTY

Grady-White further warrants to the original retail purchaser of each Grady-White boat that under normal use it will be free from defects in workmanship and material for a period of 12 months from the date of delivery to the original retail purchaser. Necessary repairs under this warranty will be made free of charge at Grady-White's factory in Greenville, North Carolina or at an authorized Grady-White dealer as elected by Grady-White. **NO BOAT OR PART THEREOF IS TO BE SENT TO THE GRADY-WHITE FACTORY WITHOUT SUCH WRITTEN AUTHORITY.**

EXCLUSIONS

This warranty specifically does not include the following:

1. Damage caused by abuse, negligence, vandalism, lack of maintenance, improper storage or accident.
2. Any statements, representations, or warranties given by dealer or other third persons other than those provided within this warranty.
3. Any unit which is part of a rental fleet, used for racing or commercial purposes.
4. The following consequential damages: a) loss of time; b) inconvenience; c) towing charges; d) expenses for travel, lodging, telephone, and gasoline; e) loss or damage to personal property or loss of revenue; f) loss of use of the boat.
5. This warranty specifically does not apply to engines, outdrives, propellers, controls, mechanical steering, bilge pumps, and any other part expressly warranted by the manufacturer thereof. In addition, also excluded are gel coat cracking, gel coat crazing, gel coat blistering or fading, chrome, windshields, glass breakage, all vinyl upholstery and canvas, instruments and gauges, and leakage around windshields, windows, hatches, and other apertures.
6. Any boat which has been overpowered according to the maximum Grady-White recommended engine horsepower specifications on the capacity plate affixed to the boat.

WARRANTY CLAIM PROCEDURES

Upon the discovery of a defect, the owner is to promptly contact the Grady-White dealer, from whom the owner purchased the boat who will effect the corrective action under this warranty upon prior written authorization from Grady-White Boats, Incorporated.

THESE WARRANTIES ARE EXPRESSLY MADE IN LIEU OF ALL OTHER WARRANTIES, DURATION OF ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE OR OTHERWISE SHALL BE LIMITED TO AND COINCIDENT WITH THE DURATION OF THESE EXPRESSED WARRANTIES.

THIS WARRANTY SHALL NOT BE VALID UNLESS THE FACTORY WARRANTY POSTCARD IS PROPERLY EXECUTED AND MAILED WITHIN 10 DAYS OF THE PURCHASE OF YOUR GRADY-WHITE BOAT.

GRADY-WHITE BOATS, INC.
P.O. Box 1527
Greenville, N.C. 27834

Customer Service: (919) 752-2111
Monday-Friday
8 am. to 5 pm. (EST)