# GRADY-WHITE BOATS TABLE OF CONTENTS

## Welcome Aboard Consumer Information

Owner's Packet, Warranty Information, Dealer's Responsibilities, Consumer Responsibilities, Hazard Warning Symbols

## CHAPTER 1 BOATING SAFETY

Required Safet	y Equipment
	inguisher
Persona	l Flotation
Sound S	Signaling Device
Visual D	Distress Signals
Lighting	
Additional Rec	commended Equipment
Registration N	umbers
Emergency Sto	op Switch
Emergency Inf	formation
	ng Assistance
Acciden	t Reporting
	ng Precautions
	7 Tips
Loading Capac	ity
Suggested Boa	ating Classes and Reading Material
Suggested Boa	
Suggested Boa	ating Classes and Reading Material  GENERAL INFORMATION
Suggested Boa TER 2 Fueling	ting Classes and Reading Material GENERAL INFORMATION
Suggested Boa TER 2 Fueling Discharge Reg Dischar	GENERAL INFORMATION  culations
TER 2  Fueling Discharge Reg Dischar Disposa	GENERAL INFORMATION  GENERAL INFORMATION  Fulations  Fige of Oil
TER 2  Fueling  Discharge Reg Dischar Disposa Fuel Select Va	GENERAL INFORMATION  rulations
TER 2  Fueling  Discharge Reg  Dischar  Disposa  Fuel Select Va  Boarding/Stov	GENERAL INFORMATION  Fulations
Fueling Discharge Reg Dischar Disposa Fuel Select Va Boarding/Stov	GENERAL INFORMATION  Culations  The second of Plastics and Other Garbage
TER 2  Fueling  Discharge Reg Dischar Disposa Fuel Select Va Boarding/Stov Driving  Trailering	GENERAL INFORMATION  Culations  The second of Plastics and Other Garbage
TER 2  Fueling Discharge Reg Dischar Disposa Fuel Select Va Boarding/Stov Driving Trailering	GENERAL INFORMATION  GENERAL INFORMATION  Fulations
TER 2  Fueling  Discharge Reg Dischar Disposa Fuel Select Va Boarding/Stov Driving  Trailering  Pre-Start Chec	GENERAL INFORMATION  GENERAL INFORMATION  Fulations  Fige of Oil  Filal of Plastics and Other Garbage.  Filal ve.  Filal
TER 2  Fueling  Discharge Reg Dischar Disposa Fuel Select Va Boarding/Stov Driving  Trailering  Pre-Start Chec Approaching/I Towing or Bein	GENERAL INFORMATION  GENERAL INFORMATION  Fulations  Fige of Oil  File of Plastics and Other Garbage  Wage  Ck List  Leaving the Dock  Ing Towed
Fueling Discharge Reg Dischar Disposa Fuel Select Va Boarding/Stov Driving Trailering Pre-Start Chec Approaching/I Towing or Beit Shallow Water	GENERAL INFORMATION  GUIATIONS  Type of Oil  Type of Plastics and Other Garbage  Type  Wage  Ck List  Leaving the Dock  Type of Towed  Type of Reading Material  Leaving the Dock  Type of Reading Material  Type of Reading Material  GENERAL INFORMATION  GENERAL INFORMATION  GENERAL INFORMATION  Type of Reading Material  GENERAL INFORMATION  GENERAL INFORMATION  GENERAL INFORMATION  Type of Reading Material  Type of Reading Material  Type of Reading Material  Type of Reading Material  GENERAL INFORMATION  Type of Reading Material  Ty
Fueling Discharge Reg Dischar Disposa Fuel Select Va Boarding/Stov Driving Trailering Pre-Start Chec Approaching/I Towing or Beir Shallow Water	GENERAL INFORMATION  GUIATIONS  Tige of Oil  Al of Plastics and Other Garbage  Name of Plastics and Other Garbage  Leaving the Dock  Towed
Fueling Discharge Reg Dischar Disposa Fuel Select Va Boarding/Stov Driving Trailering Pre-Start Check Approaching/I Towing or Beir Shallow Water Anchoring Windlass	GENERAL INFORMATION  GUIATIONS  Type of Oil  Al of Plastics and Other Garbage.  Name  Type  Wage  Ck List  Leaving the Dock.  In Towed.
TER 2  Fueling Discharge Reg Dischar Disposa Fuel Select Va Boarding/Stov Driving Trailering Pre-Start Chec Approaching/I Towing or Beir Shallow Water Anchoring Windlass General Inform	GENERAL INFORMATION  GENERAL INFORMATION  Fulations

## TABLE OF CONTENTS CONTINUED

CHAPTER :	3 PERFORMANCE	
Perfor	mance Factors	3-1
	Engine Efficiency	3-1
	Weather Conditions	3-1
	Load Distribution	3-1
	Marine Growth	3-1
Trim		3-1
Propel	ller	3-2
	lsion System	3-2
	e Warranty	3-3
	tle/Shift Control	3-3
Steeri	ng	
	Mechanical Steering	3-4
	Tilt Steering	3-4
CHAPTER	4 GAUGES AND SWITCHES	
Volvo	Instrumentation	4-1
*01.0	Fuel Gauge	4-1
	Tachometer	4-1
	Trim Gauge	4-1
	Voltmeter	4-1
	Water Temperature Gauge	4-1
Switch	h Panel	4-2
	Bilge Pump	4-2
	Cockpit Lights	4-2
	Fuel	4-2
	Horn	4-2
	Livewell	4-2
	Washdown	4-2
	Navigational/Anchor Lights	4-2
	Wipers	4-2
	Accessory	4-2
	Bulb Replacement Guide	4-3
Acces	sory Wiring Color Code and Fuse Chart	4-4
Typic	al Switch Panel Wiring Diagram	4-5

## TABLE OF CONTENTS CONTINUED

CHAPTER 5	MAINTENANCE AND SERVICE	E
General		5-1
	rglass Finish	5-1
	nance	5-1
	ng	5-1
	<u></u>	5-1
_	ing	5-2
		5-3
		5-3
	nance	5-3
		5-3
-		5-4
-	B	5-4
_	••••••	5-4
	yethylene/Plexiglas	5-4
	unting	5-5
	ket	5-5
	el Rails & Hardware/Hardtop Frame	5-5
	nance	5-5
		5-6
	,,,,,	5-6
	Maintenance	5-6
	mpartment	5-7
		5-8
Datteries	1984,800,000,000,000,000,000,000,000,000,0	
CHAPTER 6	WINTERIZATION AND STOR	AGE
		6-1
	— d A	6-1
	Lubricating the Boat	6-2
	Water Systems	6-2
		6-2
	***************************************	6-3
		6-3
		6-3
	klist	6-3
	Out After Storage	
	ching	6-4
After Launch	ing	6-4
CHAPTER 7	MODEL-SPECIFIC INFORM	ATION
TABLE OF CO	ONTENTS PAGE - A GuideTo Specific	
Information l	Regarding Your Grady-White Boat	7-1
WARRANT	¥	

TRANSFERRABLE WARRANTY

### CHAPTER ONE BOATING SAFETY

#### REQUIRED SAFETY EQUIPMENT

The US Coast Guard (USCG) requires that every boat between 26 and 40 feet have specific equipment on board. Check with local regulations on mandatory equipment apart from the list of Coast Guard requirements. Reference the SPORTFISH, CRUISERS, AND YACHTS OWNER'S MANUAL, page 17, for minimum requirements pertaining to the items listed below.

#### FIRE EXTINGUISHER

Your boat must be equipped with (2) marine approved fire extinguishers. Check extinguishers regularly for charge status.

#### PERSONAL FLOTATION

All passenger must have a USCG approved personal flotation device (PFD).

Children and non-swimmers are advised to wear a PFD at all times.

### SOUND SIGNALING DEVICE (HORN, WHISTLE OR BELL)

Your Grady-White is equipped with a marine horn that meet the USCG stipulations of a sounding device on board.

#### **VISUAL DISTRESS SIGNALS**

USCG approved visual distress signals are required for day and night use when operating on US waters.

#### LIGHTING

Grady-White boats are equipped with navigational lights that meet the requirements for recreational craft in inland waters.

### ADDITIONAL RECOMMENDED EQUIPMENT

In addition to the required safety equipment, there are additional items that will provide an extra margin of safety and convenience for you and your passengers while boating. For an extended list of basic gear, tools and spare parts reference the pamphlet Sportfish, Cruisers, and Yachts Owner's Manual enclosed with this manual.

Keep tools and spare parts in good condition. Replace parts removed from spare parts kit. Most importantly use US Coast Guard approved or marine certified parts where applicable. Conditions found requiring corrective action should be worked on by a qualified repairman.

#### **REGISTRATION NUMBERS**

Federal and State laws require a powerboat to be registered in the State where it is primarily used. Registration numbers and validation stickers must be displayed according to regulations. The registration certificate must be on board when boating. The boat serial number, or Hull Identification Number, is required on the registration form.

#### **EMERGENCY STOP SWITCH**

Some Grady-Whites are equipped with an emergency stop switch. This is a safety feature that, if used properly, will shut the engines down if the operator leaves or falls from the helm position. This ignition shutdown switch includes a shut-off switch, switch clip, lanyard and lanyard clip. The lanyard clip is attached to the operator. If a situation arises where the boat should stop, a pull on the cord to release the clip from the shut-off switch will shut down the engines. To reset the emergency stop switch, simply reinstall the switch clip. The ultimate decision to use the emergency stop switch rests with the owner/driver. See page 72 of the SPORTFISH, CRUISERS, AND YACHTS OWNER'S MANUAL.

#### **EMERGENCY INFORMATION**

While boating, unpleasant situations may develop. When emergency situations materialize you should prepare yourself on how to cope with them, whether they happen aboard your vessel or someone else's. Anticipate a game plan for specific situation that may occur such as fire, man overboard or collision etc., to give you the confidence and ability necessary for an emergency. The key factor is to remain calm. For emergency procedures, see Section 4 in the Sportfish, Cruisers, and Yachts Owner's Manual.

#### RENDERING ASSISTANCE

The owner or operator of a vessel is required by law to render all practical or necessary assistance to any person or vessel affected by collision, accident or casualty. However, you should not endanger your vessel or passengers to render assistance.

#### ACCIDENT REPORTING

Report all boating accidents to your local authorities. Federal regulations require boat operators that are involved in an accident to submit a written report within 48 hours. In the event of death or disappearance notification is required immediately by phone or radio in addition to the written report. These reports can be submitted to the State Boating Law Administrator. Forms can be obtained through the USCG, local harbor patrol offices, sheriff and police stations.

#### LIGHTNING PRECAUTIONS

This awareness is included to ensure the safety of the owner and passengers. Always be mindful of the weather! See page 16, in the Sportfish, Cruisers, and Yachts Owner's Manual. When a lightning storm advances certain safety precautions should be taken. Dock the boat and seek shelter on land. If this is not possible seek refuge inside the boat until the storm has passed. Stay out of the water! Lightning will seek a ground when it strikes and may pass through metal components if it hits your boat. For this reason, avoid contact with metal parts of the boat under these conditions.

#### **BOATING SAFETY TIPS**

Safety is an important aspect of boating. Your safety as well as the safety of your passengers and vessel are your responsibility. The following precautions and the ones mentioned in *Sportfish*, *Cruisers*, and *Yachts Owner's Manual* will add to you and your passenger's boating safety and pleasure.

- Study all Operation and Maintenance Manuals for your Grady-White before operation. For any questions or concerns contact your dealer. Proper operation and maintenance will insure quality performance and the longevity of your boat.
- A written float plan left with a reliable person will be valuable information if you have a mishap and do not return on time. **Upon returning** inform the holder of the float plan to prevent false alarms about your safety.
- Never operate or allow anyone to operate your boat while under the influence of drugs or alcohol.
- Do not allow individuals under 16 years of age to operate your boat.
   Inexperienced drivers should not be allowed to operate the boat without constant and direct supervision.
- Instruct at least one person to pilot your boat and be familiar with basic boating techniques and safe operation in the event of an emergency.
- While boating, passengers should be settled in a safe position. Handholds and rails should be used. **Do not allow** bow riding, transom or gunnel riding.
- Keep your boat speed under control. Respect for other boaters and those on shore is common courtesy. The operator of the boat is responsible for any injury or damage caused by the boat's wake. Your wake could swamp or damage a smaller craft or endanger its passengers. Stay alert for posted "No Wake Zones".
- Never allow swimmers/skiers to enter or exit the boat with the engines running. A shift lever in neutral could become engaged causing severe harm to swimmers. Do not operate your boat in swimming or diving areas at any time.
- When venturing into foreign waters collect information on the boating area. Obtain charts for new areas whenever possible.
- Recommend boat shoes or tennis shoes to passengers to prevent slipping or falling.
- Read and understand the "Rules of the Road" in *Sportfish*, *Cruisers*, and *Yachts Owner's Manual*, Section 2 page 19, for a better understanding of who has the right of way when crossing or taking over another vessel. This will provide you with guidance on signaling for particular situations.

#### **CERTIFICATION**

At the helm station, you will find a NMMA (National Marine Manufacturers Association) Yacht Certification tag. This means your yacht complies with the Coast Guard safety standards. (NOTE: Any boat with an overall length of 26 feet or greater is defined as a "yacht" by NMMA.)





This label means that your Grady-White is certified by the NMMA. With this tag, you are assured that your fuel system, electrical system, lighting, ventilation, and steering, are not only in compliance with the US Coast Guard regulations, but also meet the more stringent standards of the NMMA. The NMMA is a national trade organization serving all elements of the recreational boating industry, including manufacturers of boating equipment. With this tag, you can have confidence in the safety of your boat.

## **BASIC FLOATATION**

THIS BOAT HAS "BASIC FLOTATION" AS DEFINED BY ABYC STANDARD H-8.

This label means that Grady-White has designed and built your boat to the ABYC basic flotation standard H-8. Basic flotation is defined as having enough foam, in the boat, to create buoyancy and prevent sinking under swamped conditions.

#### LOADING CAPACITY

Though overloading is a primary cause of many boating accidents, improper loading is equally hazardous. Boaters should know the amount of weight on board and evenly **distribute** the weight within the boat.

#### **CARBON MONOXIDE**

DO NOT INHALE EXHAUST FUMES! EXHAUST FUMES CONTAIN CARBON MONOXIDE, A DANGEROUS AND POTENTIALLY LETHAL GAS.

Exhaust fumes contain carbon monoxide (CO), an odorless and colorless gas. Carbon monoxide is poisonous and a health hazard that can be fatal if breathed over an extended period of time. Symptoms of CO poisoning can include: dizziness, nausea, headache, sleepiness, vomiting, throbbing in temples, muscular twitching and the inability to think clearly. If you or anyone else experience these symptoms immediately get away from fumes and into an area where plenty of FRESH air can be consumed. If any symptoms from above persist seek medical attention.

Carbon Monoxide is the gas formed by the combination of one molecule of carbon and one molecule of oxygen. Chemists refer to it as CO, its chemical formula "C" for carbon and "O" for oxygen. Its weight is about the same as air so it cannot be expected to rise or fall like some other gases but will distribute itself throughout space.

Carbon monoxide can accumulate in cabins and under canvas. If your boat is equipped with canvas that encloses the aft cockpit and the propulsion equipment do not operate the boat with this canvas closed.

The boat operator should be aware that CO is emitted from any boat's exhaust. The operation, mooring and anchoring in an area containing other boats may be in an atmosphere containing carbon monoxide that is not of the operator's making. An operator, likewise, needs to be aware of the consequence of his actions on other boats. Of primary concern is the operation of an auxiliary generator with boats moored along side each other.

## **MWARNING**

When operating center console or cuddy cabin at cruising speeds, slow speeds, or dead in the water with canvas tops, side curtains and/or back curtains in place, be aware of engine exhaust to ensure that emissions do not accumulate in the boats interior. Maintain proper ventilation by adjusting canvas enclosure.

#### SUGGESTED BOATING CLASSES AND READING MATERIAL

Like a car, boats must be operated according to safety rules and traffic regulations. Although we include some basic boating tips in this manual, a thorough review of the safety rules and regulations for boating is beyond the scope of this text.

We support the work of the United States Coast Guard Auxiliary and the United States Power Squadrons. We urge you to exercise the opportunity to attend any instructional classes sponsored by these organizations. Reference page 8 in Sportfish, Cruisers, and Yachts Owner's Manual for options on education and page 23 for information on charts and maps. For further knowledge on boating review the following publications:

PILOTING, SEAMANSHIP AND SMALL BOAT HANDLING
(Chapman)\*

Motor Boating and Sailing
Post Office Box 2319 -- F.D.R. Station
New York, New York 10022

\*Available on CD ROM

PLEASURE BOATING AND SEAMANSHIP
US Coast Guard Auxiliary
306 Wilson Road Oaklands
Newark, Delaware 19711

BOATMAN'S HANDBOOK

by Tom Bottomly

Motor Boating and Sailing

Post Office Box 2319 -- F.D.R. Station

New York, New York 10022

FOR MORE INFORMATION ON BOATING SAFETY COURSES IN YOUR AREA, CALL BOATING EDUCATION HOTLINE 1-800-336-BOAT (2628), US COAST GUARD BOATING HOTLINE 1-800-368-5647 or CONTACT YOUR LOCAL COAST GUARD.

### CHAPTER TWO GENERAL INFORMATION

#### **FUELING**

## **AWARNING**

## Safety during fueling requires CAUTION and COMMON SENSE.

Observe the following precautions carefully. Check with your dealer if you have questions. Check your engine manual to confirm the type of fuel and oil specified by the manufacturer. Do not use fuel-containing alcohol. Alcohol in fuel will deteriorate the rubber material used to make up your fueling system.

- Have fire extinguisher near.
- Observe all safety regulations for the safe handling of fuel.
- Extinguish cigarettes and all other lighted materials.
- · Before fueling shut down all engines.
- Before fueling close all ports, hatches, windows, and engine compartments to prevent fumes from accumulating in closed areas.
- Before fueling turn battery select switches to the "OFF" position to insure that all fans, lights, etc. are off.
- Keep the fuel supply nozzle in contact with the fuel tank opening to prevent any static sparks.
- Secure the fuel cap and check fuel lines and connections for leakage. Wash and clean-up any spilled fuel. Dispose of rags or sponges used for clean up on shore. Do not store these clean-up rags in the boat.
- After fueling ventilate all ports, windows, hatches and other closed areas. Conduct a "sniff test" to make certain all fumes are vacant before using the battery select switches.

See warnings and checklist in Section 6, page 37 of the SPORTFISH, CRUISERS, AND YACHTS OWNER'S MANUAL.

Reference the Fuel Tank Compartment section under Maintenance for more information on cleaning the fuel storage area.

#### DISCHARGE REGULATIONS

The Federal Water Pollution Control Act prohibits the discharge of oil or any other hazardous substances that may be harmful into the US navigable waters. The US Coast Guard requires that any vessel 26 feet or greater display a placard in a prominent location notifying the crew and passengers of discharge restrictions. Each placard must be at least nine inches wide and four inches high, made of a durable material and printed with letters that are at least 1/8 of an inch in height.

#### DISCHARGE OF OIL

The Federal Water Pollution Control Act prohibits the discharge of oil or oily waste into or upon the navigable waters and contiguous zones of the United States; if such discharge causes a film, sheen upon, or discoloration of the surface of the water or causes a sludge or emulsion beneath the surface of the water. Violators are subject to a penalty of \$5,000.

## DISPOSAL OF PLASTICS AND OTHER GARBAGE IN WATERS OF THE UNITED STATES

The MARPOL ANNEX V is the Act to prevent pollution from ships and other vessels. Federal regulations prohibit the discharge of plastic garbage anywhere in the marine environment. Plastic includes but is not limited to: synthetic fishing nets, ropes, lines, straws, six pack holders, styrofoam cups and lids, bottles, buckets and plastic bags. These regulations also restrict the disposal of other types of garbage within specified boundaries from shore. The following plaque will help you determine the specific distances offshore that certain garbage is permitted.

#### NOTICE


It is illegal for any vessel to dump PLASTIC trash anywhere in the ocean or navigable waters of the United States.

It is illegal for any vessel to dump International Law for a cleaner, safer marine environment. Violation of these plastic trash anywhere in the ocean or navigable waters of the United States. requirements may result in civil penalty Annex V of the MARPOL TREATY is an up to \$25,000, fine and imprisonment.\* miles Outside 25 miles 12 to 25 miles ILLEGAL TO DUMP ILLEGAL TO DUMP ILLEGAL TO DUMP **Plastic** U.S. Lakes, Rivers, **Plastic Plastic** Bays, Sounds and Dunnage, lining & Dunnage, lining & 3 miles from shore packing materials packing materials ILLEGAL TO DUMP that float, also that float if not ground to Plastic & Garbage less than one inch: Paper Metal Crockery Paper Crockery Rags Glass Dunnage Rags Metal \*UP TO \$50,000 AND 5 YRS. Food Glass Food State and local regulations may further restrict the disposal of garbage.

#### **FUEL SELECT VALVE**

There is a manual fuel select valve system installed in the engine compartment of your boat. This system allows you to choose the tank (main or aux) from which fuel is consumed. A fuel return line is required on a diesel engine and the select system also switches the return line from one tank to another. A mechanical linkage ties the fuel feed valve and fuel return valve together so that their operation is synchronized. Select the tank that allows the best performance for your boat. Remember performance will be influenced as the fuel is consumed and the fuel load redistributes.

LINKAGE CENTERED (SHDUND)
FUEL SELECTS ARE CLOSED

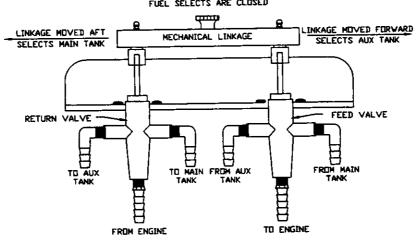

#### **BOARDING/STOWAGE**

Reference the SPORTFISH, CRUISERS, AND YACHTS OWNER'S MANUAL for information on how to board your boat and tips for stowage.

#### DRIVING

Do not allow passengers to ride in the boat while trailering. Check brakes prior to leaving. Drive steady as possible and avoid sudden jerks. Anticipate stops to make them smooth. Road trips call for occasional stops to make sure the trailer is still secured properly.

#### TRAILERING

The adjustment and balance of your boat on the trailer determines how easily your boat may be transported. The tongue weight on the hitch ball should be 5-10% of the total weight of your boat, motor and trailer. Tail-heavy loads cause swaying while trailering. The rollers and/or bunkers of your trailer should be adjusted so that the weight is distributed evenly across the stern and forward throughout the keel sections. Your dealership is capable of adjusting your trailer properly.

Practice maneuvering the trailer. The trailer always backs in the opposite direction of the vehicle. To maneuver the trailer, turn the steering wheel in the direction you want the trailer to go. Prior to initial launch familiarize yourself with this manual and all aspects of your boat. At the launch site go through a pre-launch checklist. The list should be suited to your specific needs.

Trailering and relative information is provided in the SPORTFISH, CRUISERS, AND YACHTS OWNER'S MANUAL in Section 9, page 94.

#### PRE-START CHECKLIST

SPORTFISH, CRUISERS, AND YACHTS OWNER'S MANUAL provides a checklist for predeparture on page 35.

#### APPROACHING/LEAVING THE DOCK

Unlike an automobile, the stern of your boat reacts first when turning. A turn to the right will swing the stern to the left and vice-versa. Remember that turning your boat away from an object such as a dock will tend to swing the stern toward that object. See Docking in your publication of SPORTFISH, CRUISERS, AND YACHTS OWNER'S MANUAL.

#### **TOWING OR BEING TOWED**

In the event of a mishap or power loss you may need to tow a boat or have yours towed. **Remember you should not tow a boat larger than your own**. Never tow a boat if you are not equipped with the proper lines. Nylon ropes are recommended. They have the strength and elasticity needed to absorb the shock of towing and sudden jerks. Individuals should never hold a towline, always secure it to the boat.

Before towing a boat, make a bridle and tie it securely to the pad eyes on the transom with enough slack to clear the engines. Pad the line wherever it comes into contact with the boat to prevent chafing. Attach a towline to the bridle so that it can slide from side to side to prevent too much pressure on a single pad eye. The towline should then be attached to the bow eye or to a bridle on the towed boat. The towline should be a minimum of twice the length of the towing boat, the longer the better. When passing the towline to the other boat do not try to run in too close. Send either a light line or attach the towline to a life preserver to be pulled in. Be aware of the other boat's propeller.

The towed boat should always have someone at the wheel since the boat may swing off course. Start the tow off slowly. A steady pull at a moderate speed should be used. It is important to keep the slack out of the propeller area. Watch the action of the towing boat. If excessive slack develops in the towline and contact is obvious turn in either direction to avoid hitting the stern.

## THE CONTROL OF THE PROPERTY OF

As a precaution, passengers on both boats should stay clear of the towline.

Lines under stress can snap and fly in either direction causing injury.

#### **SHALLOW WATER**

Most boats that become grounded can be floated off with motors tilted to reduce the draft at the transom. Do not try to power off if the propellers are in mud or sand due to possible damage to your engine's cooling system. With motors tilted, try rocking the boat from side to side to break the suction of mud from the keel. Move passengers or heavy objects from the point where the boat is grounded. Do not lower or start the engines until the boat is clear of the ground. Refer to shallow water in SPORTFISH, CRUISERS, AND YACHTS OWNER'S MANUAL.

When boating in water with tidal changes be mindful of water level fluctuations. If you are grounded on an incoming tide you can wait until the tide is high enough to refloat your boat. However, on an outgoing tide quick action should be taken to refloat your boat. If this is not possible set an anchor to keep the boat from becoming driven further aground. Set the anchor to counter the action of the wind or current. The anchor, in some cases, can also be used to pull the boat free.

Many inland areas have rocks and stumps, which could crack or puncture a fiberglass hull. Be familiar with the boating area and use caution in shallow water.

#### **ANCHORING**

Some factors that determine the size and type of anchor most suitable for your boat include the size of your boat and the type of lake, sea or river bottom in your boating area. See page 46 in SPORTFISH, CRUISERS, AND YACHTS OWNER'S MANUAL for more information on anchoring.

#### NOTICE

It is illegal to tie your boat to navigational aids such as buoys and markers.

## **AWARNING**

Never anchor off the stern of the boat especially in strong winds or currents.

The weight of the stern and flat surface to the seas can easily cause water to enter over the transom and swamp the boat.

#### **WINDLASS**

Anchoring can be less laborious if your boat has a windlass accessory. If your boat is equipped with a windlass, reference your windlass Operation Manual for instructions.

#### GENERAL INFORMATION ON BOAT HANDLING


The best method of learning how to handle and obtain the best performance from your boat is to practice and experiment. After several hours of operation you should experiment with the throttle settings to discover the setting that will be the most comfortable and economical range for your particular loading conditions.

We suggest that you make a speed/RPM chart in order to obtain the most economical operation. Operate the boat at various speeds and check the fuel consumption. Determine the amount of operating time remaining when the fuel gauge drops. Make a log of this type of information and have it available when using your boat. Other statistics you may want to determine could include the following:

- Minimum speed for effective steering.
- Turning radius at different speeds.
- Response to steering at low speeds.
- · Acceleration and deceleration rates.
- Time and distance to bring the boat to a stop at different speeds.
- Control of the boat using both engines in close quarters.

Also read the section in SPORTFISH, CRUISERS, AND YACHTS OWNER'S MANUAL for information on safe operating speed.

## COMMONLY USED NAUTICAL TERMS PORT SIDE

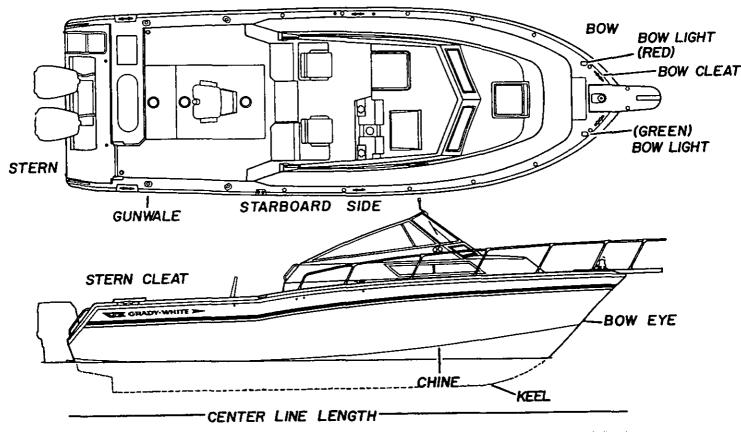

ABEAM - A line perpendicular to a boat's keel

ACCESS PLATE - A removable, watertight cover that provides quick entry to enclosed areas for maintenance or visual inspection

AFT - Toward the rear or stern of the boat

BEAM - The greatest width of a boat

BILGE - The lower interior area of the hull

BOW - The fore part of a boat

BOW EYE - A U-shaped hull fitting used to attach the trailer winch to the boat

BULKHEAD - Vertical partition in a boat

CHINE - Meeting juncture of topside and bottom of boat

CLEAT - Deck fitting with arms or horns on which lines are fastened

DECK - Upper structure which covers the hull

DRAFT - depth of water required to float a boat

FATHOM - A depth measurement equal to six feet

FREEBOARD - Height of topside from water line to the deck

GUNWALE (OR GUNNEL) - Meeting junction of hull and deck

HATCH - An opening in the deck to provide access below

HEAD - A toilet or toilet area in a boat

HEADROOM - Vertical distance between the deck and cabin or canopy top

HULL - The basic part of the boat; a watertight vessel that provides buoyancy to float the weight of the craft and its load

KEEL - The major longitudinal member of a hull - the lowest external portion of a boat

KNOT - Unit of speed in nautical miles per hour 2-7

LEE -The side that is sheltered from the wind

LIST - The tilt or lean to one side

PORT - A term designating the left side of the boat when facing forward

SCUPPER - Holes permitting water to drain overboard from deck or cockpit

SHEER - Curve or sweep of the deck as viewed from the side

STARBOARD - A term designating the right side of the boat when facing forward

STERN - The rear end of a boat

STRINGER - Longitudinal members fastened inside the hull for additional structural strength

WAKE - The track or path left in the water by a moving boat

WINDWARD - Toward the direction from which the wind is blowing (against the wind

## CHAPTER THREE PERFORMANCE

#### PERFORMANCE FACTORS

Maximum performance is dependent on many factors and cannot be guaranteed. These factors will vary with changing conditions. Some of these factors are listed below. Reference the trouble-shooting guide, page 65, in SPORTFISH, CRUISERS, YACHTS OWNER'S MANUAL for additional suggestions on adjusting performance.

#### **ENGINE EFFICIENCY**

Engines operate most efficiently at the RPM confirmed in the engine Operating Manuals assuming your boat is equipped with the correct engines, the engines are properly tuned and the drive systems are in good condition. Efficiency will decrease if normal care and maintenance is not performed. If engines are neglected power will drop and speed will decrease. In addition, expensive repairs may become necessary. Be sure to follow all instructions in the engine Operation Manuals.

#### **WEATHER CONDITIONS**

Weather conditions affect engine performance. Barometric pressure and humidity both influence horsepower. A change in weather could cause a 10% loss in horsepower on some hot days.

#### LOAD DISTRIBUTION

A decrease in performance will be noted when gear, equipment, passengers and fuel are added. This type of extra load will affect the performance of the boat according to the distribution of the weight. Water accumulation in the bilge, another type of extra load, will affect performance. Keep the bilge dry to eliminate this problem.

#### MARINE GROWTH

Maximum performance is obtained only when your hull bottom is clean. Marine growth on the bottom of the boat will increase resistance and decrease speed. These conditions will also increase fuel consumption.

#### **TRIM**

Your stern drive is equipped with power tilt and trim mechanisms. The purpose of power tilt is to raise the engine for launching, loading or trailering your boat. Power trim may be used to adjust the boats planing performance and running attitude. Power trim is covered in detail in SPORTFISH, CRUISERS, YACHTS OWNER'S MANUAL.

Trim refers both to the weight distributions inside the boat and to the angle of thrust of the drive unit. The angle of thrust of the drive unit forces the bow up or down. The trim tabs on your boat also control the trim of the boat, similar to the power trim. Refer to the Trim Tabs section in Chapter 7 for additional information.

#### **PERFORMANCE**

#### **PROPELLER**

The condition of your prop has a major influence on the performance of your boat. Your engines should be equipped with the best size prop for normal conditions. Unusual uses or weight conditions may require special props. A damaged prop can affect your boat's top speed, cause vibrations, create a sudden drop in RPMs or even increase fuel consumption

## **ACAUTION**

Stay within the engine manufacturer's maximum and minimum RPM ranges when replacing props. This information is located in your engine Manuals. If your boat does not have a tachometer consult your dealer for propeller changes.

#### PROPULSION SYSTEM

#### **OUTBOARD**

The engine manufacturer supplies all vital information concerning your engines in the Operation and Maintenance Manuals. Details of important engine functions such as the lubrication system, cooling system and alarm/monitoring system are outlined in these manuals. Your familiarization with this engine reference material will result in the proper usage and service that is essential for safe and enduring engine performance. These manuals are included with the Owner's Packet.

# DO NOT INHALE EXHAUST FUMES! EXHAUST CONTAINS CARBON MONOXIDE A DANGEROUS GAS WHICH IS POTENTIALLY LETHAL.

## **AWARNING**

Do not attempt to service any engine or drive component without being totally familiar with the safe and proper service procedures. Certain moving parts are exposed and can be dangerous.

## **ACAUTION**

Do not paint the engine outdrive with anti-fouling paints designed for boat hulls. Many of these paints can cause severe damage to the engine.

#### **PERFORMANCE**

### **ENGINE WARRANTY**

A warranty registration card is included with all engine manuals and should be completed and returned to the engine manufacturer as soon as possible.

#### THROTTLE/SHIFT CONTROL

The throttle/shift controls located at the helm station, control the flow of fuel to the engine and act as gear shift levers to control the forward and aft thrust of the propellers.

The middle position of the throttle control is usually the neutral position. Move the control forward to engage the shifting mechanism that creates a forward thrust of the propeller. Advance the forward movement to increase the fuel flow to the engine and boost the forward lunge.

Move the control lever aft of the neutral position to reverse the shift mechanism and create a reverse thrust of the propeller. Increase the aft movement to increase the reverse thrust. Remember that propellers are designed for maximum forward thrust so reverse thrust will not be as efficient.

All controls have a neutral safety mechanism. This mechanism will not allow the engine to start when the control is in gear. To increase the flow of fuel to the engine while remaining in the neutral position you may use the neutral lock out feature on the control handle.

VP EDC single-lever control (electronic)

To stop a boat that is moving forward you may reverse the shift mechanism. This change in direction will provide a "braking action," slowing the boat.

## **ACAUTION**

BRAKING ACTION CAUSES A WAKE WHICH MAY RISE ABOVE THE TRANSOM AND FLOOD THE BOAT IF THE BOAT IS MOVING TOO FAST. ALLOW ENGINE RPMs TO DECREASE BEFORE SHIFTING INTO REVERSE.

If your throttle or shift cables need replacing use the same style and length as the original equipment.

#### **PERFORMANCE**

#### **STEERING**

#### **MECHANICAL STEERING**

The 274 uses Big-T mechanical steering connected to the power steering on the engine. The power steering reduces the effort required to steer the outdrive.

The mechanical steering system is designed to require a minimum of maintenance; however, you should periodically inspect the steering system (especially the control heads, cable ends and attachments) for wear, rust or corrosion and lubricate the parts when needed. If you notice a change in the "feel" of the system such as binding, looseness noise or sticking immediately have a qualified marine technician perform a thorough check.

The push rod at the end of the cable is vulnerable to freezing if it is not greased routinely. If you operate in salt-water areas, lubrication is extremely important and frequent inspections should be made for corrosion.

#### TILT STEERING

Tilt steering is available as an optional feature. This feature enables the operator to tilt the wheel up or down.

## CHAPTER FOUR GAUGES AND SWITCHES

#### VOLVO INSTRUMENTATION

#### **FUEL GAUGE**

The fuel gauge indicates the fuel level. When reading this gauge remember two things: (1) the accuracy of your gauge varies with the attitude of your boat in the water (trim or list), (2) the fuel pickup tube inside the gas tank is not capable of withdrawing all of the fuel from the tank. For these reasons never operate your boat at extremely low fuel levels.

#### TACHOMETER GAUGE

The tachometer indicates engine revolutions per minute (RPMs). Consult your engine Owner's Manual for the recommended operating RPM range. The tachometer also has a digital hourmeter. The hourmeter will record time whenever the ignition switch is "ON".

#### TRIM GAUGE

The trim gauge indicates the angle of thrust of the lower unit of the engines.

#### **VOLTMETER**

The voltmeter indicates the battery charge with the engines off and the charging system output with the engine running. A reading of 12 or 13 volts with the engines off is normal indicating a fully charged battery. Readings below 11 indicate a weak battery that may not start the engine(s). A reading of 13 to 15 volts when the engine is running is normal. Readings over 15 volts may indicate regulator problems. Low or fluctuating readings may indicate loose connections or trouble in the regulator and alternator circuit.

#### WATER TEMPERATURE GAUGE

This gauge indicates the temperature of the cooling water circulating through the engine. When the temperature exceeds the recommended operating range for your engine immediately shut off the engine to prevent damage. Overheating is often caused by obstruction of your engine's water intake on the outdrive. Check the water intake strainer first if you experience trouble.

#### SWITCH PANEL

At the helm station you will find an accessory switch panel. These accessory switches are specified below.

#### **BILGE PUMP**

This two-way switch serves as an overriding manual switch in the event of failure of the automatic switch in the bilge.

#### **COCKPIT LIGHTS**

The cockpit lights provide illumination for the cockpit area.

#### FUEL

This two-position switch (MAIN-AUX) provides separate fuel quantity readings from each tank. This switch only operates the fuel level gauge and does not select the tank in use.

#### **HORN**

The horn meets the requirements of the United States Coast Guard's emergency sound signaling device.

#### LIVEWELL

This switch activates the livewell. Reference the Livewell operation section in Chapter Seven of this manual for information on this feature.

#### **WASHDOWN**

This switch pressurizes the washdown system. Reference the Washdown operation section in Chapter Seven for information on this feature.

#### **NAVIGATIONAL/ANCHOR LIGHTS**

Your boat is equipped with lights that meet international lighting regulations. The three-position switch (NAV-OFF-ANCHOR) changes the lighting configuration to running or anchor lights

#### **WIPERS**

This switch activates the windshield wipers.


#### ACCESSORY

Switches, fuses and breakers labeled "ACC" are unused. These components are provided for the addition of non-factory installed accessories.

Switch identification labels are available through your dealer for non-factory installed options.

#### LIGHT BULB REPLACEMENT GUIDE

The following chart provides identification of replacement light bulbs for your Grady-White. All of the lights shown may not be used on every model boat. If you have difficulty finding replacement bulbs under the part numbers listed contact your Grady-White dealer for further assistance. Always use the specified replacement bulb. Improper substitution my result in electrical malfunction, insufficient lighting, boat damage or personal injury.

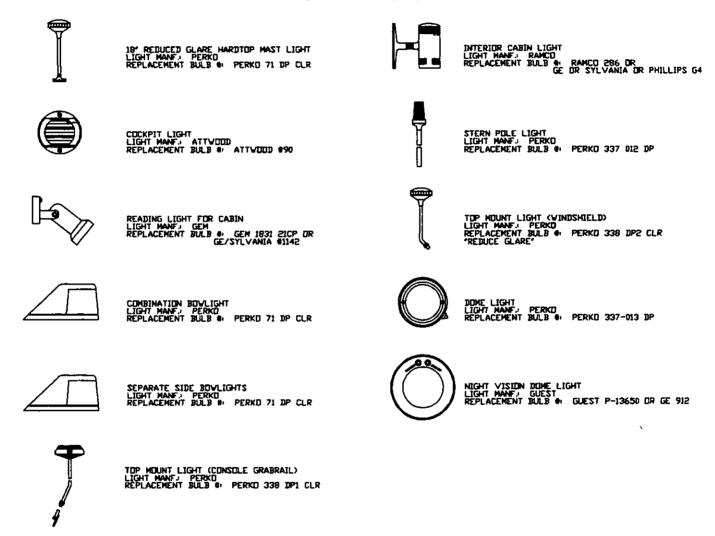


The following are Registered Trademarks: Perko, Attwood, Gem, Ramco, Guest, GE, Sylvania and Phillips.

## ACCESSORY WIRING COLOR AND FUSE CHART

ACCESSORY	WIRE SIZE AND COLOR	AMPERAGE	LOCATION
LIGHTS			
BOW LIGHT	16 GA. GRAY	15.0	ACCESSORY PANEL
AFT POLE LIGHT	16 GA GRAY/WHITE	15.0	ACCESSORY PANEL
MAST LIGHT	16 GA GRAY/RED	15.0	ACCESSORY PANEL
PANEL LIGHTS	16 GA DARK BLUE	15.0	ACCESSORY PANEL
CABIN LIGHTS	16 GA DARK BLUE/GREEN	10.0	FUSE BLOCK
COCKPIT LIGHTS	16 GA DARK BLUE	10.0	ACCESSORY PANEL
SPREADER LIGHTS	14 GA DARK BLUE/WHITE	10.0	ACCESSORY PANEL
PUMPS			
BILGE PUMP (FORWARD):			
RULE 1100	16 GA BROWN/BLACK	5.0	ACCESSORY PANEL
RULE 1500	16 GA BROWN/BLACK	7.5	ACCESSORY PANEL
AUTO FLOAT SWITCH (FORWARD)	16 GA BROWN/RED	5.0/7.5	NEAR BATTERY
( OXWIND)	TO GA BROWN, RDB	3.077.3	NEAR DATTERT
BILGE PUMP (AFT):	<del> </del>		
RULE 1100	16 GA BROWN	5.0	ACCESSORY PANEL
RULE 1500	16 GA BROWN	7.5	ACCESSORY PANEL
AUTO FLOAT SWITCH (AFT)	16 GA BROWN/WHITE	5.0/7.5	NEAR BATTERY
	TO GA BROWN, WINTE	3.0/7.3	MEAN DATTERT
AERATOR PUMP	16 GA ORANGE/2BROWN	2.0	ACCESSORY PANEL
SHOWER SUMP PUMP (FLOAT SWITCH)	16 GA BROWN/ORANGE	4.0	FUSE BLOCK
WATER PRESSURE PUMP (CABIN SHOWE	<u> </u>	15.0	ACCESSORY PANEL
WATER PRESSURE PUMP	16 GA ORANGE/BLUE	5.0	FUSE BLOCK
WASHDOWN PUMP	12 GA ORANGE/BROWN	15.0	ACCESSORY PANEL
LIVEWELL PUMP	16 GA ORANGE/BROWN	5.0	ACCESSORY PANEL
IN-LINE MACERATOR PUMP	12 GA ORANGE/GRAY	20.0	ACCESSORY PANEL
PRIMER PUMPS (PORT)	16 GA PINK/RED	5.0	ACCESSORY PANEL
(STARBOARD)	16 GA PINK/BLUE	5.0	ACCESSORY PANEL
MISCELLANEOUS		9.0	THE CENTRAL PRINCES
HORN	12 GA ORANGE/WHITE	15.0	ACCESSORY PANEL
WINDSHIELD WIPER (ACTUATOR):	12 div digitida, with B	10.0	ACCEDBOOK! TAMEE
PORT	16 GA ORANGE/GREEN	5.0	ACCESSORY PANEL
STARBOARD	16 GA ORANGE/BLACK	5.0	ACCESSORY PANEL
WINDSHIELD WIPER (POSITION)	16 GA ORANGE	3.0	ACCESSORT FAREE
ACCESSORY	16 GA ORANGE	10.0	ACCESSORY PANEL
ACCESSORY GROUNDS	16 GA BLACK	N/A	ACCESSORT FAREL
ACCESSORY GROUNDS MAINS	10 GA BLACK	N/A	
HYDRAULIC TRIM TABS	16 GA HARNESS (SUPPLIED	20.0	FUSE BLOCK
MAIN FUEL TANK (SENDER)	16 GA PINK	N/A	ACCESSORY PANEL
AUXILIARY FUEL TANK (SENDER)	16 GA PINK/WHITE	N/A	ACCESSORY PANEL
ACCESSORY PANEL POWER LEAD	10 GA RED CIRCUIT BREAK		NEAR BATTERY
VHF (HARDTOP RADIO BOX) POWER LEAD			NEAR BATTERY
12 VOLT ACCESSORY OUTLET	12 GA RED/ORG	15.0	FUSE BLOCK
MEMORY WIRE	16 GA RED/PINK	2.0	NEAR BATTERY
CO MONITOR	16 GA RED/BLACK	<del></del>	
OIL SENDER (STBD)		1.0	NEAR BATTERY
OIL SENDER (STBD) OIL SENDER (PORT)	16 GA LT. BLUE	N/A	
FUEL GROUNDS	16 GA LT. BLUE/WHITE	N/A	
VHF GROUND	16 GA GREEN	N/A	
VIII GROOND	10 GA BLACK/WHITE	N/A	

#### TYPICAL SWITCH PANEL WIRING

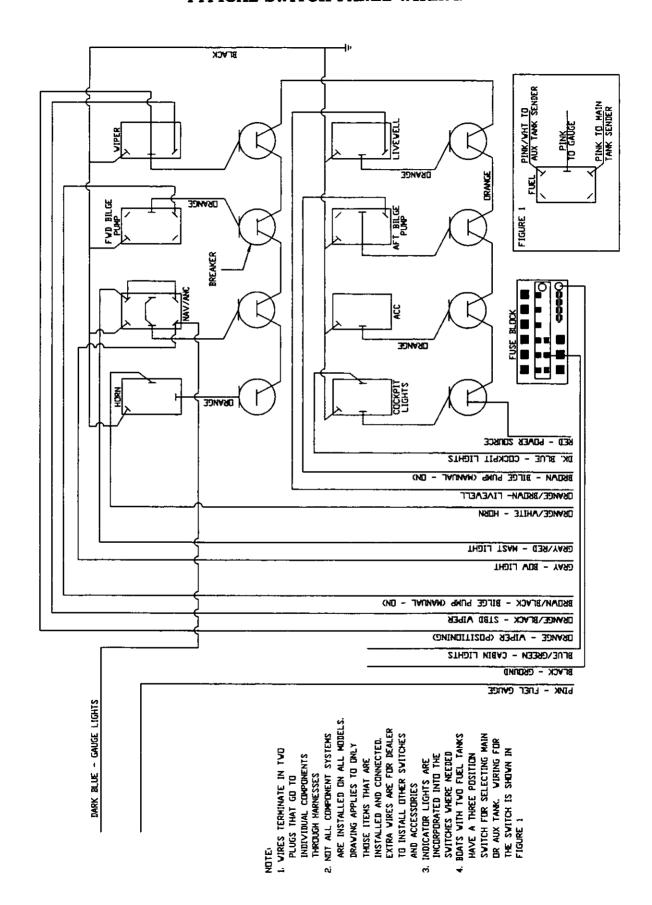

## CHAPTER FIVE MAINTENANCE AND SERVICE

#### **GENERAL**

The amount of maintenance required to keep your boat operating properly and to maintain the appearance is dependent on how the boat is used, amount of usage, type of water, geographic location etc..

Your hull and deck are constructed by the hand lay-up method using the highest quality fiberglass mat and woven roving. This method of construction ensures a proper fiberglass-to-resin ratio and uniform thickness, which together result in a much stronger boat than ones constructed of "chopped glass". This process ensures that your Grady-White is the strongest most durable fiberglass boat possible.

The bilge areas should be kept clean and dry. Leaks found early and corrected will less likely cause damage. Do not allow grease and dirt to build up.

Proper maintenance of your boat is not only a source of pride. It is the key to maintaining your boat's value. A few simple steps will keep your fiberglass Grady-White looking showroom bright for years.

#### **EXTERIOR FIBERGLASS FINISH**

The exterior finish of your Grady-White is a thin layer of resin with a finished color pigment called gelcoat. It is used for cosmetic purposes and makes routine maintenance relatively simple. Although gelcoat has a hard smooth surface it does contain microscopic pores that will allow surface discoloration if not kept clean.

#### **MAINTENANCE**

Normal exterior finish maintenance of your Grady-White boat is similar to the care you would give your automobile. Do not use caustic, highly alkaline cleaners or those containing ammonia. These cleaning agents may darken gelcoat. The resulting stain is a chemical reaction and can be removed with a rubbing compound followed by waxing.

#### **CLEANING**

The best way to prevent discoloration and soil build-up is to hose the boat with fresh water after each outing or on a regular basis. This build-up is the result of use and environmental pollutants. Clean the boat regularly with a mild household detergent and plenty of fresh water. Use a sponge on smooth surfaces including the deck and a brush on the nonskid. Rinse away all grime and residue.

#### WAXING

Gelcoat can lose its gloss due to constant exposure to the natural environment and pollutants, it will require special attention to restore the original gloss and color. See a local dealer for advice on wax for your boating region. The wax film will seal the pores as well as enhance the looks of your boat. **DO NOT wax surfaces that may be walked on as they will become slippery**. While waxing your boat inspect the surface for any damage. Have the damage corrected as soon as possible.

Gelcoat will age or dull naturally. Discolorations are shallow in depth. Factors that will affect the rate of discoloration are: the sun, pollution, old wax accumulation and the salt content of water. Polishing compound (fine abrasive) or rubbing compound (coarse abrasive) is recommended for use on fiberglass finishes to remove scratches, stains or restore severely weathered surfaces. These products can be applied by hand or mechanical means. The process below will help restore fiberglass finishes:

- Clean the affected area with a good detergent.
- Remove stubborn stains or discoloration by gently wet sanding the affected areas with 600 grit "wet or dry" sandpaper. **ALWAYS SAND IN ONE DIRECTION.** Use plenty of water and sand curves in the same direction. Dry the area to make sure all the discoloration has been removed. Repeat this process if necessary.
- Buff using a polishing compound suitable for fiberglass, an electric buffer (1750-1800 RPM) and an 8-inch lambs' wool pad.

## A CAUTION

Keep buffer moving. Do not allow it to rest in one spot. Heat build up will quickly distort the surface.

- When buffing is complete wash away compound with clear water and dry the
- Once the area is clean it may be waxed. This will enhance the gloss while providing a seal to retard staining or soil accumulation.

## ACAUTION

Compounding too often or excessive compounding can wear away the gelcoat.

#### REPAIRING

Though gelcoat is a very durable material, it is susceptible to scratches, blistering and web-like cracks (crazing) over time. It is elastic enough, however, to withstand strong blows while flexing with the hull's movement. Gelcoat problems are cosmetic and will not effect the structural integrity of your boat.

Some gelcoat damage and imperfections, such as nicks and scratches can be repaired by obtaining a color match patch kit. This kit can be purchased through your Grady-White dealer. Acetone, the most suitable cleaning agent for gelcoat can also be acquired through your dealer. Instructions are included in the patch kit.

## **AWARNING**

M.E.K. (Methyl ethyl ketone peroxide), gelcoat and acetone are flammable and hazardous chemicals that must be handled properly. Follow instructions carefully. After the gelcoat is catalyzed it will soon heat up and put off fumes. When finished with catalyzed chemicals or if they start to build up heat, submerse completely in water until cool.

#### **BOTTOM PAINT**

If your boat is left in the water for more than a few days at a time, the hull bottom (below the waterline) should be painted with anti-fouling paint to protect it from marine growth and barnacles that hinder performance. Since anti-fouling paint slowly dissolves to prevent marine growth inspection and cleaning of the boat bottom at least once per season is advisable. Repaint when necessary. To help prevent blistering use an epoxy barrier coat to be applied in conjunction with the anti-fouling paint.

#### **CANVAS**

Although your Grady-White boat's canvas is made using the highest quality vinyl and latest sewing techniques, your boat's canvas will not be completely leak proof. The seam holes in your canvas may stretch and leak. However, you can correct much of this problem by applying paraffin, Apseal® or Uniseal™, to the seams.

Please understand that Grady-White does not warrant the fit and design of the canvas to be entirely watertight.

#### **MAINTENANCE**

To maintain your boat's top and other canvas follow these steps:

Fabric should be cleaned regularly to prevent soil build-up that will become embedded in the fabric. Simply brush off any debris, hose down canvas and clean with a mild solution and warm water. Do not use petroleum or ammonia based cleaners on canvas or clear vinyl as they will yellow. For heavily soiled fabric remove top from frame. Soak the fabric in a solution of 1/2 cup of Clorox and 1/4 cup of Ivory or Lux soap per gallon of warm water. Let canvas soak until mildew and stains can be brushed out with a common kitchen brush. Rinse thoroughly with cold water until all soap is removed. Allow fabric to air dry completely. To avoid damage to the canvas fabric.... DO NOT STEAM PRESS OR DRY IN AN ELECTRIC OR GAS DRYER.

A water repellent was applied to your canvas during manufacturing. After various cleanings some of the repellent may have been released and retreatment of the fabric is recommended. Do not use wax-based products. Use a water based repellent such as Apseal® or Uniseal™. Scotchguard® is effective for short-term use only.

#### **SNAPS**

 Zippers and snaps will loosen with use. Use care when starting the zipper to prevent damage. Lubricate the snap buttons and zippers with petroleum jelly or paraffin. Fasteners should be unsnapped as close to the button as possible.

Apseal® is a register trademark of Astrup.

Uniseal™ is a trademark of Unitex.

Scotchguard® is a registered trademark of 3M.

#### VINYL

- Clean clear vinyl thoroughly with denatured alcohol and then apply a protective layer of clear wax. Do not use paste wax as it will turn the vinyl yellow. This process should be repeated as necessary to maintain the protective wax coating.
- Store and secure canvas before trailering.
- Dry all canvas before storing to prevent mildew.
- Remove the top, front and side panels and **roll** them up for storage. This procedure is necessary to prevent the front and side vinyl pieces from cracking. **NEVER FOLD THESE PIECES!**

#### **STORAGE**

Consider the following steps when putting your folding top canvas option in the stored position:

- Fold the top and zip it into the canvas cover provided.
- Pivot the covered top into the stowed position on the foredeck. The canvas cover is equipped with a strap on each side and an eyelet in each strap. Place the eyelet over the male fasteners located on the port and starboard foredeck.
- Twist the male fastener 90 degrees to engage.

## **ACAUTION**

Secure the folded top when in the stowed position to prevent damage or the loss of the canvas.

#### **UPHOLSTERY**

Your exterior vinyl upholstery may be cleaned with a mild solution of household detergent and fresh water. Commercial cleaners for vinyl also work well.

Since the seams of your exterior upholstery are not waterproof, your upholstery should be stored in the cabin or covered when not in use.

Most cabin cushions are removable and may be dry-cleaned. Some cabin cushions are of a Herculon-type fabric and may be cleaned with upholstery cleaner.

## **ACAUTION**

#### DO NOT MACHINE-WASH THE CABIN FABRICS.

### DURATRIM/POLYETHYLENE/PLEXIGLAS

Duratrim and polyethylene are used for toe rails, trim, cutting boards, lids etc.. Duratrim has an appearance similar to teak but requires almost no maintenance. Maintenance of your duratrim should include regular cleaning with soapy water. Apply a surface protector at least twice per year. Polyethylene can be cleaned with products such as 409 or any spray and wipe cleaner. Plexiglas, used to cover your instruments radio box and also as storage doors, can be maintained by use of a glass cleaner and a soft cloth.

#### HARDWARE MOUNTING

When drilling holes for mounting hardware in boat surfaces make sure each hole is sealed properly. Sealing will prevent water leakage that is extremely important in plywood reinforced areas. A drilled hole sealed improperly allows water inside the fiberglass this allows the plywood reinforcement to become saturated.

#### CAULKING/GASKET

Deck fittings, bow rails, windows, hatches etc., have been caulked or gasketed with the highest quality material to ensure a waterproof joint with the boat. However, the working action of normal use will tend to flex the joint and eventually break down the seal. Periodically inspect the caulking or gaskets for leaks. Recaulk or replace the gaskets when necessary or have your dealer do the repairs.

#### STAINLESS STEEL RAILS & HARDWARE

Your hardware is made of laboratory grade 316 stainless steel, and needs regular cleaning to maintain its "less staining" properties. The key to maintaining stainless steel is to keep it clean with a mild solution of soap and fresh water. Remove salt or dirt from your stainless steel on a regular basis.

#### REQUIRED MAINTENANCE PROCEDURE FOR ANODIZED ALUMINUM COMPONENTS

Lean Bars, Rod Holders, T-Top and Hardtop Frames, Outriggers, Etc.

Due to the nature of anodized aluminum and the harsh exposure conditions of the marine environment, it is important to follow a <u>required maintenance procedure</u>. Failure to follow a preventative maintenance procedure will most likely result in aluminum pitting.

These parts must be washed periodically with a very mild soap and water solution. Grady White recommends washing with a mild soap (such as Ivory Liquid) after each use and every two to three weeks if stored in an outside marine environment. Strong cleaners and soaps must not be used; never use abrasive cleaners or products that contain chlorine bleach. These products can remove the anodized coating.

Give special attention to the upper tubes of a hardtop or T-top frame. The area just below the top is shielded by the canvas or fiberglass top and does not receive the natural rinse that rainwater provides. Failure to thoroughly clean and maintain this area will allow contaminates that attack the anodized aluminum to remain on the frame.

For maximum protection coat parts with a non-abrasive metal protector. The best protectors will displace moisture, remove contaminates, and leave a wax film protecting the anodized aluminum. Follow the application guidelines for the product you choose. A sample of one metal protector has been provided with your boat.

#### **Metal Protectors:**

Boeshield T-9
PMS Products Inc.
76 Veterans Dr. Unit 110
Holland, MI 49423
800-962-1732

Aluma Guard Rupp Marine, Inc. 4761 Anchor Ave. Port Salerno, FL 34992 561-286-5300

Premier Polish Aquatech 6726 Netherlands Drive, Suite 200 Wilmington, NC 28405 800-853-7760

#### SHOWER SUMP

A shower in the head compartment drains into a contained "sump" which is used to prevent hair, soap, scum and bacteria from accumulating in the bilge and creating odors. This sump should be cleaned regularly. The sump pump box contains a filter. Remove the filter and rinse with water to clean. The filter should always be installed when using the shower to prevent the sump pump from becoming clogged.

#### **SCUPPERS**

Grady-White boats have self-bailing cockpits. This means water on the cockpit floor drains by gravity through large aft scuppers and **NOT** into the bilge. The aft drains or scuppers have an external flap assembly (as shown below), which restricts the flow of water back into the boat. Inspect the flaps periodically to make sure that they are free of debris. The scupper flaps may need periodic replacement if the rubber becomes damaged or no longer seals properly in the thru-hull.



#### **FUEL SYSTEM MAINTENANCE**

To determine whether a fuel flow problem is in your fuel system or your engine follow this simple method. Connect a six gallon portable tank to the engine and operate the engine. If the problem persist the likely cause is with the engine itself. If the problem goes away, the source must be in the boats' fuel system. One component that should be inspected if a restriction occurs is the anti-siphon valve. If fuel does not flow properly through this part it must be cleaned and/or replaced. **DO NOT** remove the anti-siphon valve and replace it with a regular barb.

Do not use fuels containing alcohol. Alcohol, particularly methanol, will absorb water which makes fuel more corrosive to metals in tanks and carburetors it also shortens the durability of elastomers such as hose and gaskets.

After fueling, inspect the fuel hoses, connections, and tanks for tightness, signs of leaks, and deterioration. Annually conduct a more detailed inspection of fuel system components, especially those hidden from routine inspection. Replace any fittings, deteriorated hoses, clamps or connections immediately.

#### FUEL TANK COMPARTMENT

The fuel compartments need to be rinsed periodically, especially when used in a salt water environment. Dirt accumulation attracts salt which creates salt crystals. Salt crystals can corrode most metal surfaces if left untreated over a period of time. To help protect your fuel tank from rust and corrosion rinse the compartment with **FRESH** water. Remove access plates from fuel tank lids and inspect this area for leaks or unsecured lines.

The access plates on your fuel compartment lid seals this area. Over a period of time the opening and closing of these plates cause the o-rings to wear-out. Replace these o-rings as necessary to maintain the watertight integrity of the plates.


#### **BATTERIES**

Batteries should be secured in a non-metallic tray to avoid electrolyte spills and an insulated boot should cover terminals. Fluid levels should be checked at least once a month. Fill the battery to the upper level with distilled water. **Never** overfill the battery.

Keep terminals clean by scrubbing them with a stiff brush and a mixture of baking soda and water. Afterwards, apply a light coat of grease. The mixture should not enter the battery. When the batteries are not in use check them each month by using a battery hydrometer that measures the specific gravity.

## **ACAUTION**

Never disconnect the batteries when the engines are running. This can cause damage to the charging system. When replacing your battery, reference your engine Owner's Manual for recommended battery type and required performance specifications.

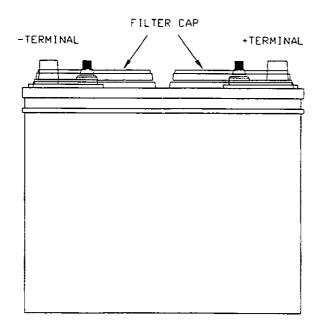

A battery contains sulfuric acid. Avoid contact with skin, eyes or clothing.

#### Antidote:

EXTERNAL - Flush with water.

INTERNAL - Drink large quantities of water or milk. Follow with milk of magnesia, a beaten egg or vegetable oil. Contact a physician immediately.

EYES: Flush constantly with water and get prompt medical attention.

## SHIELD EYES WHEN WORKING NEAR BATTERIES.

Batteries produce explosive gases. Keep sparks, flame and cigarettes away. Ventilate when charging or using in an enclosed space.

#### KEEP OUT OF REACH OF CHILDREN

## ACAUTION

When disconnecting and reconnecting battery cables, the black cable must be connected to the negative terminal and the red cable must be connected to the positive terminal. Reversing this procedure will immediately damage your system.

## CHAPTER SIX WINTERIZATION AND STORAGE

#### **GENERAL**

Boats stored during the winter or for an extended period of time require some routine maintenance. Prior to and during the storage process the boat and its systems should be checked for maintenance and repairs. Arrange repairs during the storage period.

Avoid costly damage and delay when launching your boat by having it stored and winterized properly. This information is presented as a general guide and the actual storage should be performed by a professional and qualified dealership.

#### **BOAT STORAGE**

To avoid personal injury and property damage it is advised to take extra precautions when lifting or moving the boat for storage. Grady-White Boats are equipped with stern lifting eyes and a bow towing eye. These eyes are provided for moving and temporary lifting. For permanent lifting, you will need to have or add a bow lifting ring option. Eyes should be inspected regularly to insure structural integrity.

## **MWARNING**

THE BOAT SHOULD NOT BE STORED BY USING THE PAD EYES, UNLESS THE BOAT IS EQUIPPED WITH A BOW LIFTING RING. PAD EYES SHOULD BE INSPECTED PERIODICALLY IF USED FOR LIFTING.

While transporting a boat by lift or tow motor the structure should remain as close to ground level as possible. If slings are necessary for lifting or transporting they should be in proper condition and tied together to prevent any movement (separating or slipping) which could cause damage to the boat. If tow motors are used to move the boat the forks should be padded and in a secure location under the hull near the chine. The forks should be long enough to prevent the boat from rocking forward and aft causing it to become unbalanced.

Other conditions that should be considered before hauling, transporting or storing your boat include overhead lines ground conditions (frozen or soft) and storm conditions that may arise.

When storing your boat on the trailer raise and block the trailer axle to prevent tire deterioration. This is an excellent time to lubricate and pack the wheel bearings per the manufacturer's instructions.

Make sure the keel, chine and transom are fully supported. Indoor storage is beneficial particularly if your climate produces freezing weather. The storage unit should not be airtight but should be ventilated. Ventilation is extremely important both around and through the boat.

#### WINTERIZATION AND STORAGE

For outdoor storage a canvas cover should be used to prevent "sweating". One method is to build a frame over the boat to support the canvas. It should be a few inches wider than the boat so the canvas will clear the rails and allow passage of air. The cover should be fastened securely so that winds cannot remove it or cause it to chafe the boat. A poor covering job will eventually cost more than the price of a well-made cover.

## MWARNING

IF THE BOAT IS SHRINK WRAPPED WITH PLASTIC DURING STORAGE, THE FUEL FILL AND VENT FITTING MUST BE OUTSIDE OF THE ENCLOSURE TO PREVENT THE TRAPPING OF DANGEROUS FUMES OR SPILLAGE FROM THERMAL EXPANSION.

#### CLEANING AND LUBRICATING THE BOAT

Clean and wax the boat before storage. If your boat stays in the water there may be a layer of growth on the bottom. As it dries, this debris will harden. Clean, scrub, and scrape the bottom promptly when the boat is removed from the water. Thoroughly remove all marine growth and other foreign matter from the hull. Clean the inside of hull openings, thru hull fittings and scupper drains. Inspect the hull bottom for damage.

Check cleats and rails for corrosion and tightness. Clean all stainless steel as directed under MAINTENANCE. Use a good quality metal preservative like T-9® on all metal surfaces to prevent salt water damage. Check all hinges for corrosion. Lubricate hinges as necessary. Check for loose silicone, hinges, and unseated gaskets. Replace or tighten where necessary. Heavy seas pounding and twisting the hull can cause leaks in your windows, doors and hatches.

#### DRAINING AND WATER SYSTEMS

Remove the garboard drain plug and open all valves and seacocks to keep the bilge dry. Store your boat with the bow elevated for drainage.

Drain all water tanks, lines and pumps to prevent freeze damage. The fresh water system may be drained by running any faucet until the tank is empty. When empty, turn the faucet off to prevent pump damage. Residual water will not damage the tank. If desired, the fresh water system may have a non-toxic antifreeze added. This antifreeze can be purchased at marine or camping dealerships.

To drain other lines, close seacocks and run the pumps until the lines are dry. After lines are dry open the seacocks. In warmer climates draining will help prevent water stagnation.

#### **HEAD SYSTEM**

Empty upper tank and holding tank and make sure all water is cleared. Reference Owner's Packet for manufacturer's information on winterization. Water should be removed from deck pump-out lines.

#### WINTERIZATION AND STORAGE

#### **FUEL SYSTEM**

The compartments that house the fuel tank(s) should be rinsed with fresh water to keep salt crystals from forming and corroding the fuel tanks. After rinsing, make sure all water is drained from the compartments.

Do not use fuel that contains alcohol by reason of it absorbing humidity. The resulting condensation will separate from the fuel as winter temperatures drop. An accumulation of this condensation can lead to corrosion. There are fuel additives available to inhibit condensation. Keep tanks full but do not overfill.

This is also a good time to have your fuel filters/water separators replaced.

#### **BATTERIES**

Check the electrolyte level in your batteries and fully charge the batteries before storing. A weak battery loses its charge more rapidly than a strong battery. Ideally, you should disconnect the batteries and cover the terminals with grease to prevent corrosion.

When replacing batteries in the boat remove excess grease from terminals and charge as necessary before reinstalling.

#### **ENGINES**

Check your engine Owner's Manual regarding the procedures for winterizing the engines. Follow these important instructions carefully, and your engines should survive most weather conditions. Change all filters. Check hoses and clamps. If you have any vibrations during the season look for loose engine bolts, bent shafts or bent propellers.

#### STORAGE CHECKLIST

In addition to the winterization guidelines, the following checklist can be used as a guide for storing your boat. Additional details should be added as needed for your personal application.

- Remove all loose items and personal effects.
- Remove any detachable and valuable equipment such as electronics. Store electronics inside. A built-in compass should be covered. Ultraviolet rays from the sun will "cloud" the compass and make it difficult to read.
- All equipment should be winterized as directed in the manufacturer's manuals.
- Store cushions indoors to prevent mildew.
- Clean the exterior and interior of the boat. Remove all grease, oil, salt spray etc..
- Remove all garbage. Clean the refrigerator, cabinets, lockers/storage, fishboxes and livewells. The lids and doors should be propped open for ventilation.
- Empty toilet and holding tank. Flush with fresh water.
- Lubricate all hinges, valves, the backs of electrical panels and other surfaces that may rust.
- Check underwater items. Hardware should be in good condition and tight.
- Inspect electrical systems and have any repairs performed.

#### WINTERIZATION AND STORAGE

#### GETTING BOAT OUT AFTER STORAGE

Before placing boat in the water for the boating season, have hull bottom sanded and reapply anti-fouling bottom paint, if necessary. Leave as much equipment and personal effects off the boat until after launch and final check.

#### PRIOR TO LAUNCHING

Start your own personalized list if items to check and perform prior to placing your boat in the water. The following list will give you some ideas and suggestions.

- Check all gear and replace if necessary.
- Check thru hull fittings for cleanliness, damage and tightness.
- Check prop installation and tightness.
- Clean battery terminal posts with a wire brush or bronze wool. Install batteries, attach cables and tighten. Apply grease to post to exclude air and acid. Check all wire connections for contact corrosion and tightness.
- Check hull valves for easy operation and for condition of hose.
- Check operation of bilge pumps in manual and automatic modes. Check shower sump pump. Check operation of all DC circuits if applicable.
- Check the hose and lines on the fresh water system, install drain plug and close drain valves.

#### AFTER LAUNCHING

- With the boat in the water check all sources of possible leaks stem to stern.
- Fill fuel system and thoroughly check out fuel system including lines, fittings, connections, valves and filters for leaks.
- Perform maintenance on engines according to the manufacturer's manuals prior to returning them to service.
- Check all engine and steering control cables and linkage for operation. Lubricate cables and linkage as necessary.
- Fill fresh water system and check for leaks.
- Connect to shore power. Check out all electrical equipment, lights, hot water heater, air conditioning system etc., these are optional on some models and may not apply to your boat.
- Check operation of toilet (reference manufacturer's manual).
- Check safety equipment including flares, fire extinguisher and first aid kits. Replace items as necessary.
- Test run engines and generator (if installed) as directed in manufacturer's manual.

### CHAPTER SEVEN 274 SAILFISH

### TABLE OF CONTENTS

SPECIFICATIONS/OPTIONAL FEATURES				
OPERATIO	N OF STANDARD FEATURES			
Acc	essory Outlet - 12 volt7-	.3		
	e Pump with Float Switch7-			
	Bilge Pump Location7-	3		
Mai	n Circuit Breaker7-	3		
	ging Compartment			
Two	nsducer Flats	.o ⊿		
	cocks			
	ewell – Raw Water7-			
Was	shdown Operation7-	5		
Tri	n Tabs and Switch7-			
	Trim Tab Pump Location			
Hea	d Shower	6		
07774	11 AN ANNIANA Y NOA ENDAG			
	N OF OPTIONAL FEATURES	_		
Bat	tery Select Switch7-			
_	Compass7-			
Coc	kpit Shower7-	6		
	sh Water Gunwale Mount7-			
	dshield Washer7-			
Doc	kside Power7-			
	Connecting The Dockside Power			
	Disconnecting the Dockside Power7-			
AC	Panel7-			
	AC Powered Auxiliary Switches7-	8		
Bat	tery Charger	8		
Mic	rowave7-	9		
Wat	er Heater7-	9		
Out	riggers Advantages7-	9		
	Instructions7-	9		
	Care and Maintenance7-	9		
Hea	d Operating Instructions7-			
DIAGRAMS	}			
AC :	nlet and Receptacle Wiring Schematic			
	and Warning Label7-	12		
AC :	Panel Wiring7-			
Acc	ess Plate and Rigging Tube Location7-			
	essory Wiring7-			
	Battery Compartment Wiring7-1			
	Dockside Power Wiring			
	Hardtop Wiring7-18			
	Head Layout - Marine7-			
Labels and Location				
	well System Layout7-:			
Livewell/Washdown System7-22				
	surized Shower/Hot Water System7-			
	. Hull Detail			

#### SPECIFICATION SHEET

BEAM-AMIDSHIP	9' 6"
BRIDGE CLEARANCE	7' 7"
BRIDGE CLEARANCE W/HARDTOP	9' 4"
CENTERLINE LENGTH	27' 4"
FRESH WATER CAPACITY	32 GALLONS
FUEL CAPACITY - AUX	
FUEL CAPACITY - MAIN	
HULL DRAFT	
TRANSOM WIDTH	
DRY WEIGHT	6700 LBS.
KEEL TO TOP OF WINDSHIELD BAR	9' 0"
STEERING TYPE	BIG T MECHANICAL
CONTROL CABLE LENGTH	6' <b>0"</b>

#### **OPTIONAL FEATURES**

- Air Conditioning
- Anchor Windlass
- Battery Charger
- Boat Lifting Package
- Bow Pulpit
- Cabin Window Curtains
- Cockpit Shower
- Compass
- Dockside Power W/Galvanic Isolator
- Hardtop Rod Holders
- Hardtop W/Radio Box & Spreader Lights
- Head Marine Head W/Electric Flush
- Head Marine Head W/Holding Tank & Pump-out
- Microwave
- Outrigger Kit 18 Ft. (Lee Jr. Cabin Side Mount)
- Rod Storage Folding Cabin Rack (6)
- Seating Deluxe Helm & Companion Chairs
- Stereo/CD System
- Water Heater (110V) Requires Dockside Power

#### **CANVAS OPTIONS**

- Drop Curtain
- Hardtop Front & Side Curtains
- Helm Station Cover

#### **OPERATION OF STANDARD FEATURES**

#### **ACCESSORY OUTLET - 12 VOLT**

A 12-volt outlet is installed at the helm. This outlet provides an easily accessible power supply for accessories such as cellular phones and spotlights.

### NOTICE

This outlet cannot be used with a cigarette lighter.

#### BILGE PUMP with FLOAT SWITCH

Your boat is equipped with automatic float switches adjacent to the bilge pumps. A float switch will enable the bilge pump to come on automatically if a significant amount of water accumulates in the bilge. These switches are wired directly to the batteries. They function independently of the battery select switches and can activate the bilge pump with the battery select switches in the "off" position. Batteries should be inspected frequently to ensure adequate power is available for proper pump operation. The bilge pumps are also equipped with switches at the helm. When a switch is in the MANUAL position the pump will run continuously. When a switch is in the STAND-BY position the pump is off unless activated by the float switch.

### A CAUTION

Do not run bilge pumps dry for a prolonged period of time.

#### **BILGE PUMP LOCATION**

The 274 has two bilge pumps. One is located in the aft bilge under the front of the engine and the other pump is located in the cabin under the sole floor. The aft bilge can be accessed through the aft rigging lid. The forward bilge pump can be reached through the access plate in the cabin floor.

#### MAIN CIRCUIT BREAKER

There is a 40 AMP circuit breaker located next to the battery select switch. This breaker is the main protection for the wiring supplying power to the accessory switch panel and helm fuse block. If this breaker is tripped depressing the red button on the breaker box will reset it.

#### RIGGING COMPARTMENT

The rigging area located aft of the fuel tank compartment is useful for adding accessories and for better access to the front of the engine. This area contains two flats in the hull bottom for mounting transducers.

#### NOTICE

The rigging hatch and mounting screws must be sealed with silicone sealer after rigging is complete. If the lid is removed it must be resealed to insure watertight integrity.

#### TRANSDUCER FLATS

The inverted transducer flats are designed primarily for a bronze style torpedo-shaped transducer. An example of a torpedo shaped unit would be an Aero Mar Tri-Transducer. This transducer is approximately ¾" thick. This thickness allows the transducer face to protrude below the bottom of the hull. An additional ½" spacer may be installed between the hull bottom and the transducer for optimum results. The transducer should be installed as far forward on the flat as possible, and parallel with the keel.

#### NOTICE

A flush mount style transducer will not work with the inverted flat.

#### **SEACOCKS**

Ball valve seacocks are installed on the thru hulls for the livewell and washdown features. These seacocks are located under the aft rigging access plate. It is necessary for the seacock to be in the open position for operation.

#### NOTICE

All seacocks should be in the closed position if not in use or if the boat is unattended to prevent water from entering if a plumbing component fails.

#### LIVEWELL - RAW WATER

To operate the livewell open the seacock on the port side of the aft bilge. Plug the drain in the bottom of the livewell box and place the switch at the helm in the "ON" position. The livewell will then fill with water through an inlet fitting near the bottom of the box. The water level will rise to a point slightly below the top of the livewell and will drain overboard through a screened overflow fitting.

#### NOTICE

If the livewell seacock is left open and the pump is not "ON," the boat's forward motion through the water will gradually fill the box. Closing the seacock will prevent this inadvertent filling when the livewell option is not in use.

#### NOTICE

Under certain conditions placing the outboard engine(s) in reverse will ventilate the water under the boat and create an airlock in the livewell pump. To prevent this situation from occurring, it is recommended that the livewell be turned "OFF" prior to any high RPM or continuous reverse operation. In the event the livewell pump becomes air-locked, this situation may sometimes be corrected by turning the pump "OFF" for 15-20 seconds.

#### WASHDOWN OPERATION

To operate the washdown, open the seacock located on the starboard side of the aft bilge. Depress the washdown switch on the accessory switch panel at the helm station. This system will now be pressurized at the washdown faucet. This faucet may be used alone or with a washdown hose. A washdown hose with a spray nozzle attached may be used intermittently without turning the switch "off". The washdown pump has an internal pressurization switch that will maintain water pressure as needed until the switch is turned "off" at the switch panel.

#### TRIM TABS AND TRIM TAB SWITCH

Trim tabs are electrically and hydraulically operated and are used to modify the attitude of the boat while moving. They may also be used to adjust the boat's running angle in adverse seas or to compensate for unusual load conditions.

The trim tabs are operated by a two-rocker switch panel and will aid in trimming the boat fore and aft for a smoother ride. The top of the switches are marked "bow down". Trim tabs in the extreme "bow down" position will cause the boat to come on plane with minimum bow rise. Unless you are operating at low speeds or with considerable cockpit weight you will likely want to raise the tabs slightly when underway. With the tabs in the "bow down" position you will be able to maintain a plane at the least possible RPMs. Trim tabs in the extreme "bow up" positions will have no effect on the boat's ride.

Trim tabs can improve the ride of your boat by adjusting where the water is hitting the keel line. In a slight chop the waves may be hitting the keel of your boat around the helm area, causing an uncomfortable ride. By adjusting the trim tabs and lowering the bow, the waves will hit the keel at a more forward point and soften the ride. Experiment with trim tabs in various sea conditions to determine the best positions for your boat under different load conditions.

Trim tabs are also useful in correcting a port or starboard running list. If the boat is listing to the port side press the starboard trim tab switch toward "bow down". Press the port trim tab switch toward "bow down" to correct a starboard list. This will tend to lower the bow by pulling the higher side to a level position. If your bow is already in a low position you may correct a listing condition by pressing the trim tab switch toward "bow up". This will cause the low side to rise and level the boat. It will also gradually improve the running angle.

#### TRIM TAB PUMP LOCATION

The Sailfish trim tab pump is located behind the aft berth wall. The pump is reached by removing the center section of this wall. The hydraulic fluid should be checked on a seasonal basis.

#### **HEAD SHOWER**

The water pressure switch located on the accessory switch panel activates the head shower. After turning this switch "ON" the shower water flow can be controlled by the head shower fixture.

### **OPERATION OF OPTIONAL FEATURES**

#### **BATTERY SELECT SWITCH**

The 274 is equipped with one battery and one ON/OFF switch. The ON/OFF switch supplies power to the engine and accessories. See the Battery Select Wiring at the end of this chapter for wiring details.

### **MARNING**

Never turn the ON/OFF switch to the "OFF" position with the engine running as this could damage the charging system.

#### **COMPASS**

The compass is located at the helm station in direct view of the operator when navigating the boat. Follow the instructions in the compass manual included in the "Owners Packet" to make compensation adjustments to the compass.

#### **COCKPIT SHOWER**

To operate the cockpit shower the water pressure switch located on the accessory switch panel must be in the "ON" position. Open the flap and pull the shower wand from the recessed deck fitting. Depress the button on the back of the wand to spray water. To store the shower wand, gently feed the hose down through the deck and replace the flap on the fitting.

#### FRESH WATER GUNWALE MOUNT

To operate the gunwale mount fresh water system the water pressure switch located on the accessory switch panel must be in the "ON" position. Swing the faucet out from the recess to an accessible position. The small white knob at one end of the recess controls the water flow. The faucet should be stored in the recess when not in use to prevent damage.

#### WINDSHIELD WASHER

A valve located in the starboard decking controls your windshield washer. Water may be sprayed on the windshield by opening this valve with the Fresh Water System pressurized (the water pressure switch on the accessory switch panel must be in the "ON" position). This water is supplied from the fresh water tank.

#### **DOCKSIDE POWER**

The dockside power option allows the use of AC equipment on board the boat. This equipment includes any permanently installed appliances such as a microwave, or water heater, or it may be a household item plugged into a receptacle. The dockside power is utilized by connecting the heavy-duty cable supplied with the boat to an appropriate external power source. This cable provides power to the boat's AC inlet that is wired to the AC panel. The AC panel allows distribution to the various appliances and outlets. See the dockside-wiring diagram at the end of this chapter for details.

### A CAUTION

Always disconnect the dockside power cable if leaving the boat unattended for an extended period of time.

#### CONNECTING THE DOCKSIDE POWER

- 1. Verify that the external power source is a 3 wire grounded system with amperage and voltage ratings compatible with the boat's AC system ratings.
- 2. Be sure there is sufficient cable length to allow for normal movement between the boat and the dock.
- 3. Turn all AC panel switches (including the main) to the "OFF" position. Turn the circuit breaker at the dock outlet to "OFF".
- 4. Connect the dockside power cable at the boat inlet first.
- 5. Connect the dockside power cable at the dock outlet and turn the dock outlet circuit breaker to "ON".
- 6. Turn the main circuit breaker to the "ON" position.

#### NOTICE

If there is not any power at the AC panel after completing the above steps, check the in-line circuit breaker under the aft starboard gunwale.

This breaker protects the wiring between the cable inlet and the AC panel and must be in the "ON" position for the panel to receive power.

# AWARDING A SECTION OF THE SECTION OF

If the reverse polarity indicator on the AC panel is activated immediately disconnect the dockside power cable and have a qualified electrician correct the fault.

### DISCONNECTING THE DOCKSIDE POWER.

- 1. Switch all circuit breakers at the boat's AC panel "OFF".
- 2. Switch the circuit breaker "OFF" at the dock outlet.
- 3. Disconnect the dockside power cable at the dock outlet first.
- 4. Disconnect the dockside power cable at the boat inlet.

#### NOTICE

Keep inlet cover closed tightly when not in use.

#### AC PANEL

If your Sailfish is equipped with dockside power you will have an AC panel. Some AC powered switches are included with optional equipment and may not be found on your boat.

### AC POWERED AUXILIARY SWITCHES

Dockside power must be connected to shore and the circuit breaker located under the starboard decking must be in the "ON" position for these switches to operate. The AC panel-wiring diagram and a receptacle wiring schematic are provided at the end of this chapter.

#### MAIN POWER SWITCH

The main power switch must be in the "ON" position to operate the various accessory switches.

#### BATTERY CHARGER SWITCH

The battery charger has an ammeter for indicating the output to the batteries during operation.

#### WATER HEATER SWITCH

This switch activates your six-gallon water heater.

### A WARNING :

TO AVOID HEATING ELEMENT FAILURE DO NOT TURN ON THE HOT WATER HEATER UNLESS IT IS FILLED WITH WATER.

#### **MICROWAVE**

An outlet has been designated for microwave use only. Read all instructions in the microwave owner's manual before operation.

#### **OUTLETS SWITCH**

This switch provides power to the three electrical outlets. The head outlet located on the aft wall of the head compartment is a duplex ground fault receptacle and is equipped with a cover plate. The cabin and helm receptacles are wired in series with the head outlet and have ground fault protection.

#### **BATTERY CHARGER**

This optional component is located in the aft rigging compartment near the battery. For this charger to work the dockside power must be operating. Turning the breaker switch at the AC panel to the "ON" position activates the charger. At the point the battery is nearly fully charged, the charger will automatically reduce the current being sent to the battery to a maintenance level. For more information refer to the Operation Manual for the battery charger.

#### MICROWAVE

The dockside power must be connected for the microwave to function. Refer to the microwave owner's manual for specific instructions on the safe and proper use of the microwave.

#### WATER HEATER

The water heater will provide hot water to the mixer fixture in the pressurized fresh water system if the dockside power is connected and the AC breaker switch is "ON". Follow the Operation and Maintenance manual for the proper use and care of the water heater.

#### **OUTRIGGERS**

Outriggers allow you to spread the fishing lines trolled from your boat and decrease the chance of entanglement.

#### **ADVANTAGES**

Advantages of outriggers include: offering bait throughout a larger area behind the boat, placing bait out of the wake zone, automatic drop back following strikes (which allows for fish to completely accept bait) and a reduction in unnecessary twisting action characteristic of artificial bait.

#### INSTRUCTIONS

For installation and use of your outriggers reference the instruction sheet in your "Owner's Packet".

#### CARE AND MAINTENANCE

Outriggers should be washed with fresh water, mild soap and a soft cloth. Never use acidic cleaners on the outriggers.

A periodic waxing is suggested if the outriggers are frequently exposed to salt water. The wax will provide a protective coating and seal the pores of the metal. A non-abrasive high quality marine or automotive wax is recommended. Clean and wax your outriggers before storage.

During assembly grease all threads, bolts and tubes where one section is inserted into another. Disassemble and re-grease all applicable surfaces on an annual basis.

#### **HEAD OPERATING INSTRUCTIONS**

#### MARINE HEADS

#### HAND PUMP MARINE HEAD OPERATION

- 1. Open the marine head inlet seacock (handle in the vertical position). This seacock is located under the access plate in the head floor on the starboard side of the keel.
- 2. Position the wet/dry bowl selector in the wet bowl setting. Fill the toilet with water by pumping the handle several times.
- 3. **Flush** the toilet by pumping the handle several more times in the wet bowl position.
- 4. Move the bowl selector to the dry bowl position and pump the handle until almost all of the water is removed. Leave the toilet in the dry bowl position when not in use.

#### **ELECTRIC MARINE HEAD OPERATION**

- 1. Open the marine head inlet seacock (handle in the vertical position). This seacock is located under the access plate in the head floor on the starboard side of the keel.
- 2. **Flush** the toilet by turning the flush control knob clockwise on the pump beside the bowl. Turn the flush control knob counter clockwise to remove most of the water from the bowl.

### EMPTYING MARINE HEAD HOLDING TANK BY USE OF OVERBOARD DISCHARGE


- 1. Open the marine head discharge seacock (handle in the vertical position). This seacock is located under the access plate in the head floor on the port side of the keel.
- 2. Turn the monitor "ON" at the control panel.
- 3. Press the discharge button until the light on the control panel indicates the tank is empty.
- 4. Turn the monitor "OFF" and close the discharge seacock (handle in the horizontal position).

#### ♠ CAUTION

Overboard discharge seacock must be sealed and secured in the closed position in accordance with the laws in your boating area.


# EMPTYING MARINE HEAD HOLDING TANK THROUGH DECK PUMP-OUT

- 1. Remove the cap from the deck pump-out fitting located in the starboard walkaround.
- 2. Connect a vacuum hose from a pump-out station to the deck fitting and run until the tank is empty. Replace the cap on the deck pump-out fitting.

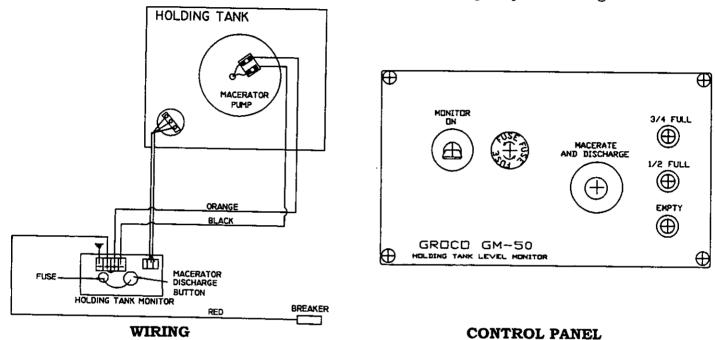


Reference the Marine Head Layout diagram at the end of this chapter.


### AC INLET AND RECEPTACLE WIRING SCHEMATIC AND WARNING LABEL

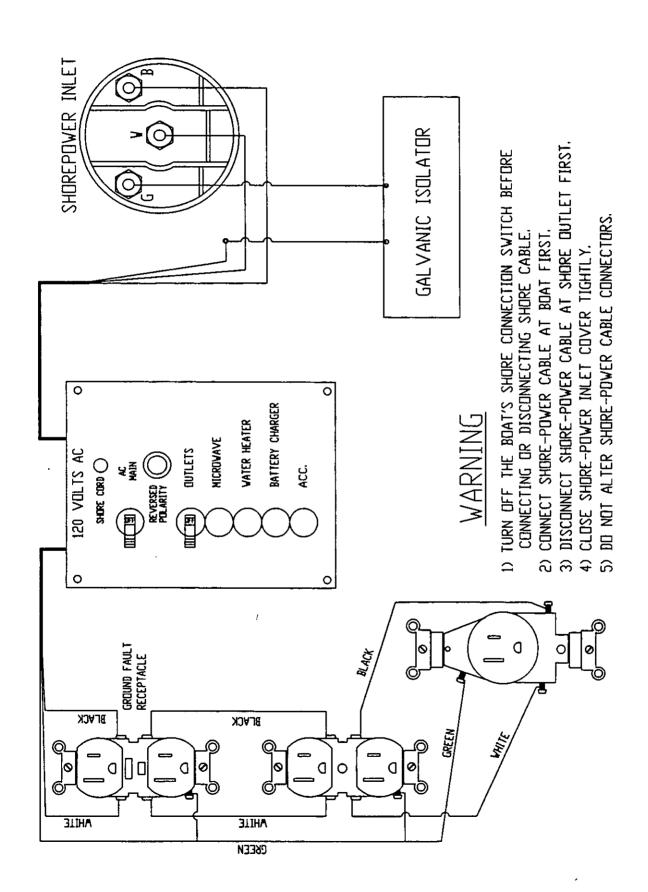


#### **AC PANEL WIRING**

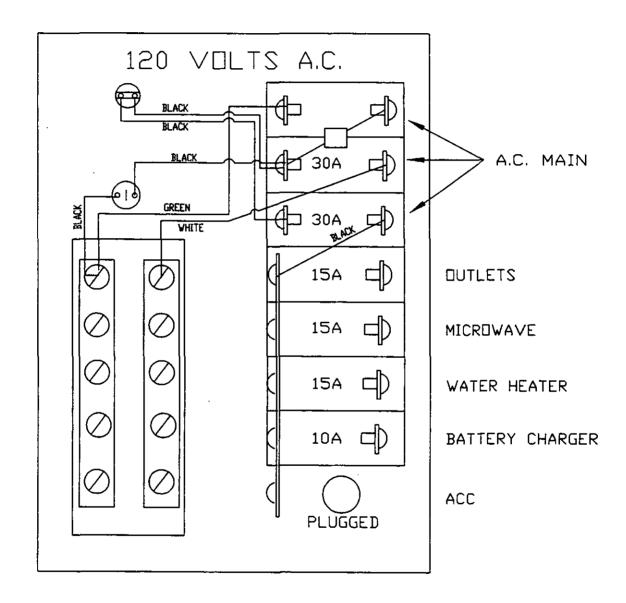


274 SAILFISH
ACCESS PLATE AND RIGGING TUBE LOCATION

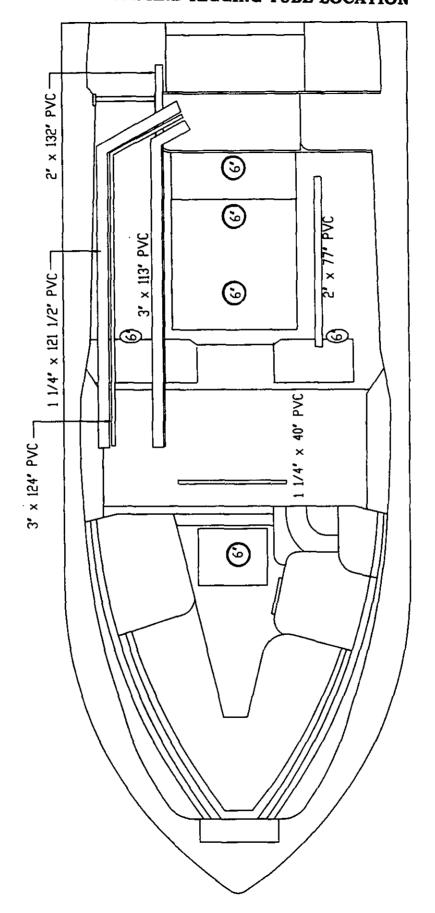


### **ACCESSORY WIRING**

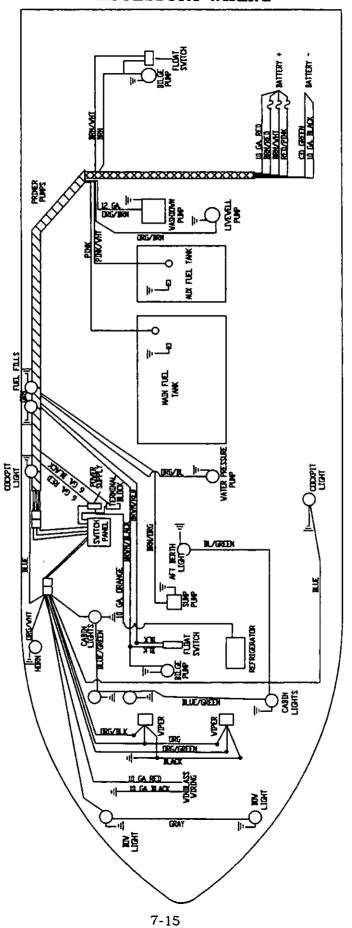


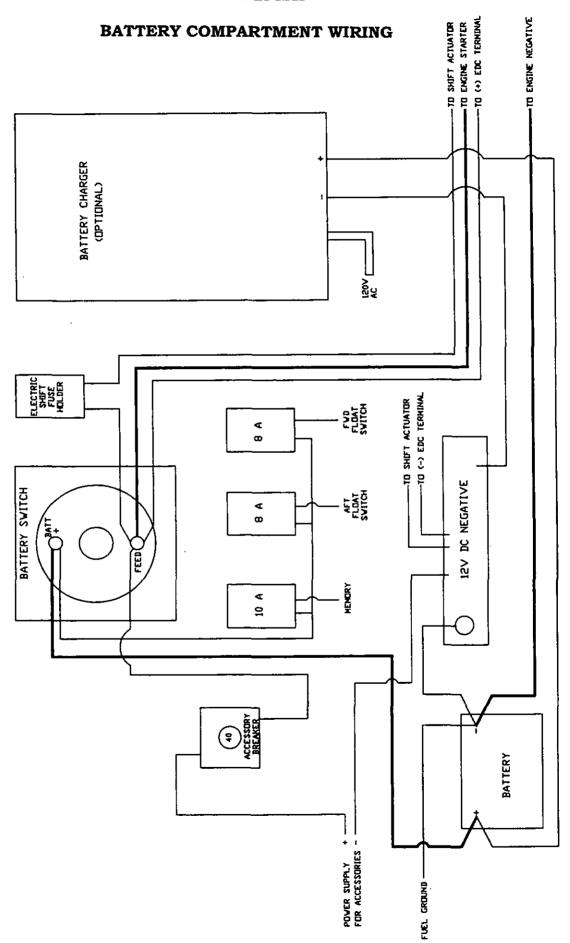


### **DOCKSIDE POWER WIRING**

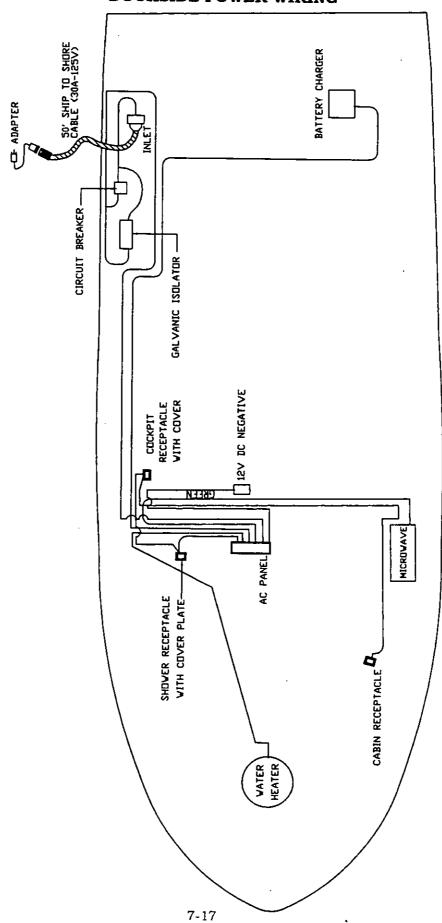


### HARDTOP WIRING

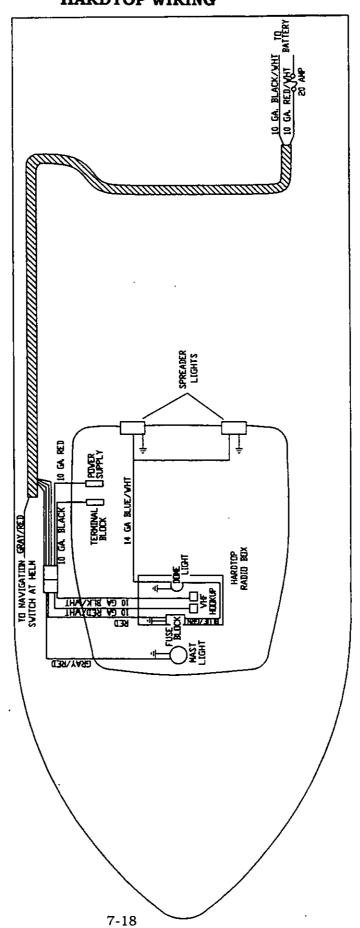


# **HEAD LAYOUT - MARINE**

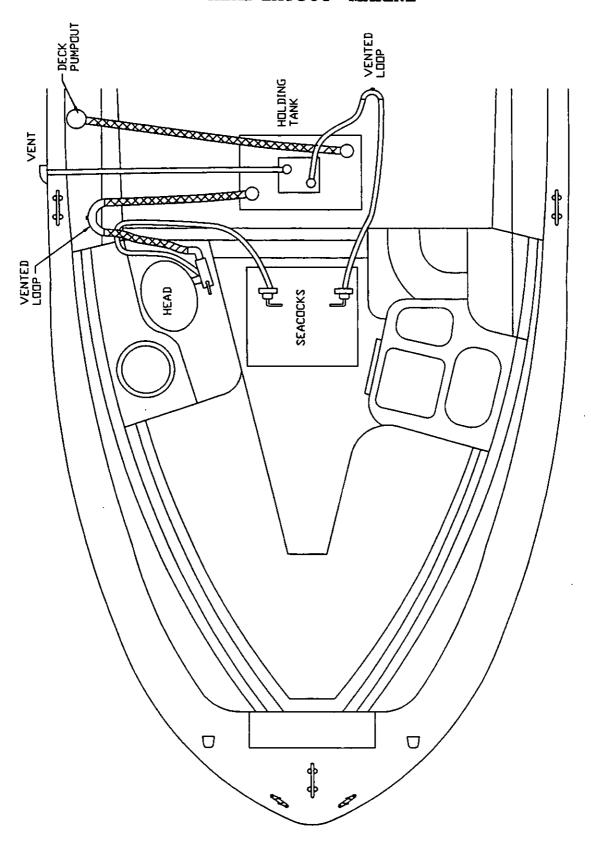


#### LABELS AND LOCATION

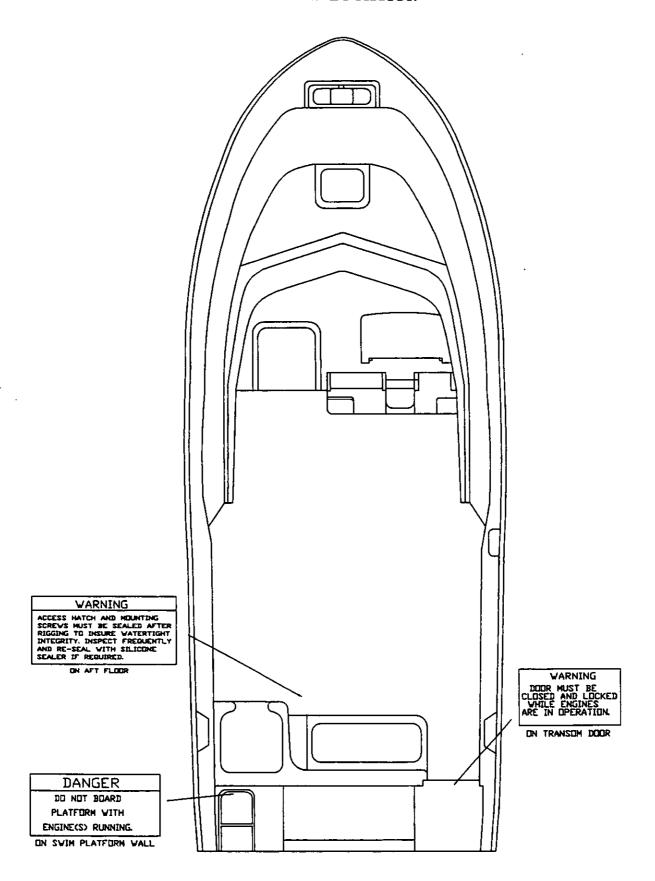


## LIVEWELL SYSTEM LAYOUT

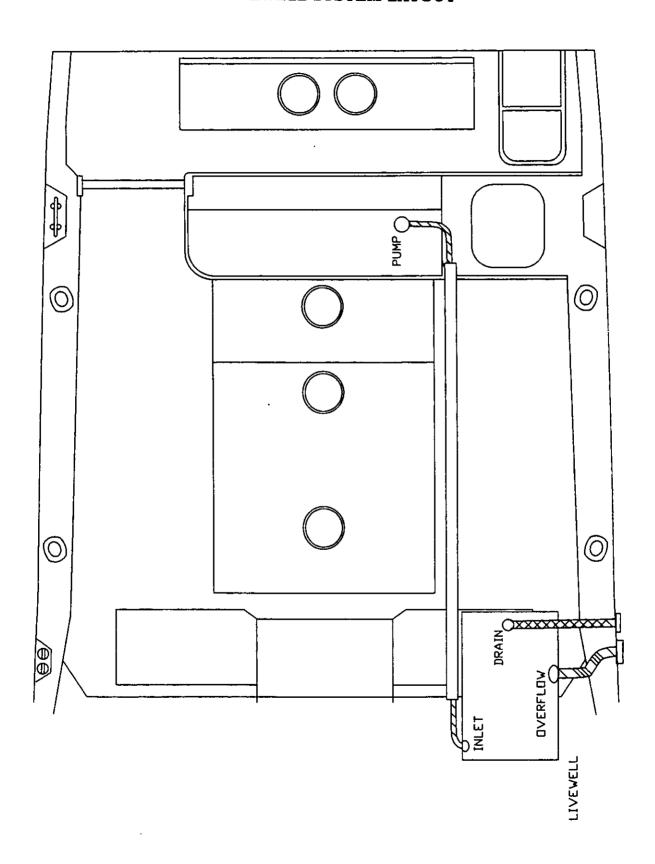

### LIVEWELL/WASHDOWN SYSTEM

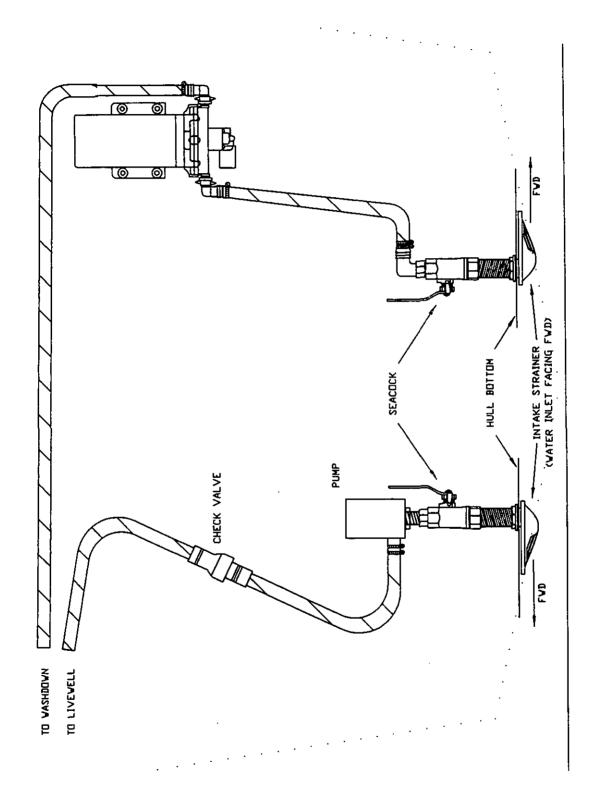

274 SAILFISH
PRESSURIZED SHOWER/HOT WATER SYSTEM

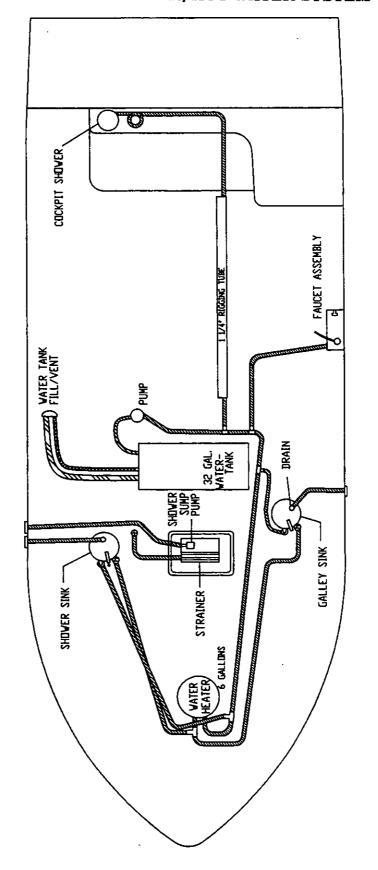

#### THRU HULL DETAIL

#### T-HULL DESCRIPTION

- A SINK/OPT, CABIN SHOWER
- B ICEBOX
- C FISHBOX DRAIN
- D AFT BILGE
- E LIVEWELL OVERFLOW
- F SCUPPER
- G SCUPPER
- H OPTIONAL HEAD VENT
- I FWD BILGE
- J OPTIONAL AIR CONDITION
- K FISHBOX
- L SINK

